

**Dorena Hydro LLC**  
**Dorena Hydro Project Engineering and Consultancy Services**  
**Dorena Kaplan Unit Index Testing Final Report**



2017-06-09	0	Approved for Use	D. Pinese	P. Rodrigue	S. Hart	-
<b>Date</b>	<b>Rev.</b>	<b>Status</b>	<b>Prepared By</b>	<b>Checked By</b>	<b>Approved By</b>	<b>Approved By</b>
<b>HATCH</b>						<b>Client</b>

## Table of Contents

<b>Disclaimer .....</b>	
<b>1. Introduction .....</b>	<b>1</b>
<b>2. Testing Procedures .....</b>	<b>1</b>
2.1 Load Rejection Testing .....	1
2.2 Index Testing .....	2
<b>3. Load Rejection Testing Results – Kaplan Unit .....</b>	<b>3</b>
<b>4. Index Testing Results – Kaplan Unit .....</b>	<b>5</b>
4.1 Test Instrumentation .....	5
4.2 Site Calibration .....	5
4.3 Discussion and Analysis .....	6
<b>5. General Site Observations .....</b>	<b>7</b>
<b>6. Conclusions and Recommendations .....</b>	<b>8</b>
6.1 Load Rejection Testing .....	8
6.2 Index Testing .....	8

## Disclaimer

This report was prepared by Hatch Associates Consultants, Inc. ("Hatch"), for the sole and exclusive benefit of Dorena Hydro LLC (the "Client") for the purpose of providing the Kaplan Unit Index Testing Report (the "Report") for the Dorena Hydroelectric Project (the "Project" or "Asset").

Any use of this report by the Client is subject to the terms and conditions of the Agreement between Hatch and the Client dated May 10, 2017, including the limitation on liability set out therein.

Notwithstanding the foregoing, it is a condition precedent for anyone that wishes to receive a copy of the Hatch Report that they must sign and deliver to Hatch a copy of the "Undertaking Respecting Limitation of Liability Letter" in the form provided and all such parties shall (by virtue of their signing the "Undertaking Letter") be deemed to have agreed to:

- (a) its use of, and reliance upon, the Report is subject to any limitations or restrictions on use set out in the Report, including the disclaimer included at the front of the Report;
- (b) it is bound by the limitations and exclusions on liability set out in the Services Agreement between Hatch and Client

This report shall not otherwise be provided to, used by or relied upon by any third parties.

This report is meant to be read as a whole, and sections should not be read or relied upon out of context. The report includes information provided by Client and by certain other parties on behalf of Client. Unless specifically stated otherwise, Hatch has not verified the accuracy or completeness of such information and disclaims any responsibility or liability in connection with such information.

## 1. Introduction

The ownership group, Fiera Infrastructure (“Fiera”), of the Dorena Hydroelectric Project (the “Project”) engaged Hatch Ltd. (“Hatch”) to complete load rejection and index testing on the Kaplan Unit at the Dorena Powerhouse. The Project has been in operation for the past few years, but has not been able to operate at high reservoir levels due to prevailing drought conditions. The spring of 2017 has provided enough water to raise the reservoir to normal maximum operating level, and load rejection and index testing of the Kaplan Unit were performed from May 15 -17, 2017.

The load rejection testing confirms the Kaplan Unit robustness under all operating conditions. The index testing of the highest Dorena reservoir level has helped to determine the optimal on-cam blade settings of the Kaplan Unit for achieving optimal efficiency levels for increased generation.

A senior mechanical engineer from Hatch (D. Pinese) and a Dorena generating station operator (W. Teuscher) completed the testing.

This report presents the results of the load rejection and index testing of the Dorena Kaplan Unit and provides recommendations for further actions.

## 2. Testing Procedures

The procedures for the load rejection and index testing are presented in the following sections. The index testing was for the maximum prevailing operating head and supplements the testing previously performed by Others at three lower operating heads.

### 2.1 Load Rejection Testing

The following procedure summary shows the major steps that were executed on May 15, 2017 during the load rejection testing of the Dorena Kaplan Unit. A more detailed procedure was used during the actual testing.

1. Before starting the tests, Hatch and operations personnel discussed and agreed upon the testing plan.
2. US Army Corps of Engineers (“USACE”) was informed of the intention to complete the load rejection tests.
3. The Kaplan Unit was started and the flow was set to 25%. Note that the Francis Unit was not in operation during the testing and the Francis Unit Turbine Shutdown Valve (“TSV”) was closed.
4. Once stabilized the following turbine parameters were recorded:
  - ◆ Generator output (MW);
  - ◆ Unit flow (cfs);
  - ◆ Wicket gate opening (%);
  - ◆ Blade position (%);

- ◆ Reservoir water level (ft.);
  - ◆ Tailwater level (ft.);
  - ◆ Unit rotational speed (rpm); and
  - ◆ Unit power factor.
5. The unit was then tripped off and the following parameters were recorded:
- ◆ Peak penstock pressure (psi); and
  - ◆ Peak unit rotational speed (rpm).
6. Once the unit was shutdown the following parameters were recorded to note the static conditions:
- ◆ Penstock pressure (psi);
  - ◆ Reservoir water level (ft.); and
  - ◆ Tailwater level (ft.).
7. Steps 4, 5, and 6 were repeated for flows of 50%, 75%, and 100% of the rated flow.
8. Once testing was completed that station resumed normal operations.
9. Test data was copied from the plant historian for further analysis.

## 2.2 Index Testing

The following high-level procedure shows the major steps that were executed on May 16-17, 2017 during the index testing of the Dorena Kaplan Unit. A more detailed procedure was used during the actual testing.

1. Before starting the tests, Hatch and operations personnel discussed and agreed upon the testing plan.
2. USACE was informed of the intention to complete the index tests.
3. The Kaplan Unit was shutdown and the TSV was closed. Note that the Francis Unit was shutdown and the TSV for the Francis Unit was closed during index testing of the Kaplan Unit.
4. On the turbine pit level, the elevation of the turbine pressure transducer was measured using a tape measure from a known survey point and any entrained air was bled out of the piping by opening the bleed-off valve.
5. The tailwater level, the reservoir water level, and the penstock pressure were recorded when there was no flow through the penstock (static conditions).
6. The Kaplan Unit was started in 'automatic' control and the flow was increased to approximately 20%, 40%, 60%, 80%, 90%, and 100% of the rated flow. At each flow point, the unit was allowed to stabilize and the following data was recorded for the on-cam conditions:

- ◆ Generator output (MW);
  - ◆ Unit flow (cfs);
  - ◆ Wicket gate opening (%);
  - ◆ Blade position (%);
  - ◆ Reservoir water level (ft.);
  - ◆ Tailwater level (ft.);
  - ◆ Turbine pressure (psi); and
  - ◆ Unit power factor.
7. Using the data gathered in Step 6, the nominal flows at various blade positions were determined. The blade positions of interest were 0%, 15%, 30%, 45%, 55%, 60%, and 65%.
  8. The blades at each position were fixed in place and the determined nominal flows (from Step 7) were adjusted through a range above and below the determined nominal flow values. The range varied from -15% to -10% on the lower side and +1% to +15% on the higher side.
  9. Four data points were gathered at each point above and below the nominal flow value. An average of the four data points was determined and used in the analysis.
  10. Upon completion of the data collection the unit was shut down in a controlled manner. The reservoir and tailwater levels were recorded under static conditions.
  11. Manual measurements of the tailwater level were taken to check the calibration of the tailwater level sensor.
  12. Once testing was completed, the USACE was informed that the index testing was completed and normal station operations were resumed.
  13. Test data was copied from the plant historian for further analysis.

### 3. Load Rejection Testing Results – Kaplan Unit

The objective of the load rejection tests was to confirm the robustness of the unit. This is completed by testing how the unit reacted to a forced shut down at incremental percentages of the rated flow. The reaction of the unit is measured by the peak rotational speed and the peak turbine inlet pressure that is measured shortly after the unit is tripped. Table 3-1 shows the peak speed and peak turbine inlet pressures during the various load rejection tests. Note that, as per the unit nameplate, the maximum power is 6.1 MW and the maximum runaway speed is 971 rpm. The turbine nameplate is shown in Figure 3-1.

**Table 3-1: Load Rejection Tests Summary**

Test (% of maximum flow)	Unit Flow (cfs)	Pre-Trip Rotational Speed (rpm)	Pre-Trip Penstock Pressure (psi)	Peak Rotational Speed (rpm)	Peak Turbine Inlet Pressure (psi)
31%	253	360	41.8	368	43.4
50%	406	360	41.4	461	48.3
75%	610	360	40.6	446	55.1
100%	811	360	39.5	470	56.0



**Figure 3-1: Kaplan Unit Turbine Name Plate**

The data gathered during the load rejection testing shows the anticipated increases in turbine inlet pressure and unit rotational speed soon after the unit was tripped. Intuitively, the peak rotational speed and the peak turbine inlet pressure should increase as the flow increases. This means that it is expected that the peak rotational speed and peak turbine inlet pressure would increase from 31% to 50%, 50% to 75%, and 75% to 100% (i.e.: each value would be greater than the value of the previous test). However, as can be seen from the above data at 50% and 75% of rated flow, the turbine inlet pressure

continually increased as the flow increased, but the speed decreased from the 50% to 75% flows. An explanation for the rotational speed not increasing as expected is that at the higher flows the Kaplan blades are pitched to provide the necessary rotational speed during normal operation. The reduced overspeed is due to the steep blade positions. Maximum level of overspeed on load rejection is dependent on the runaway speed at a particular blade position and the time needed to close the wicket gates.

The Kaplan Unit at Dorena does not typically operate at low flows. For this reason, the first load rejection test was completed at 31% of rated maximum flow and not the planned 25%. The smaller Francis Unit at Dorena typically operates at the lower penstock flows. This change does not have any impact on the conclusions drawn from the load rejection tests.

Upon data analysis, it can be concluded that the Kaplan Unit reacted positively to the various load rejection tests and that the unit is robust in design to handle the peak pressure and rotational speed parameters generated after a full flow load rejection. Maximum penstock pressure rise is approximately 30% of gross head, which is not unusual, and as expected the maximum speed rise is 31%, which is not high and well below the (off-cam) runaway speed of the unit.

## **4. Index Testing Results – Kaplan Unit**

### **4.1 Test Instrumentation**

Unit index and performance testing relies on instrumentation to provide the necessary pressures and water levels that are required to calculate the necessary turbine efficiency values. Each of the instruments has an inherent uncertainty in the measurement it provides. Note that an uncertainty analysis was not completed as part of this testing, but the data gathered could be used to prepare an uncertainty analysis if deemed required.

The following instruments were used during the index testing.

- Reservoir water level sensor;
- Tailwater level sensor;
- Turbine inlet pressure sensor (see Appendix A for Vendor Data Sheet); and
- Penstock flow meter (see Appendix A for Vendor Data Sheet).

To calculate the results, certain dimensions were determined using site measurements and the available drawings. The cross sectional area of the tailrace in the vicinity of the tailwater level sensor and the cross sectional area of the turbine inlet were estimated from the design drawings since they could not be physically measured on site during testing. For the purpose of the test and subsequent analysis, the values used are considered adequate and a more accurate measurement will not affect the overall results.

### **4.2 Site Calibration**

Operations staff mentioned prior to testing that the station instrumentation had not been calibrated since the initial installation. Calibration checks on some of the site

instrumentation was not possible during the index testing and for these instruments it was assumed that their readings were generally accurate.

The inlet pressure sensor was checked by comparing the sensor reading with the reservoir level under zero flow. The surveyed sensor elevation on the turbine level plus the sensor pressure reading (converted to feet of water column) was compared to the reservoir level reading. Once calculated the sensor had a 0.14 feet discrepancy and this was deemed to be acceptable.


The tailwater elevation sensor was checked during index testing. This was completed by recording the water level that the sensor was reading in the control room and comparing this reading with a physical measurement. In this case, the physical measurement was made at the top of the water elevation adjacent to the tailwater level sensor to a known elevation (i.e.: top of the adjacent concrete pier). Comparing the physical measurement to the measurement being recorded by the sensor showed a 0.01 ft. discrepancy and thus the sensor level readings were deemed to be accurate.

### **4.3 Discussion and Analysis**

The objective of the index testing is to determine the optimum on-cam turbine blade settings to ensure that the turbine is operating at maximum efficiency and the power generated is maximized for a given flow.

To meet the objective of the index testing, specific blade positions are fixed during the test runs and the unit flow is adjusted above and below a nominal flow value to determine the optimum blade position for a particular unit flow. In an optimized condition, the peaks of the various blade positions are tangent to the on-cam curve.

Figure 4-1 shows the Turbine Efficiency vs. Flow for the Dorena Kaplan Unit.

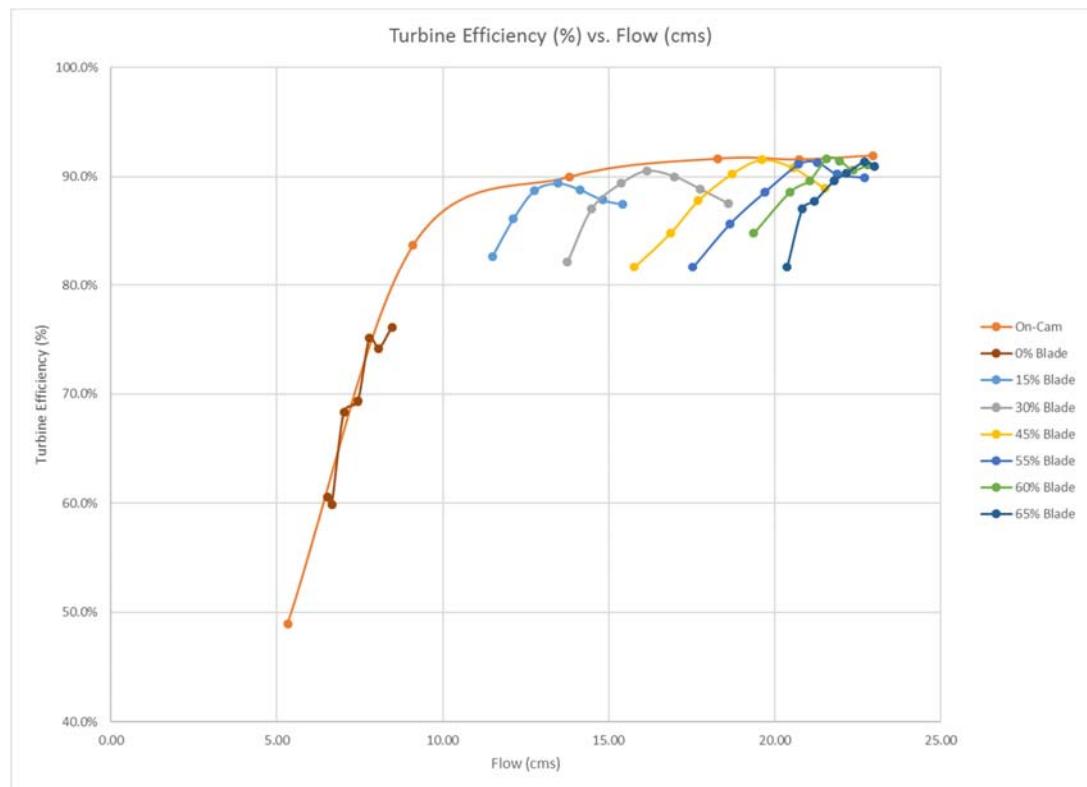

**Figure 4-1: Kaplan Unit Turbine Efficiency vs. Flow**

Distinct peaks at each blade position are shown in Figure 4-1. The orange line is the pre-test on-cam curve and it represents the pre-test setup of the turbine blades relative to the unit flow. Any adjustments to the unit settings should endeavor to adjust the on-cam curve to be tangent to the peaks of each blade setting.

The pre-test on-cam curve is close to being set to optimal as the curve is close to the peaks at the various blade settings. Using the recorded data, slight adjustments can still be made to ensure that the turbine blades are at optimal positions at the corresponding flows. These changes would have to be programmed into the unit controls.

Numerous other plots were created as part of the index testing and are available in Appendix B. Overall, the results appeared to be normal and no notable anomalies were observed.

## 5. General Site Observations

The list below includes general observations made during the index testing of the Kaplan Unit at the Dorena Generating Station.

- The maximum permitted flow that is allowed to be diverted into the penstock is 812 ft<sup>3</sup>/s (22.99 m<sup>3</sup>/s) – this maximum flow is not to be exceeded

- The Kaplan turbine nameplate states that the maximum unit output is 6.1 MW at 812 ft<sup>3</sup>/s and 30.1 m net head, however, the maximum output achieved at full flow (~812 ft<sup>3</sup>/s) was approximately 5.6 MW at 28.6 m of operating net head.
- The blades of the Kaplan Unit begin to open at approximately 350 ft<sup>3</sup>/s unit flow.
- Reservoir level is controlled by the USACE staff that operate the outlet gates at Dorena Dam.
- Maximum normal reservoir level is 832.0 ft.
- If reservoir level is rising above El. 832.0, as occurred during the Kaplan Unit index testing, the USACE is notified and the outlet gates are opened to lower the reservoir level.

## **6. Conclusions and Recommendations**

### **6.1 Load Rejection Testing**

It can be concluded that the Kaplan Unit at the Dorena Generating Station is a robust design and that it behaved positively and as expected when load rejection tests were performed at 31%, 50%, 75%, and 100% of rated maximum flow. Immediately following the load rejections, the peak penstock pressures and peak unit rotational speed were within acceptable limits.

### **6.2 Index Testing**

The results of the index testing of the Kaplan Unit showed that the pre-test on-cam blade positions were at the near optimal settings. However, there is an opportunity to further optimize the blade positions with respect to unit flows as per the data collected. To optimize the unit and ensure maximum generation, it is recommended to slightly adjust the blade settings with respect to the unit flows. Changes to the blade settings would be incorporated into the plant control system.

The index testing performed under normal maximum operating head level for the Kaplan Unit was not performed with calibration of the instruments and provides consistency with previous testing performed for three different operating head levels of 48 feet, 69 feet and 85 feet on separate days occurring on January 14, March 21, and May 23, 2016.

For performance testing at maximum operating head (see Appendix B Figure B.1) the turbine efficiency at maximum output was about 92.4 percent and at 50 percent output, the turbine efficiency was shown to be about 89.9 percent. Corresponding performance guarantees (see Hatch Table 5.1 in its July 2016 IE report) was approximately 93.6% and 92.3%, respectively at 100% and 50% output.

During performance testing there is a level of instrumentation uncertainty (typically 2-3%) that is accounted for when comparing the test results to the guaranteed values. Previous testing results at lower operating heads indicated that the measured efficiency was approximately 2 percent lower than guaranteed levels. As with the testing performed at the lower operating heads, no calibration of the testing equipment was made for the index testing performed at this highest operating level. Therefore, based on the results

presented, we would conclude that the turbine supplier has likely achieved its performance guarantee as the results would fall within the 2-3% error measurement level tolerance band.

# **Appendix A – Instrumentation Vendor Data Sheets**

## 2200 Series / 2600 Series – General Purpose Industrial Pressure Transducers

- ▶ Gauge, Absolute, Vacuum and Compound Pressure Models Available
- ▶ Submersible, General Purpose and Wash Down Enclosures
- ▶ High Stability Achieved by CVD Sensing Element
- ▶ Millivolt, Voltage and Current Output Models

The 2200 series features stability and accuracy in a variety of enclosure options. The 2600 series extends the packaging options via an all welded stainless steel back end for demanding submersible and industrial applications. The 2200 and the 2600 feature proven CVD sensing technology, an ASIC (amplified units), and modular packaging to provide a sensor line that can easily accommodate specials while not sacrificing high performance.

### Specifications

<b>Input</b>	
<b>Pressure Range</b>	Vacuum to 6000 psi (400 bar)
<b>Proof Pressure</b>	2 x Full Scale (FS) (1.5 x Fs for 400 bar, ≥ 5000 psi)
<b>Burst Pressure</b>	>35 x FS ≤ 100 psi (6 bar); >20 x FS ≥ 1000 psi (60 bar); >5 x FS ≤ 6000 psi (400 bar)
<b>Fatigue Life</b>	Designed for more than 100 million FS cycles
<b>Performance</b>	
<b>Long Term Drift</b>	0.2% FS/year (non-cumulative)
<b>Accuracy</b>	0.25 % FS typical (optional 0.15% FS)
<b>Thermal Error</b>	1.5% FS typical (optional 1% FS)
<b>Compensated Temperatures</b>	-5°F to +180°F (-20°C to +80°C)
<b>Operating Temperatures</b>	-40°F to +260°F (-40°C to +125°C) for elec. codes A, B, C, 1 -5°F to +180°F (-20°C to +80°C) for elec. codes 2, D, G, 3 -5°F to +125°F (-20°C to +50°C) for elec. codes F, M, P Amplified units >100°C maximum 24 VDC supply
<b>Zero Tolerance</b>	1% of span
<b>Span Tolerance</b>	1% of span
<b>Response Time</b>	0.5 ms
<b>Mechanical Configuration</b>	
<b>Pressure Port</b>	See ordering chart
<b>Wetted Parts</b>	17-4 PH Stainless Steel
<b>Electrical Connection</b>	See ordering chart
<b>Enclosure</b>	316 ss, 17-4 PH ss IP65 NEMA 4 for elec. codes A, B, C, D, G, 1, 2, 3 IP67 for elec. code "F" IP68 for elec. codes M, (max depth 200 meters H <sub>2</sub> O) IP30 for elec. code "3" with flying leads
<b>Vibration</b>	70g, peak to peak sinusoidal, 5 to 2000 Hz (Random Vibration: 20 to 2000 Hz @ ≈20g Peak per MIL-STD.-810E Method 514.4)
<b>Acceleration</b>	100g steady acceleration in any direction 0.032% FS/g for 15 psi (1 bar) range decreasing logarithmically to 0.0007% FS/g for 6000 psi (400 bar) range.
<b>Shock</b>	20g, 11 ms, per MIL-STD.-810E Method 516.4 Procedure I
<b>Approvals</b>	CE, UR (22IC, 26IC, 22CS, 26CS)
<b>Weight</b>	Approx. 100 grams (additional cable; 75 g/m)

Series 2200



Series 2600



## Individual Specifications

<b>Millivolt Output units</b>	
Output	100 mV (10 mv/v)
Supply Voltage (Vs)	10 VDC (15 VDC max.) Regulated
Bridge resistance	2600-6000 ohms
<b>Voltage Output units</b>	
Output	see ordering chart
Supply Voltage (Vs)	1.5 VDC above span to 35 VDC @ 6 mA
Supply Voltage Sensitivity	0.01% FS/Volt
Min. Load Resistance	(FS output / 2) Kohms
Current Consumption	approx 6 mA at 7.5V output
<b>Current Output units</b>	
Output	4-20 mA (2 wire)
Supply Voltage (Vs)	24 VDC, (7-35 VDC)
Supply Voltage Sensitivity	0.01% FS/Volt
Max. Loop Resistance	(Vs-7) x 50 ohms

## Electromagnetic Capability

Meets the requirement for CE marking of EN50081-2 for emissions and EN50082-2 for susceptibility.


### Test Data:

- EN61000-4-2 Electrostatic Discharge. 8kV air discharge, 4kV contact discharge. Unit survived.
- ENV50140 Radiated RF Susceptibility. 10V/m, 80MHz-1GHz, 1kHz mod. Maximum recorded output error was  $<\pm 1\%$
- ENV50204 Radiated RF Susceptibility to Mobile Telephones. 10V/m, 900MHz. Maximum recorded output error was  $<\pm 1\%$ .
- EN61000-4-4 Fast Burst Transient. 2kV, 5/50ns, 5kHz for 1 minute. Unit survived.
- ENV50141 Conducted RF Susceptibility. 10Vms, 1kHz mod, 150kHz - 80MHz. Maximum recorded output error was  $<\pm 1\%$

Connection Code		mV units				Voltage units				Current units (4-20mA)		
		IN+	OUT+	OUT-	IN-	IN+	COM	OUT+	EARTH	(+)	(-)	EARTH
A, B, G	"DIN" PIN	1	2	3	E	1	2	3	4	1	2	4
C	"10-6 Bayonet" PIN	A	B	C	D	A	C	B	E	A	B	E
D	"cable"	R	Y	BL	G	R	BK	W	DRAIN	R	BK	DRAIN
F	"IP 67 cable"	R	Y	BL	G	R	BK	W	DRAIN	R	BK	DRAIN
M	"Immersible"	R	Y	BL	W	R	W	Y	DRAIN	R	BL	DRAIN
1	"8-4 Bayonet" PIN	A	B	C	D	A	C	B	D	A	B	D
2	"cable"	R	W	G	BK	R	BK	W	DRAIN	R	BK	DRAIN
3	"conduit & cable"	R	W	G	BK	R	BK	W	DRAIN	R	BK	DRAIN


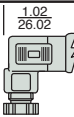
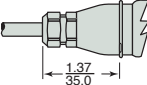
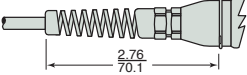
### Cable Legend:


R = Red  
 BL = Blue  
 BK = Black  
 W = White  
 Y = Yellow

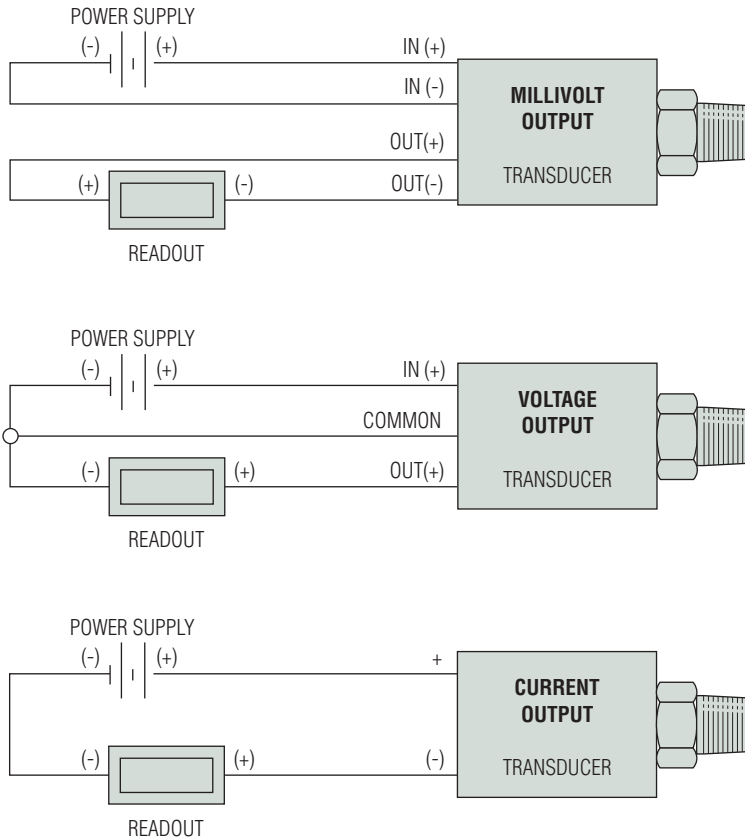

 
 
 
 
 
 
 

 
 
## Dimensions

### 2200 Series

 




<b>Mini 4 Pin - No Connector</b>
<b>Code B</b> 
<b>Mini 4 Pin - With Connector</b>
<b>Code A</b>  1.02 26.02
<b>IP67 Cable (Waterproof)</b>
<b>Code F</b>  1.37 35.0
24 AWG Shielded PVC
<b>IP65 or NEMA4 Cable</b>
<b>Code D or 2</b>  2.76 70.1
24 AWG Shielded PVC

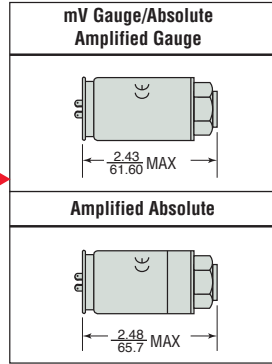


Maximum diameter 1.07" (27.3 mm)



<b>1/8-27 NPT</b>
<b>Code 08</b>  0.59 15
<b>1/4 - 18 NPT</b>
<b>Code 02 with snubber</b>  0.79 20
<b>Code OJ with snubber</b> 
<b>1/4-18 NPT Internal</b>
<b>Code 0E</b>  0.95 24
<b>1/2-14 NPT</b>
<b>Code 0H</b>  1.02 26.0
<b>7/16-20 UNF-2A</b>
<b>Code 04</b>  0.75 19
<b>9/16-18 UNF-2A</b>
<b>Code 1P</b>  0.67 17
<b>G 1/8 Internal</b>
<b>Code 09</b> 
<b>G 1/4 External</b>
<b>Code 01</b>  0.67 17
<b>R 1/4</b>
<b>Code 0A</b>  0.79 20

### 2600 Series
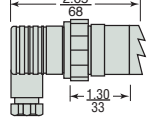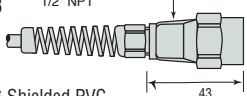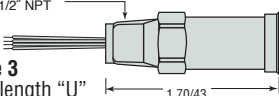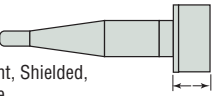
<b>10-6 or 8-4 Mil-C Connector</b>
<b>10-6 Code C</b>  0.87 22
<b>8-4 Code 1</b>
<b>Large DIN 43650 Plug</b>
<b>Code G</b>  2.65 68 1.30 33
<b>Conduit Connector with Cable</b>
<b>Code 3</b> 1/2" NPT  43 1.70
24 AWG Shielded PVC
<b>Conduit Connector with Flying Leads</b>
<b>Code 3</b> 1/2" NPT with length "U"  1.70/43
<b>Moulded, Immersible Cable</b>
<b>Code M</b> 24 AWG, Vent, Shielded, Polyurethane  0.90 23

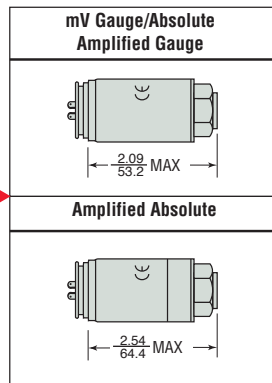

Maximum diameter 1.07" (27.3 mm)
 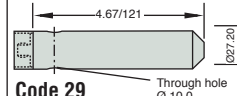
<b>Nose Cone - Black Acetal</b>
<b>Code 19</b>  0.75 19
<b>Nose Cone Sink Weight</b>
<b>Code 29</b>  4.67/121 0.87/20 Through hole Ø 10.0

inch  
mm





**7510+ Series Flowmeter  
Technical Reference Manual**

Accusonic Technologies  
28 Patterson Brook Road  
W. Wareham, MA 02576

Telephone: +1 508-273-9600  
Fax: +1 508-273-9699

# Table of Contents

<b>Chapter 1</b>	<b>1</b>
<b>Flowmeter Description</b>	<b>1</b>
<b>Chapter 2</b>	<b>1</b>
<b>General Specifications</b>	<b>1</b>
Transducers	1
Electronic Unit	1
Transducer Cable	2
Hand-held Terminal	2
Conformity with EMC and Safety Standards	2
FCC Compliance	3
Part 68	3
Interface Specifications	5
Interface Specifications	5
Analog Level input	5
Level Arbitration	5
Analog Outputs	5
Relay Outputs	6
Data Display on Hand-held Terminal	6
Parameter Insertion and Reading, Hand-held Terminal	7
Connection of a PC in place of Hand-held Terminal	7
Connection of a PC for use with “AccuFlow” 7510+ Interface	8
Optional High Speed Modem	8
Integral Data Logger	8
<b>Chapter 3</b>	<b>1</b>
<b>Flow Computation</b>	<b>1</b>
Flow Computation Algorithms	2
In “Compound” Mode	2
In Manning mode	2
In Non-surcharged Single Path Trapezoidal Integration Mode	2
In Non-surcharged Multi-Path Trapezoidal Integration Mode	3
Alternative Crossed Path Configuration in Open Channels	4
In Surcharged Mode	4
Surcharged Trapezoidal Integration	4
In “Pipe” Mode	5
Volume Calculation	5
Water Temperature Calculation	6
<b>Chapter 4</b>	<b>1</b>
<b>Unpacking and Installation</b>	<b>1</b>
Physical Installation	1
Electrical Installation	1
Power Wiring	2
Transducer Wiring	4
Transducer and Cabling Checkout	5
Connecting Transducer Cabling	5
Connecting the Analog Level Sensors	7
Connecting the Analog Outputs	9
Connecting to the Relay Outputs	9
Connecting the Hand-held Terminal	9

## Table of Contents

Connecting a PC	10
Connecting a Modem	10
<b>Chapter 5</b>	<b>I</b>
<b>Initial Setup, General Operations</b>	<b>1</b>
Hand-held Terminal, Parameters and Variables	1
Menus	1
Stepping through menus	1
Other key operations	2
Parameter Data Entry	5
Typical Parameter List	6
Typical Parameter List	6
Display of Variables	8
Display of Variables	8
Serial Data Formats on Optional RS232 Communication Port 3	11
Display of Variables on the Optional LCD	11
Operation of Integral Data Logging	12
<b>Chapter 6</b>	<b>I</b>
<b>“AccuFlow” Windows Interface</b>	<b>1</b>
Application Overview	1
Wizard Interface	1
Receive Parameters from Flowmeter	1
Send Parameters to Flowmeter	1
Setup Wizard	1
Open Setup	4
Review Historical Data	4
Connect / Measure	4
File Menu	5
File / New	5
File / Open	5
File / Save	5
File / Print	5
File / Exit	5
Configure Menu	5
Communications	5
Dial Modem	6
Hang Up Modem	6
Get Flowmeter Version	6
System	6
Section	6
Analog Outputs	6
Relay Setup	6
Operate Menu	6
Diagnostics Menu	7
Comm Port Test	7
Path Variables	7
Scope Mode	9
Flowmeter Reset	10
DataLogging Menu	10
Data Log Setup	10
Retrieve Logged Data	11
Display Retrieved Log	13
Using Graphs	14

---

<b>Chapter 7</b>	<b>1</b>
<b>User Defined Parameters</b>	<b>1</b>
System Parameters	1
Section Parameters	3
Path Parameters	5
Level Input Parameters	7
Analog Output Parameters	7
Relay Parameters	9
System Stats	10
Baud Rate change	10
Logging to Flash	11
Variables	12
Variables	12
Special Configurations	14
Using Layer Boundary Parameters to Simulate a Round Pipe	14
Separating Forward and Reverse Flows, (for pump / generating plant)	14
Relay to indicate that a Section is Good	14
<b>Appendix A:</b>	<b>1</b>
Multipath Flowmeter Systems Theory and Operating Principle	1
<b>Appendix B:</b>	<b>1</b>
Transducer Maintenance	1
Signal deterioration	1
7601 Series Transducers	3
Tools Required	4
7600 Series Transducers	9
Tools Required	9
<b>Index</b>	<b>1</b>

## OPTIONAL INTERFACES SUPPLIED

- **Power Supply**  
Voltage 90 to 250 V a.c. 47 to 63 Hz, or 100 to 300 V d.c.
  
- **Signal Filters**  
Transducer Frequency 1 MHz , 500 kHz , and 200 kHz
  
- **Analog Inputs**  
Number 4  
Load resistance 100  $\Omega$   
Power supply +24 V d.c.
  
- **Analog Outputs**  
Number 4  
Type Isolated  
Maximum load 1000 $\Omega$
  
- **Relays** **Optional**  
Number 9 max  
Type SPDT
  
- **Heater** **Optional**  
Voltage
  
- **Internal Data Logging**  
Memory 2 Mb

---

# Chapter 1

## Flowmeter Description

The Accusonic Model 7510+ “Compound” Flowmeter is designed for use in pipes, channels and sewers, ranging from 8 inches to 300 feet (0.2m to 90m) in width, and of cross section which may be circular, rectangular, trapezoidal, “horseshoe” or other defined shape.

The depth of water above the invert or bottom of the conduit may vary from zero to surcharged. The flow may be in either direction, and generally there is no assumed relation between depth and flow. Under certain conditions of low water level, a Manning type of relation between level and flow may exist. To cope with all these three possible flow conditions, and the possible temporary loss of velocity measurements, “Compound” flowmeter logic is required.

The water may range in quality from clean to raw sewage, from natural or industrial sources, having a pH in the range 3.5 to 10, temperature between 32°F and 105°F (0°C and 40°C), and a solids loading from near zero to 2000 parts per million. It is assumed that the conduit does not contain vapors of ketones or esters which might eventually reduce the integrity of the plastic housing of the transducers. In addition, the water may contain floating weed, rag, paper and plastic debris, and may deposit grease on the walls and any devices attached to the walls, especially in the region around the dry weather flow level.

Sewers may be classified as “confined spaces” as regards access: they may also contain potentially explosive atmospheres. If this is the case, the Hazardous Area Classification in USA and Canada, is typically Class I, Division 1, Gas groups C & D; elsewhere it is usually classified according to IEC codes as Zone 0 or Zone 1, Gas groups IIA & IIB.

For these applications, all transducers, cabling and other electrical equipment in the sewer and associated with it, should be installed in accordance with the appropriate National codes.

In USA installation should follow NEC Articles 500 & 501 for Explosionproof protection, or NEC Article 504 for Intrinsically Safe protection.

Elsewhere IEC 79-14, or EN 50014 & EN 50018 should be consulted.

For those conduits which are always surcharged the flowmeter may be configured in the “Pipe” mode. In this mode the level inputs are ignored, and in some cases the flowmeter may be supplied from the factory without level input circuits. For the flow computation, either the “Gaussian” or “Chebyshev” multi-path integration methods can be implemented by setting the parameters describing path lengths, angles and weighting coefficients in accordance with ASME or IEC codes.

For all other conduits the “Compound” mode should be used. The flowmeter is based on the “velocity-area” method for flow determination, generally described in ISO 6416 1992, and more specifically in Appendix A of this manual.

The water velocity is determined using the multi-path ultrasonic time-of-flight method. The elevation of the water surface above the site datum is called the “Level,” and the variable component of this value is input to the flow computer in analog form from one or two sensors, (typically downlooker ultrasonic units or pressure transmitters). A single arbitrated value for Level is obtained from the two inputs. The wetted cross section area is computed from the Level and parameters stored in the computer defining the shape of the conduit. The integration technique for computing the flow from the velocity data is determined automatically from the water level and from the quality of the velocity data.

## Flowmeter Description

---

When the Level is too low for any acoustic paths to operate (or if they are submerged and have failed), flow may be computed using the Manning equation. When the level is higher and ultrasonic paths are operating, a “Trapezoidal” integration method is used. When the conduit is surcharged, either the same integration algorithm may be used (modified to allow for the friction effect of the top of the conduit), or alternatively the “Pipe” mode may be used.

The flowmeter may be configured to provide determinations of flow in up to four separate and dissimilar conduits or “Sections”, each with one or two analog Level inputs and a number of acoustic paths. The total number of Level inputs allocated among the Sections is limited to 4, and the total number of paths allocated among the Sections is limited to 8.

The electronic unit provides up to four independent outputs in a 4-20 mA analog form, which may be differently scaled to output separately forward and reverse flow, flow over any range from reverse to forward, mean velocity, level, water temperature or sum of section flows.

Up to a maximum of 9 relays may be fitted to the electronic unit to provide flow and level threshold alarms for each section or sum of sections, section status (fail) alarms, or totalizer pulses.

An alpha-numeric display of flow and diagnostic data is provided on a separate hand-held terminal, which is connected to the flowmeter via an RS232 serial data port. The site parameters may be inserted into the flowmeter’s non-volatile memory from this terminal, by way of a “user-friendly” menu. Alternatively, a PC with a communications software may be used in place of the hand-held terminal.

A second RS232 port is provided for use with a PC which has “AccuFlow 7510+ Flowmeter Interface” software installed. This provides a “Windows” based user friendly flowmeter configuration routine, as well as graphics showing trends from recent flow data, the received acoustic signal waveforms and other data to aid commissioning.

An integral data logger is standard, which stores any combination of the measured variables (Flows, Levels Velocities, Temperatures, Diagnostic data etc.) at a chosen interval, using non-volatile “Flash” memory technology. The logger can be configured from the “Logging to Flash” menu.

The flowmeter may be fitted with an optional liquid crystal display (LCD), which can offer a range of flow data displays, depending on the configuration of the flowmeter.

Special hardware versions are also available to suit low frequency transducers and path lengths up to 300 ft (90m).

# Chapter 2

## General Specifications

### Transducers

Temperature range:	operating	32°F to 105°F	0°C to 40°C
	storage	0°F to 150°F	-18°C to 65°C
Pressure range:		Dependent on Model.	
Water quality:	pH	3.5 to 10	
	Solids loading	0 to 2000 parts/million	
	Vapors of Ketones & Esters must not be present		
Characteristic frequency:		1MHz , 500 kHz and 200 kHz using standard electronic filters.	
		Maximum Transmit Voltage:	
Standard systems,		1100 V peak.	
Flameproof protected transducers		1100 V peak	

### Electronic Unit

#### Standard Model

Power supply:	Electronic Unit	90 to 250 V a.c. 47 to 63 Hz or 100 to 300 V d.c. without adjustment.	
Power consumption:			
	Standard unit	26 Watts, 50 VA. (with a.c. power supply)	
	With relays or power for level sensors	35 Watts, 70 VA. (with a.c. power supply)	
	Heater a.c. power only,	200 Watts, Voltage as specified on equipment	
Contact Accusonic for details of Models suitable for 12 V d.c. or 24 V d.c. power supply.			
Temperature range:	operating	+15°F to 140°F	-10°C to 60°C
	operating with heater	-15°F to 140°F	-25°C to 60°C
	storage	0°F to 150°F	-18°C to 65°C
Maximum Altitude for normal operation		6500 ft	2000 m
		For higher altitudes, contact Accusonic.	
Dimensions:		20 x 20 x 9 inches	500 x 500 x 230 mm
Weight:		60 lb	27 kg
Enclosure protection:		NEMA 4	IP65
<b>Acoustic Paths</b>	(Up to 8 in total, allocated between all the Sections).		
	Length (Standard range)	0.7 to 50 ft	0.2 to 15 m
	(Extended ranges)	5 to 300 ft	1.5 to 90 m

#### Permanent Data Display (Optional)

LCD 2 lines x 20 alpha-numeric characters  
Character height 9 mm

**Level inputs (4)**

useable input range with standard 100Ω load	4 -20 mA, (0.4 - 2.0 V)
maximum load (optional)	250Ω (1.0 - 5.0 V range)
maximum voltage relative to ground for operation	± 20 V dc.
maximum withstand voltage relative to ground	240 V rms.
Power supply for external transducers	+24 V dc. 0.5 A max

**Analog Outputs: (4)**

Isolated	range	4-20 mA	
	maximum load	1000Ω	24 Volts
	resolution	0.005 mA	(15 bit)
	linearity and stability	±0.01 mA	0.06% full scale
	isolation	1500 V rms. common mode relative to ground	
	protection	± 50 VDC.	

**Alarm relays (Optional up to 9)**

For Flow or Level exceedance, Faults or Totalizer.  
 Normally open contacts. 10 A carrying capacity.  
 Switching capacity: 0.5 A, 110 V d.c, L/R = 40 ms  
 Isolation 2000 V a.c.

**Integral Data Logger**

104 different variables selectable.  
 Any interval selectable between 1 second and 24 hours  
 Capacity of main memory: 192 K data points.

**Transducer Cable**

Unbalanced mode: Coaxial RG59 A/U. A special double jacketed version for underwater use  
 Balanced mode: Twin-axial RG108 for lengths up to 300 ft (100 m).  
 Twin-axial RG 22 for long lengths.

Maximum length between Transducers and Electronic unit: 1600 ft (500m)  
 Approval from Accusonic should be obtained if the cables are expected to exceed 300 ft (100m)

**Hand-held Terminal**

Type TT-8045 (Two Technologies Inc.)

Temperature range:	operating	32°F to 120°F	0°C to 50°C
	storage	0°F to 150°F	-18°C to 65°C
Dimensions:		4.1 x 7 x 1 inches	105 x 180 x 25 mm
Weight:		0.5 lb.	0.23 kg
Enclosure Protection:		Not NEMA rated,	IP41
Power supply:		5 V d.c. from the 7510+ unit, on pin 9 of D connector	
RS232 signals:	Factory setting	19200 baud, 8 data bits, No parity, 1 Stop bit	
Display		4 Lines x 20 Characters	

**Conformity with EMC and Safety Standards**

The Model 7510+ Flowmeter is designed and constructed in conformity with the following standards or normative documents, and with the essential requirements of the European Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC with amend. 92/31/EEC and 93/68/EEC

**Low Voltage Directive**

EN 61010-1	Safety Requirements for Electrical Equipment.
IEC 255-5	Insulation: 2 kV common mode, 1 kV Normal mode, >100 MΩ

**EMC Directive, Immunity:**

EN 50082-2 (1995)	Part 2 Industrial
IEC 77A.	Harmonics on power supply
EN 61000-4-11	Interruptions (100 ms), dips and voltage variations (+12 to -15%) on supply
EN 61000-4-4	Fast transient/bursts. 2 kV common, 1 kV normal mode
EN 61000-4-5	High energy pulse/transient 2 kV common, 1 kV normal mode
EN 61000-4-12	Damped oscillatory waves 1 kV common, 0.5 kV normal mode
IEC 1000-4-6	Conducted disturbances, induced by radio frequency fields. 150 kHz to 80 MHz. (10 V)
EN 61000-4-2	Electrostatic discharge 8 kV in air, 6 kV in contact
EN 61000-4-8	Power frequency magnetic fields. 1000 Aeff/m
EN 61000-4-10	Damped oscillatory magnetic fields. 0.1 MHz and 1.0 MHz 30 Ap/m
IEC 1000-4-3	Radiated electromagnetic field 80-1000 MHz, 10 V/m

**EMC Directive, Emission:**

IEC 1000-3-2	Harmonic current emitted into power source
EN 50081-2 (1994)	Part 2 Industrial Electro-magnetic field radiated in bands 0.15 to 30 MHz and 30 to 1000 MHz

**Warning**

This is a Class A (ITE) product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

**FCC Compliance**

To comply with the Federal Communications Commission (FCC), Accusonic Technologies provides the following information concerning the 7510+ flow meter installation and operation.

**Part 68**

This equipment complies with Part 68 of the FCC Rules and the requirements adopted by the ACTA. It bears a label displaying, among other information, a product identifier in the format US:AAAEQ##TXXXX. The user must provide this information to the telephone company if requested.

The REN identifies the number of devices that may be connected to the telephone line. Excessive RENs on the telephone line may prevent devices from ringing in response to an incoming call. In most areas, the sum of the RENs should not exceed five (5.0). To determine the number of devices you may connect to a line, as determined by the total RENs, contact your telephone company. For this product the REN is part of the product identifier, the digits represented by ## are the REN without the decimal point (e.g., 03 is a REN of 0.3).

The plug and jack used to connect this equipment to the telephone network must comply with the applicable FCC Part 68 rules and the requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instruction for details.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of this equipment. If this occurs, the telephone company will provide advance notice so you can make necessary modifications to maintain uninterrupted service.

In the unlikely event that this equipment harms the telephone network, the telephone company will notify you that temporarily discontinuing telephone service may be required. Notification will occur in advance of discontinuation, or as soon as practically possible. They will also inform you of your right to file a complaint with the FCC if necessary.

This equipment may not be used on public coin phone service provided by the telephone company. Connection to party line service is subject to state tariffs.

This equipment is not field repairable. If you experience trouble with it, please refer to this manual for troubleshooting, replacement, or warranty information, or contact:

**Accusonic Technologies**  
**28 Patterson Brook Road**  
**West Wareham, MA 02576**  
**+1 508-273-9600**

## Interface Specifications

### Analog Level input

Level is input in 4-20 mA analog form, from an external current loop source.

Both terminals at the flowmeter must be within 20 volts of ground for operation.

The external device should be configured to give increasing current for increasing water depth. If it is configured to give increasing current for decreasing water depth, the Level Arbitration will not operate correctly.

For Level sensors requiring d.c. power, 24 Volts dc (at a total maximum current of 0.5 A) is available from the Level input terminal block.

Configuration of the Level input is defined by user-defined parameters. A parameter makes allowance for alternative load resistances to be placed across the input terminals. Normally the input resistance is 100Ω.

For electrical characteristics see “Electronic Unit” Specifications, page 2-2.

- A Level input having an electric current (in mA) less than the value set by the parameter *Min mA Input*, or more than 21.0 mA is treated as being in a “fault” state.
- Level inputs between the value set by the parameter *Min mA Input* and 20.00 mA are interpreted as elevations in feet or meters, linearly interpolated in the range from 4.00 to 20.00 mA, between the values stored under the parameters *4mA Level Input* & *20mA Level Input*.

### Level Arbitration

- Applies when two Level inputs are allocated to a Section. Both inputs must be configured to give increasing current for increasing water depth. Input #1 is the lower numbered input allocated to the section.
- If input #1 is between the value set by the parameter *Min mA Input* and 19.8 mA, the value scaled by the parameters *4mA Level* and *20mA Level* is used as the arbitrated value for Level. Input #2 is ignored.
- If input #1 is below the value set by the parameter *Min mA Input*, it is rejected. If at the same time, input #2 is between the value set by the parameter *Min mA Input* and 20.0 mA, the scaled value from input #2 is used as the arbitrated value for Level.
- If inputs #1 and #2 are both below their values set by the parameters *Min mA Input*, both are rejected, and no Level value is available. The flowmeter is declared failed.
- If input #1 is above 19.8 mA, and input #2 is not rejected, then the arbitrated level is the greater of that indicated by input #1 or input #2.
- If input #1 is above 19.8 mA, and input #2 is rejected, then Level is that indicated by input #1.
- Usually input #1 reading 20mA indicates pipe full. Input #2 is usually scaled for a larger range than #1.

### Analog Outputs

These are configured for 4-20mA, and may be separately allocated to give a linear representation of the flow, level, average water velocity, water temperature or sum of section flows. If desired, the outputs may be scaled to cover any range of the variable from reverse, through zero, to forward: it is necessary only to define the output by the extremes of the range (i.e., at 4mA and 20mA).

Output allocation to flowmeter section, variable to be output, range and output under fault condition, are all defined under Analog Output parameters, (for definitions see Chapter 7)).

Under fault conditions, the outputs will go either to 4.00 mA or be held at the last good value, depending on the choice under the parameter *Hold on Error*. On some systems a zero output can be selected.

Under conditions of under-range, an output will go to 4.00 mA

Under conditions of over-range, an output will go to 20.00 mA

When the flowmeter is taken out of measurement mode the output holds the last value.

For electrical characteristics see “Electronic Unit” Specifications, page 2-2.

## Relay Outputs

The relays which have been installed can be allocated to any section and to any of the functions by setting the Relay Output parameters described in Chapter 7. The logical operation for the different functions is:

Threshold Exceedance	<p>The relay changes from its normal state when the value of the Flow or Level equals or exceeds the <i>Threshold</i> parameter for more than the number of consecutive measurement cycles defined by the <i>Delay</i> parameter.</p> <p>The relay returns to its normal state if the value of the Flow or Level falls below the <i>Threshold</i> for more than the number of consecutive measurement cycles defined by the <i>Delay</i>.</p> <p>If the section fails, the relay remains at, or immediately returns to its normal state.</p> <p>The Normal state (either energized or de-energized) can be selected by the parameter <i>Polarity</i>.</p> <p>The value of the <i>Threshold</i> can be positive or negative (-99999 to +999999).</p> <p>Note: In the logic, the value -6.00 is regarded as greater than -7.00.</p>
Status Alarms	<p>The relay changes from its normal state when the Fault state has been in existence for more than the number of consecutive measurement cycles defined by the <i>Delay</i> parameter.</p> <p>The relay returns to its normal state immediately if the Fault state ceases.</p> <p>The Normal state (either energized or de-energized) can be selected by the parameter <i>Polarity</i>.</p> <p><b>Note.</b> A fault state due to a path failure is declared when the path has failed to provide data for more than a number of consecutive measurement cycles defined by the parameter <i>Max Bad Measures</i>. If the relay <i>Delay</i> is set to a value greater than zero, the relay will not operate until after that delay, even though the fault state will have already been in existence.</p> <p>The purpose of this routine is to hide short term faults which are known to occur, and only to give alarms for permanent faults.</p>
Totalizer Relays	<p>The relay changes from its normal state and returns 100 milli seconds later whenever the value for the Volume has increased by one complete unit.</p> <p>Only one operation of the relay can occur each measurement cycle.</p> <p>Only one relay can be allocated to each Section and only one to the Sum of Sections for totalizer pulses.</p> <p>In the event of power failure or the flowmeter being taken out of the Measure mode for less than one hour, the relay may operate at a rate of once per measurement cycle until the number of relay pulses has caught up with the Volume change which was computed to have occurred during the outage.</p>

## Data Display on Hand-held Terminal

In normal operation, 11 different display screens are available, one for each variable as follows:

Envelope Times, Travel Times, Time Differences, Signal Gains, Velocities,

Flow, Volume, Level, Temperature, Sum of the Section Flows & Volumes, Analog in.

The first five are for diagnostic purposes concerned with the water velocity determinations, the next five for observing flow data, and the last for diagnostic purposes concerned with the various Level inputs.

For details of the displays, see the section on Data displays at the end of Chapter 5.

For definitions of the variables, see the section on “Variables” at the end of Chapter 7.

## Parameter Insertion and Reading, Hand-held Terminal

Parameters describing the flowmeter configuration are inserted using 7 different parameter menus. These are: SYSTEM, SECTIONS, PATHS, LEVEL INPUTS, ANALOG OUTPUTS, RELAYS, LOGGING.

For instructions on how to insert the parameters, see Chapter 5.

For details on setting up the internal data logging, see Chapter 5.

For details of the parameters, see the section on “User Defined Parameters” in Chapter 7.

There are two command menus:

MEASURE: To put the flowmeter into the normal “Measure” mode.

SYSTEM ACTIONS. Under which any of the following three commands may be made.

STORE ALL PARS: To store parameters once they have been entered correctly.

RESTORE ALL PARS: To recall the stored parameters from non-volatile memory.

XMIT PARAMETERS: To transmit the complete parameter list to a data terminal.

In addition there is a list called SYSTEM STATS, which contains the software revision number, a parameter to change the data baud rate to the Hand-held terminal, and the facility to change the real time clock.

## Connection of a PC in place of Hand-held Terminal

A PC or other terminal with ANSI emulation may be connected to the 9 pin “Hand-held Communications” socket, as an alternative to the Hand-held terminal usually supplied. The same logic of operation and functions will be available. A “Null Modem” cable or standard serial cable with a “Null Modem adapter” is required to interconnect between this socket and a PC’s serial port. Either the cable or adapter can be purchased at a PC supply or electronics store.

RS232 signals: 19200 baud, 8 data bits, No parity, 1 Stop bit, No handshaking protocol  
The baud rate may be changed using a parameter under SYSTEM STATS.

The connections on the 9 pin D socket are:

Pin 2. Data into the 7510+ unit.

Pin 3 Data out from the 7510+ unit

Pin 5 Common, connected to ground in the 7510+ unit.

Pin 9 +5 volts dc. (for power to the Hand-held terminal).

The following ASCII characters are recognized by the flowmeter.

Numbers **0** through **9**, **Enter**, **Esc**, – sign, Decimal point, #, Letters **U, D, L, R, P, S, T, M, Z**

The letters **U, D, L, R**, are used as cursor controls, **↑**, **↓**, **←**, **→**

**#** or **S** is used to cause a system Reset,

**P** to put the system in Pause,

**T** to prevent updating of the Terminal display

**M** to put the system in the Measure mode.

**Z** as an alternative for Esc.

A listing of parameters can be sent to the PC using the XMIT PARAMETERS command.

An example of a listing is included at the end of Chapter 5.

## Connection of a PC for use with “AccuFlow” 7510+ Interface

A PC may be connected to the 9 pin “RS232” socket, for use with special Accusonic PC based programs. A “Null Modem” cable or standard serial cable with a “Null Modem adapter” is required to interconnect between this socket and a PC’s serial port. Either the cable or adapter can be purchased at a PC supply or electronics store.

RS232 signals: 19200 baud, 8 data bits, No parity, 1 Stop bit, No hand-shaking protocol.

The connections on the 9 pin D socket are:

Pin 2.	Data into the 7510+ unit.
Pin 3	Data out from the 7510+ unit
Pin 5	Common, connected to ground in the 7510+ unit.

## Optional High Speed Modem

A High Speed Modem can be supplied with the 7510+. A separate dedicated com-port is available for connection to the modem.

Data transfer (send or receive) at line speeds of 19200, 14400, 12000, 9600, 7200, 4800 and 2400 baud.

Auto-negotiating line speed connections at 19200, 14400, 12000, 9600, 7200, 4800 and 2400 baud using Fall Forward/Fallback handshaking (based on line signal quality) per EIA/TIA-P2330.

Lightning Surge Protection tested to IEEE C62.41-1991 and IEEE C62.45-1992.

## Integral Data Logger

The integral data logger can be configured to log any combination of the measured variables (Flows, Levels Velocities, Temperatures, Diagnostic data etc.) at a chosen interval, using non-volatile “Flash” memory technology.

The memory part of the data logger resides on the DSP circuit card which is mounted next to the Analog card in the flowmeter console. The flowmeter processor (DSP) carries out all the house keeping functions necessary to format data and store them on the memory card. The DSP also formats the data when requested to upload them to a PC.

The user interfaces with the logger for setting up, either using the Hand-held terminal (see Chapter 5 & 7), or via the RS232 serial port using a PC running under the AccuFlow Interface. (see Chapter 6)

Reading the logged data can only be achieved using the AccuFlow Interface.

The logger is fully protected against data loss in the event of power failure.

---

# Chapter 3

## Flow Computation

The Accusonic Model 7510+ Flowmeter may be configured with up to a maximum of eight acoustic paths and two inputs for Level (or water depth) in one conduit or “Section.” Details of the configuration are defined by a set of parameters, the names of which appear in this document in *italics*.

Each path is characterized by parameters describing *Length* and *Angle*. For “Pipe” mode integration, a *Weight* parameter is added: for “Compound” mode *Elevation* is added. Paths are numbered in order of elevation, with the lower path numbers having lower elevations. In Compound flowmeters, pairs of “Crossed Paths” in a section are indicated by having the same elevation. Other Path parameters include:

*Max. Bad Measures, Max Velocity Change, Max Path Velocity, Signal Delay and Transducer Frequency*

In “Pipe” mode, path transducers are energized and measurements taken for all paths which are configured. In “Compound” mode, only those transducers submerged by an amount greater than the parameter *Min. submersion* are energized.

If a path fails to provide a good velocity value, because the signal is not found, or the velocity appears to exceed the *Max Path Velocity* parameter, then the last good velocity value is used for flow calculations until the number of consecutive failures exceeds the parameter *Max. Bad Measures*. If this value is exceeded, the path is declared to have failed, and its data are then not used for flow computation, unless and until new valid data are obtained. If the change in velocity appears to exceed the *Max Velocity Change* parameter, the computed velocity is incremented or decremented by an amount equal to the *Max Velocity Change*.

**In “Pipe” mode**, all *Manning, Level* and *Layer* parameters indicated by the letter “C” after their names are ignored. The conduit geometry and velocity integration are defined in terms only of *Pipe Area* and *Path weights*.

**In “Compound” mode** instantaneous values for velocity are averaged for paths having identical elevations, and the averaged velocity is used as the velocity at that elevation. If one of the paths has failed for more than the parameter *Max. Bad Measures*, the good path will be used alone for providing the velocity at that elevation. Paths which do not have identical elevations will be treated as separate paths in the Trapezoidal Integration. The velocities displayed and the velocities sent to the “Com 1” port will be the individual velocities for each path.

The conduit cross-section is defined in terms of up to 8 “Layers,” each layer being described by an elevation and a width. The width of the conduit at any elevation is computed by linear interpolation between the layer widths above and below.

The elevation and width of the channel bottom are defined by *Layer #1*. The layer elevations are independent of the path elevations. For a rectangular or trapezoidal conduit, only two layers need be defined, the first describing the channel bottom, and the second describing the top of the channel. For a closed conduit, the top-most layer elevation must be equal to or greater than the elevation of the soffit or top of the conduit (or the *Surcharge Level* parameter). For an open channel, the top-most layer elevation must be set above the highest possible level. The other Section parameters required for Compound Integration are: *Bottom friction, Top weight* and the Surcharged Integration method to be used (*Surch Trap/Pipe*).

If “Trapezoidal” integration is chosen for the surcharged condition, certain “Pipe” mode parameters are ignored by the system, and these are indicated in Chapter 7.

## Flow Computation Algorithms

### In “Compound” Mode

The flowmeter automatically chooses one of 5 integration methods, depending on the value of the Level, and on the status of any of the acoustic paths which are sufficiently submerged to operate, (i.e. those whose elevations are defined to be less than [Level - *Min. submersion*]). The 5 methods are:

1. Zero flow if the Level (or depth of water) is below a user defined value.
2. Manning Equation when the depth of water is too low for acoustic paths to operate, or, within-user defined limits, if none of the acoustic paths yields valid data.
3. Single Path Trapezoidal Integration, when the conduit is not surcharged and only one path (or one pair of crossed paths) is submerged, or when only one path (or one pair of crossed paths) is able to yield valid data.
4. Multi-path Trapezoidal Integration, when the conduit is not surcharged and at least two acoustic paths at different elevations (any of which may be pairs of crossed paths) yield valid data.
5. Surcharged Integration, when the pipe is surcharged. A user-selectable choice of two methods is available:
  - “Pipe” as described for “Pipe” mode involving parameters of path weights and pipe area;
  - “Surcharged Trapezoidal” where the pipe geometry and velocity integration are defined by methods similar to those used for non-surcharged trapezoidal integration.

**Note.**

*If none of the above conditions is satisfied, the flowmeter is declared to be in a “fault” state.*

*On sites where the Manning equation is not appropriate, the facility can be inhibited by setting the parameter Manning max lvl. to a value equal to or below the parameter Layer elevation 1.*

### In Manning mode

The flow is computed from the variable Level and fixed parameters of channel roughness, channel slope, and dimensions of the conduit.

$$\text{The flow} = \text{Flow scaling} * \text{Area} * C * n^{-1} * R^{0.667} * \sqrt{s}$$

- where:
- Area = the cross-section area of fluid at the current Level, computed using layer data.
  - C = Manning Constant = 1.49 if English units are used, 1.00 if metric units are used.
  - n = the Manning coefficient of roughness.
  - R = Hydraulic radius, which is the Area/Wetted Perimeter.
  - s = Slope of the energy line. For a long pipe, the pipe slope.

### In Non-surcharged Single Path Trapezoidal Integration Mode

The flow is computed from the variables Level and Water Velocity, and fixed parameters describing the conduit.

$$\text{The flow} = \text{Flow scaling} * \text{Area} * \text{Velocity} * \text{Path position coefficient.}$$

where: Area = the cross-section area of fluid at the current Level, computed using layer data.

Path position coefficient is obtained by interpolation from the following look-up table (from ISO 6416).

Ratio of path depth below surface to depth of water above bottom.	Ratio of point velocity to mean velocity in the vertical.
0.1	0.846
0.2	0.863
0.3	0.882
0.4	0.908
0.5	0.937
0.6	0.979
0.7	1.039
0.8	1.154
0.9	1.424
0.95	1.65 (extrapolation).

### In Non-surcharged Multi-Path Trapezoidal Integration Mode

The flow computation in this mode is performed in a series of steps, following the principles set out in ISO 6416 for the “mid-section” method. Each step consists of determining the flow over a smaller cross-sectional area or panel. The total flowrate in the conduit then becomes the sum of the individual panel flows.

There are three basic types of panel:

1. Bottom panel which is bounded on the bottom by the bottom or bed of the conduit and on the top by the lowest operating path.
2. Intermediate panel bounded on the top and bottom by consecutive operating paths that are not at the same elevation.
3. Top panel bounded on the bottom by the highest operating path and on the top by the surface of the water.

Each of these panels is bounded on either side by the walls of the conduit, whose dimensions and shape are defined by the layer parameters. The actual area for each panel can therefore be a complicated computation involving the calculation of the conduit widths at the paths which bound the panel (from interpolation between the nearest layer widths), the calculation of the areas between these paths and the layer nearest them (or between the paths if there is no layer between them), and the calculation of the areas between any other layers which may lie between these paths.

The flow computation in the bottom panel is:

$$Q_{\text{Bottom}} = \text{Area}_{\text{Bottom}} * \text{Vel}_A * (1 + \text{Bottom friction}) / 2$$

where:  $\text{Area}_{\text{Bottom}}$  = conduit area between the bottom (Layer #1) and the lowest good path (or pair of crossed paths)

$\text{Vel}_A$  = Water velocity as computed from the lowest good path or pair of crossed paths

The flow in the intermediate panel above the bottom panel is:

$$Q_{\text{Int}} = \text{Area}_{\text{Int}} * (\text{Vel}_A + \text{Vel}_B) / 2$$

where:  $\text{Area}_{\text{Int}}$  = conduit area between good path A and the next good path B

$\text{Vel}_B$  = water velocity as computed from the next good path or pair of crossed paths

The flows in all the intermediate panels is computed similarly

The flow in the uppermost panel bounded by the surface is:

$$Q_{\text{Top}} = \text{Area}_{\text{Top}} * (\text{Vel}_N + \text{Top Weight} * \text{Vel}_{\text{Surface}}) / (1 + \text{Top Weight})$$

where:  $\text{Area}_{\text{Top}}$  = conduit area between the uppermost good path (or pair of crossed paths) and the water surface.

$\text{Vel}_N$  = water velocity computed from the uppermost good path or pair of crossed paths

$\text{Vel}_{\text{Surface}}$  = an estimated water velocity at the surface from a limited algebraic extrapolation of the velocities from the uppermost good path (or pair of crossed paths) and the next good path (or pair of crossed paths) below it.

If the difference in elevation between the water surface and the uppermost good path is less than the difference in elevations between the uppermost and next lower good paths, then:

$$\text{Vel}_{\text{Surface}} = \text{Vel}_N + (\text{Vel}_N - \text{Vel}_M) * (\text{Level} - \text{Elevation}_N) / (\text{Elevation}_N - \text{Elevation}_M)$$

where  $\text{Elevation}_N$  and  $\text{Elevation}_M$  are the elevations of the uppermost good path and of the next lower good path.

and  $\text{Vel}_N$  and  $\text{Vel}_M$  are the water velocities from the uppermost good path (or pair of crossed paths) and of the next lower good path (or pair of crossed paths)

If the difference in elevation between the water surface and the uppermost good path is greater than the difference in elevations between the uppermost and next lower good paths, then:

$$Vel_{Surface} = Vel_N + (Vel_N - Vel_M)$$

The total Flow in the conduit is the sum of the flows in all the panels.

$$Flow = Flow\ scaling * (Q_{Bottom} + \sum Q_{Int} + Q_{Top})$$

### Alternative Crossed Path Configuration in Open Channels

When crossed paths are installed, the flowmeter may be configured as two separate sections having identical geometry and the same level inputs. Section #1 is configured for the paths in one plane, and section #2 for those in the other plane. The *Flow Scaling* parameter is set to 0.5, and the channel flow is the sum of the section flows. Analog outputs should be allocated to section #1 to give Level, temperature and velocity, and to SF (Sum of Flows) for Flow.

### In Surcharged Mode

A choice of two possible integration methods is available -- “Pipe” and “Surcharged Trapezoidal.”

#### Surcharged Pipe Integration

See description on page 3-5 for “Pipe Mode.”

#### Surcharged Trapezoidal Integration

The flow is computed from the path velocities and the cross-section area (which is computed from the layer parameters and the *Surcharge Level* parameter).

When paths at more than one elevation are good, the Flow is computed in the same manner as for non-surcharged trapezoidal integration, except that the flow in the panel between the uppermost good path (or pair of crossed paths) and the top of the conduit or soffit is set to:

$$Q_{Top} = Area\ between\ uppermost\ good\ path\ and\ soffit * Vel_N * (1 + Bottom\ Friction)/2$$

When only one path (or pair of crossed paths) is good, the total section Flow calculation simplifies to:

$$The\ Flow = Flow\ scaling * Area * Vel_A * (1 + Bottom\ Friction)/2$$

where: Area = the surcharged cross section area of conduit computed from the Layer data and the *Surcharge Level* parameter.

For multi-path installations, the value of *Bottom Friction* is usually set between 0.5 and 0.8. The lower value is used when the lowest path is very close to the bottom of the channel.

For single path installations with the path located near to the bed, the value for *Bottom Friction* should be set according to:

Channel shape	Path elevation / Surcharge Level	Bottom Friction.
Rectangular	10%	1.6
Rectangular	20%	1.4
Round	10%	1.3
Round	20%	1.1

## In “Pipe” Mode

In “Pipe” mode, the conduit is surcharged, and flow is computed by the product of average water velocity and the conduit cross-section area. The average water velocity is obtained from the sum of the path velocities, each weighted according to its position in the conduit.

The cross-section area is a fixed value defined by a single user-defined parameter, *Pipe area*.

The other user-defined parameters are: *Flow scaling* and *Weight* for each path  $W_n$  (n is the path number 1 to 8)

$$\text{The flow} = \text{Flow scaling} * \text{Pipe area} * \sum W_n * V_n$$

where  $V_n$  = velocity for path n.

Details of the method, including path configurations and weights to be used in special formulae for different pipe shapes, are described in the ASME PTC 18 or IEC Pub 41 codes for hydraulic turbine efficiency testing. The formulae and the weighting factors used in the codes differ from the more general formula used in the flowmeter. Examples of weights to be inserted in the flowmeter are given in Chapter 7, under Path Parameters.

In the event of one or more paths failing, the flowmeter is capable of calculating Flow by invoking a “Path substitution” routine. The Flow continues to be computed from those paths which remain good, however the uncertainty increases with the number of paths failed. For this routine to operate, the following two conditions must be met:

1. The number of good paths must be equal to or greater than the Section parameter *Min good Paths*.
2. The flowmeter must have completed the “Learn” routine.

During the “Learn” routine, which must be implemented at the pipe’s normal flow (non-zero!), a table of time-averaged historic flow components ( $V_n * W_n$ ) is recorded and stored in the flowmeter’s protected memory. The “learn” routine is implemented by setting the section parameter *Learn Path Ratios* to 1, and then setting the flowmeter to run. At the end of 1000 readings, the *Learn Path Ratios* parameter will automatically reset to zero. During the learning run, the letter “L” is displayed adjacent to the section Flow value. The learning run may be curtailed at any time by manually setting the *Learn Path Ratios* parameter to 0. Repeating the learning process will erase an old table and create a new one.

In the “Path Substitution” routine, the contributions towards the total pipe flow from the failed paths is replaced by a figure generated from the flow contribution from the remaining good paths, weighted as appropriate by the historic flow contribution ratios for all the paths. Mathematically, the routine can be represented as:

$$\text{Flow} = \text{Current Flow from Good Paths} * \text{Historic Flow} / \text{Historic Flow from current good paths.}$$

The Current Flow from Good Paths is = Pipe Area \*  $\sum V_n * W_n$   
in which the velocity from any failed paths is set to zero.

Historic Flow is the long time-averaged flow recorded during flowmeter commissioning.

Historic Flow from current good paths is = Pipe Area \*  $\sum$  Historic  $V_n * W_n$  excluding those historic flow components which apply to the paths which are currently failed.

## Volume Calculation

Volume is the totalized flow and is computed as:

$$\text{Volume} = \text{Flow in the displayed units} * \text{Time elapsed in seconds} / \text{Volume Scaling}$$

If the flow is positive, the count will rise to a maximum of 99 999 999, and then reset to zero and start again. The Volume figure will be incremented or decremented depending on whether the flow is positive or negative. If the count is small, the Volume figure will be displayed as a number with up to 4 decimal places.

The volume counts transmitted by relay closures to an external counter are designed to maintain agreement between the displayed Volume (in the flowmeter) and the count as registered by the counter.

When the flow is positive, a count is usually transmitted by the relay whenever the Volume increases by one complete unit. However, if there is a period during which the flow is negative, the Volume figure displayed in the flowmeter will decrement, but there will be no counts transmitted by the relay. If the flow should then return positive, no further counts will be transmitted until the Volume figure exceeds the value which it attained prior to the negative flow period.

In the event of the flowmeter being taken out of the Measure Mode or powered down for a period not exceeding one hour, the Volume count will be made up for the missing period. The count made up will be given by:

$$\text{Make-up Count} = \text{Flow existing at time of Flowmeter recovery} * \text{Down time in Seconds} / \text{Volume Scaling}.$$

### Water Temperature Calculation

Water temperature for a section is computed from the average speed of sound in water, as determined from the measurements made by all the good working paths in the section.

The result is in °F if the System Parameter *English / Metric* is set to “English”, and in °C if it is set to “Metric”.

The calculated temperature is:

$$\text{Temperature } ^\circ\text{F} = 1.129 * 10^{-7} * c^3 - 1.46827 * 10^{-3} * c^2 + 6.450118 * c - 9559.7 + \text{Temp Correction}$$

$$\text{Temperature } ^\circ\text{C} = 5.0822 * 10^{-6} * c^3 - 2.127056 * 10^{-2} * c^2 + 29.88592 * c - 14096 + \text{Temp Correction}$$

where *c* is the average speed of sound in water, and *Temp Correction* is a Section Parameter.

These formulae apply only to fresh water at low pressure.

At 10 bar pressure, the flowmeter will indicate 0.6°F (0.3°C) high at near freezing,  
and 1.4°F (0.8°C) high at 90°F (30°C)

At a salinity of sea water (35 parts / thousand), the flowmeter will indicate  
19°F (10°C) high at near freezing,  
and 30°F (17°C) high at 90°F (30°C)

---

# Chapter 4

## Unpacking and Installation

When the flowmeter arrives, inspect the packaging for signs of damage. If there is obvious external damage to the shipping container, request that the carrier's agent be present when the unit is unpacked. Be particularly careful not to destroy the shipping container during opening so that it may be used for future shipment of the unit.

### **Warning**

*Do not apply power to damaged components. Injury or further damage may occur.*

Remove the flowmeter from the package and verify all parts against the packing list. Examine each of the components for physical damage. If a component is damaged, notify the carrier and follow the instructions for damage claims. Report any shipping problems immediately to Accusonic.

### **Physical Installation**

The flowmeter should be mounted on a location so the cable run from the transducers to the unit does not exceed 300 feet or 100 meters without the approval of Accusonic. In addition, the unit requires a power connection, as well as connections to any pressure transmitters and to the site process control system.

The instrument should be mounted vertically and should be attached to a wall or mounting panel capable of safely supporting 100 pounds. (50 kg). Use 3/8 inch (10 mm) lag screws or carriage bolts.

If an external PC is used, provide a suitable table or shelf.

If the cabinet is to be mounted out-doors, it should be protected by a sun shield on the top and the south facing side.

### **Electrical Installation**

**Caution** when drilling conduit holes, remove the circuit cards from the unit.

**Note.** In order to reduce the possibility of malfunction of the processor, due to electro-magnetic interference radiated from the various cables, all wiring brought into the unit should be routed to its terminals by the shortest reasonable route. **Spare cable should be looped in the conduit and trunking outside the flowmeter console.**

All wiring is brought into the unit through customer-supplied conduit connectors. This may include:

- ◆ a.c. or d.c. power supply mains to the electronic unit (and for the heater if fitted).
- ◆ Transducer cabling (may require more than one feedthrough)
- ◆ Level sensor inputs if required.
- ◆ 4-20mA Analog outputs
- ◆ Alarm and Totalizer relay outputs.

Check that the voltage ratings for the electronics and heater (if fitted) as specified on the label on the connector panel Fig 4-1, are appropriate for the supplies.

## **Power Wiring**

Power consumption for the electronics is less than 70 VA.

Power consumption for the heater is 200 Watts, a.c. only. Use #16 AWG or #14 AWG (1.5 mm<sup>2</sup> minimum).

The unit requires direct mains wiring and should be installed with a separate main power cutoff switch near the instrument, in compliance with the National Electrical Code (or IEC 60079-14 clauses).

Route power mains wiring into the unit through the appropriate feedthrough to the mains terminal block, and connect as shown in Figure 4-1. Be sure to follow appropriate local codes and practices, and to attach a proper earth ground to the instrument.

For low voltage d.c. power, observe the correct polarity.

For d.c. power 100 to 300 V d.c. the low potential side of the supply should be connected to the “-” terminal.

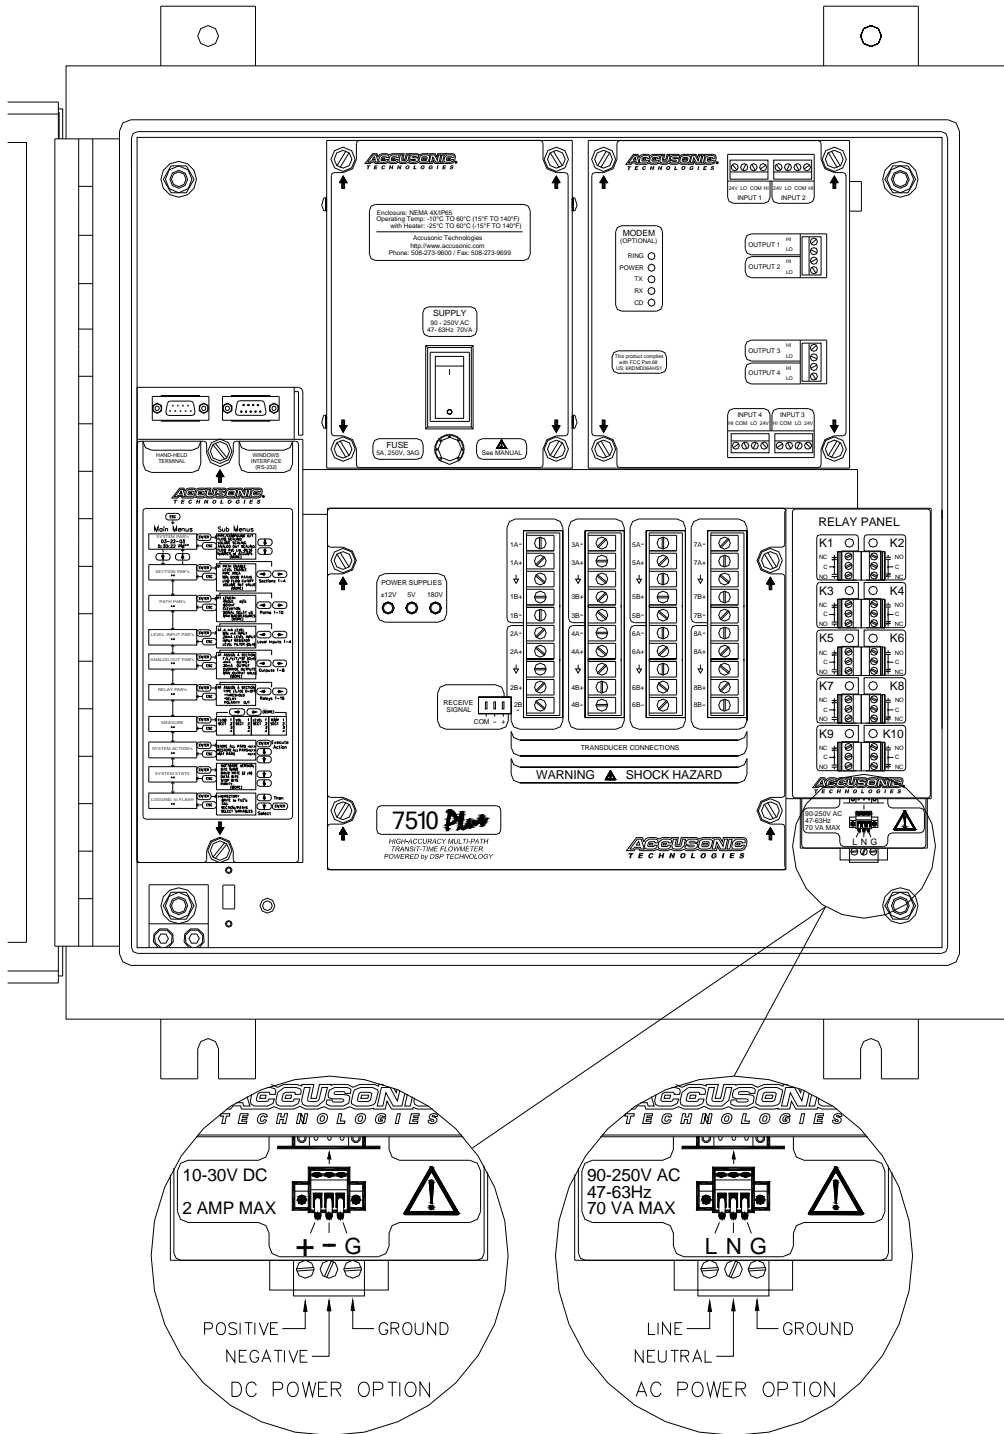


Figure 4-1 Location of Power Line Connections

### Transducer Wiring

Pull transducer cabling through the appropriate feedthrough and trim each line, leaving enough cable to reach the transducer terminal blocks at the bottom of the flowmeter console. Tag each cable with a path number and transducer letter according to the Accusonic numbering convention as shown in Figure 4-2. Trim the cables, strip back 2 inches of outer sheathing from each, pull inner conductors back from inside the outer braid, solder spade lugs to the conductor and shield of each cable as shown in Figure 4-3.

Do not connect the cables to the flowmeter yet. Leave the ends of the cables so that the conductors are not in contact with one another or with any metal parts on the flowmeter console.

**Caution**

*Double-check the cable numbering and verify sufficient reach before trimming.*

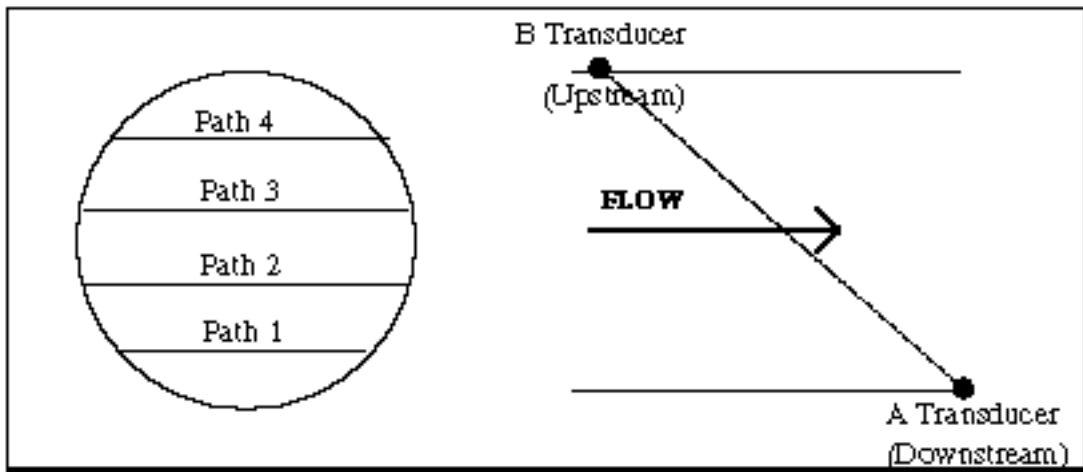


Figure 4-2 Transducer Numbering - Simple Pipe




1. Strip outer sheath back 2 inches (50mm), exposing braided shield.  

2. Pierce the braid, snake inner conductors and insulation out.  

3. Twist braid tightly, trim to 1.5 inches (35mm), attach forked lug, crimp and solder
4. Trim inner conductors to 1.5 inches (35mm), strip 3/8 inch (10 mm) of insulation
5. Attach lugs, crimp and solder.  


Figure 4-3 Stripping and Terminating the Transducer Cable

## Transducer and Cabling Checkout

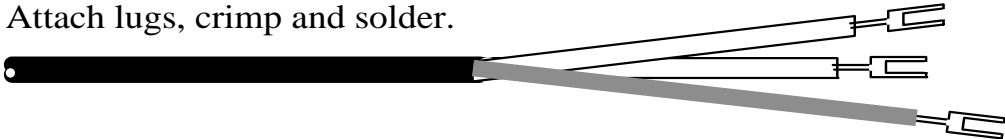There are three steps to verify the transducer cabling and transducers:

1. Verify that there is infinite resistance across each transducer.
2. Verify that there are no internal shorts in any cable.
3. Verify continuity in the cabling.

### Step 1 - Verify infinite resistance across each transducer

Measure the resistance across the transducer cable terminals using a Megohmmeter (high voltage ohmmeter) set to the highest resistance range. Each transducer should measure infinite resistance. Contact Accusonic if any transducer measures less than 20 M $\Omega$  resistance.

Test transducer resistance at the unit, with the cabling detached, if possible. This can usually be performed easily when the transducers are pipe-mounted, where the outside of the pipe is accessible, and when the transducers are fitted with E/O connectors. Use a short test cable attached to an E/O connector.

When the transducer is not accessible, or when the cable is permanently attached to the unit, do the best you can. Test the resistance at a wiring junction located as near as possible to the transducers. If it is not possible to detach the cabling back to the flowmeter console, be sure the console ends of the cables are detached from the unit and that they are not accidentally shorted together.

### Step 2 - Verify that there are no internal shorts in any cable

With the free ends of all cables detached and isolated, test that the resistance across each cable is infinite. For coaxial cable, test conductor to shield, conductor to ground and shield to ground. For twin-axial cable, test conductor to conductor, each conductor to shield, each conductor to ground, and shield to ground.

### Step 3 - Verify Continuity and Cable Identification.

Work from either end of the cable and use a partner to connect pairs together, one at a time, at the far end of the cable. For each coaxial cable, short the connector to shield and measure continuity. For each twin-axial cable, short each connector to shield and measure continuity.

## Connecting Transducer Cabling

After verifying that all transducer cabling is sound, connect each line to the appropriate terminal on the flowmeter console, as shown in Figures 4-4A or 4-4B.

### Coaxial Cable (unbalanced cables)



Connect cables as shown in figure 4-4B

Configure jumpers for on Path-Selector Backplane as shown in figure 4-4A.

### Twin Axial Cable (balanced cables)



Connect cables as shown in figure 4-4A.

Configure jumpers on Path-Selector Backplane as shown in figure 4-4B.

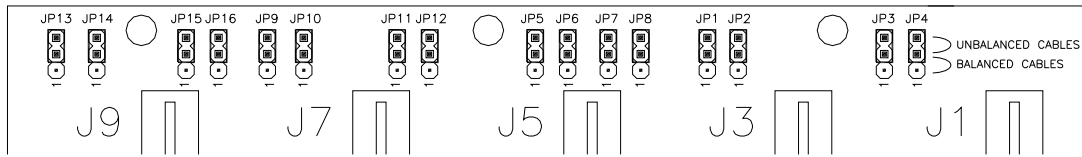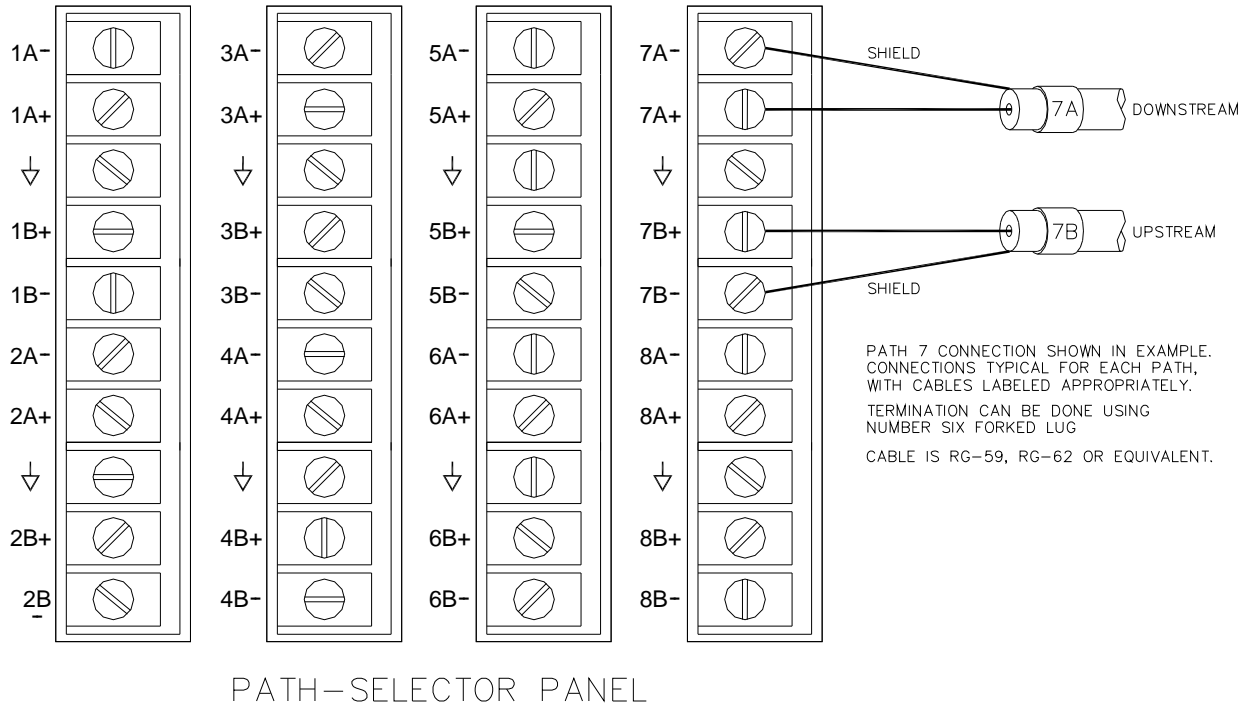

PATH-SELECTOR BACKPLANE JUMPER CONFIGURATION FOR UNBALANCED CABLES

Figure 4-4A Unbalanced connections

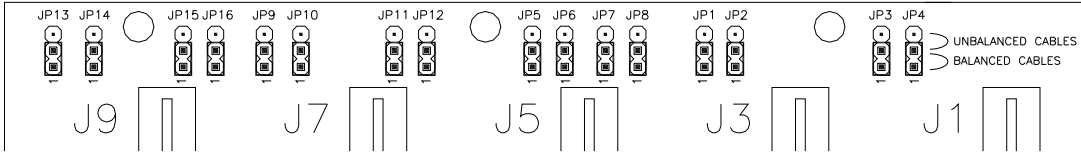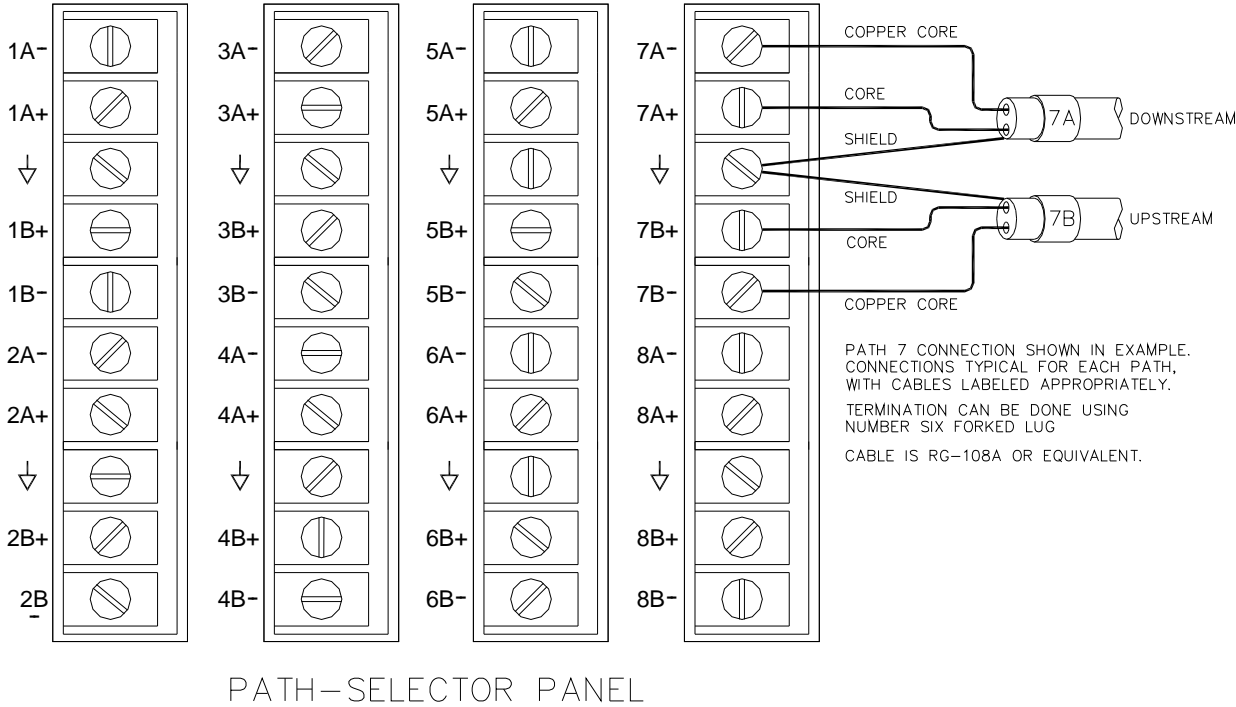

**Figure 4-4B Balanced connections**

**Connecting the Analog Level Sensors**

Any level sensor providing a 4-20 mA process loop signal can be used by the flowmeter. After installing the external level sensor according to the manufacturer’s instructions, use a twin-axial, shielded cable to connect the input to the terminal strip.

On most systems the terminal strip for the level inputs is located on the extreme right hand end of the connector panel shown in Figure 4-6.

Input impedance for each channel is 100 ohms.  
For typical connection configurations see Figure 4-5 over leaf.


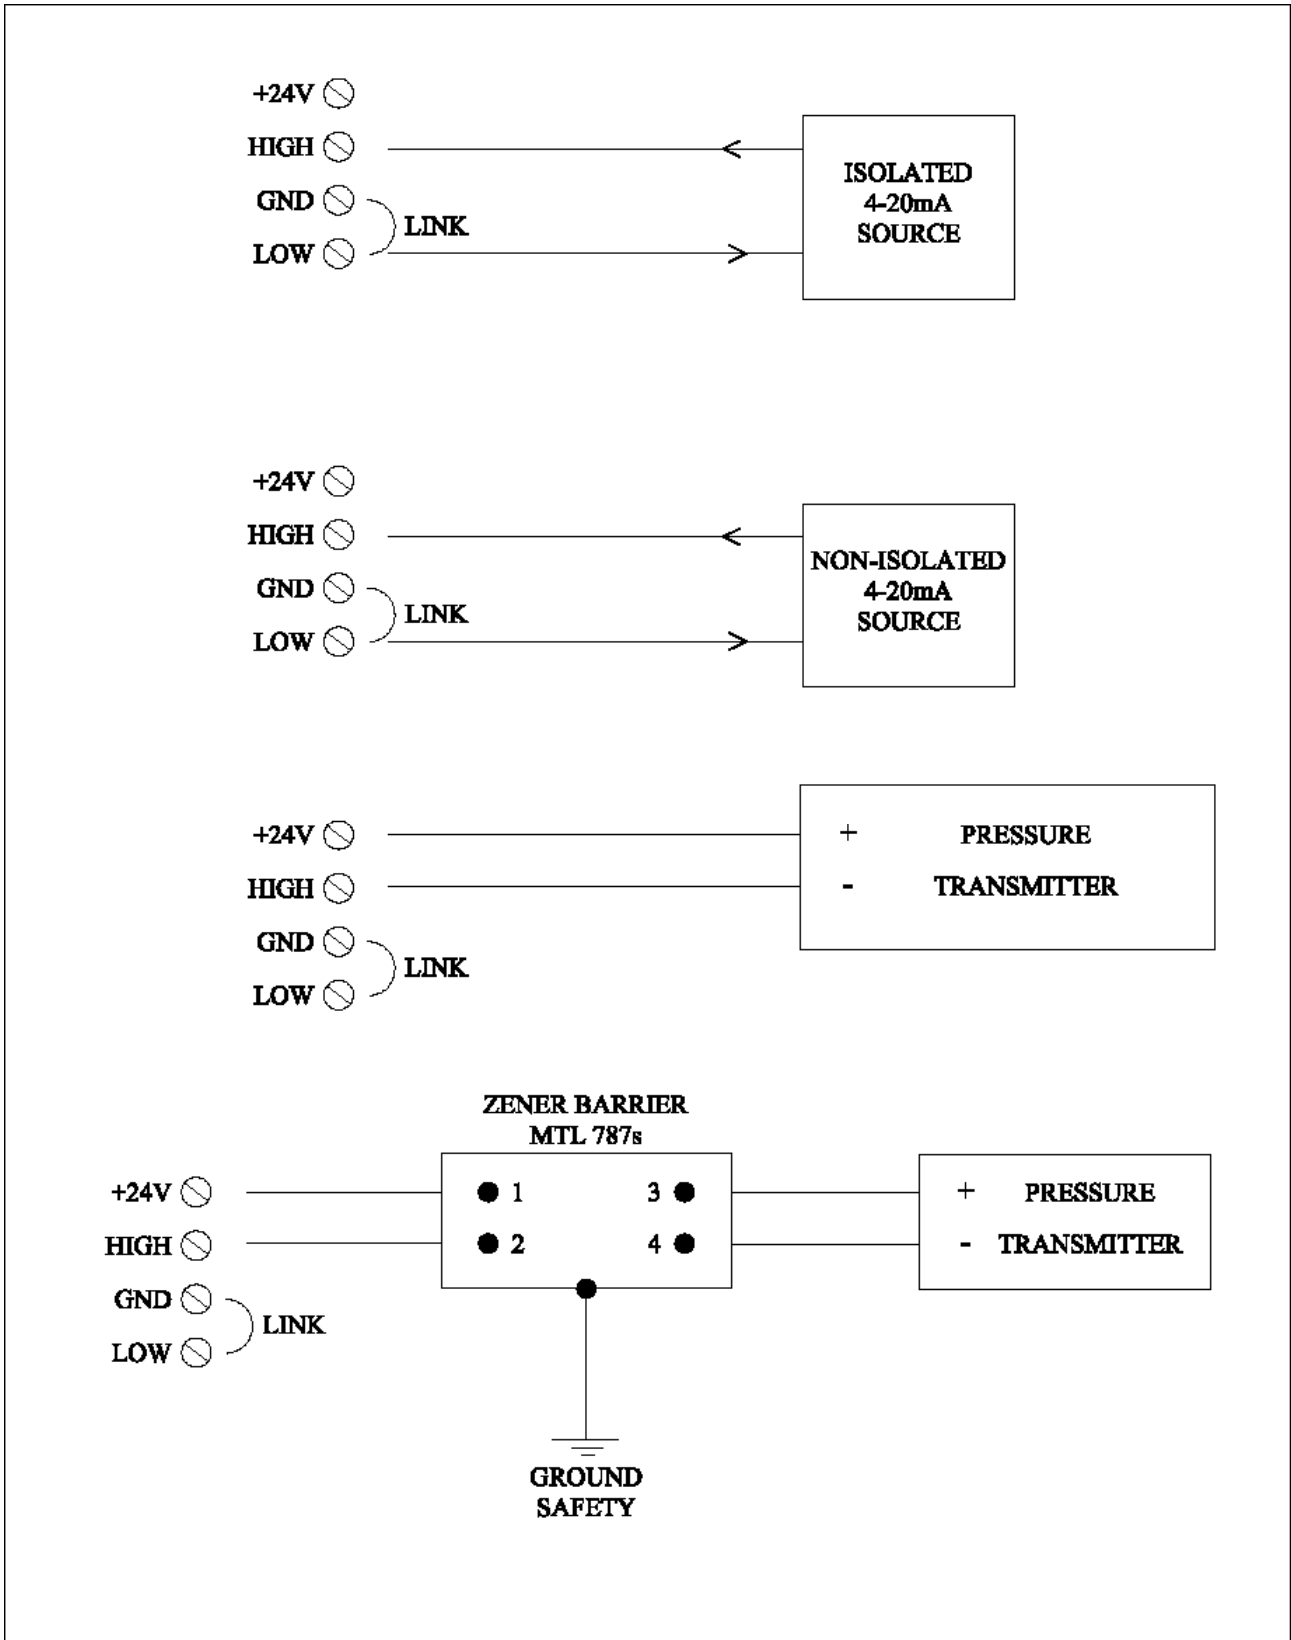


Figure 4-5 Typical Analog Level Connection

### Connecting the Analog Outputs

Connect to the 4-20mA terminals as indicated in Figure 4-6

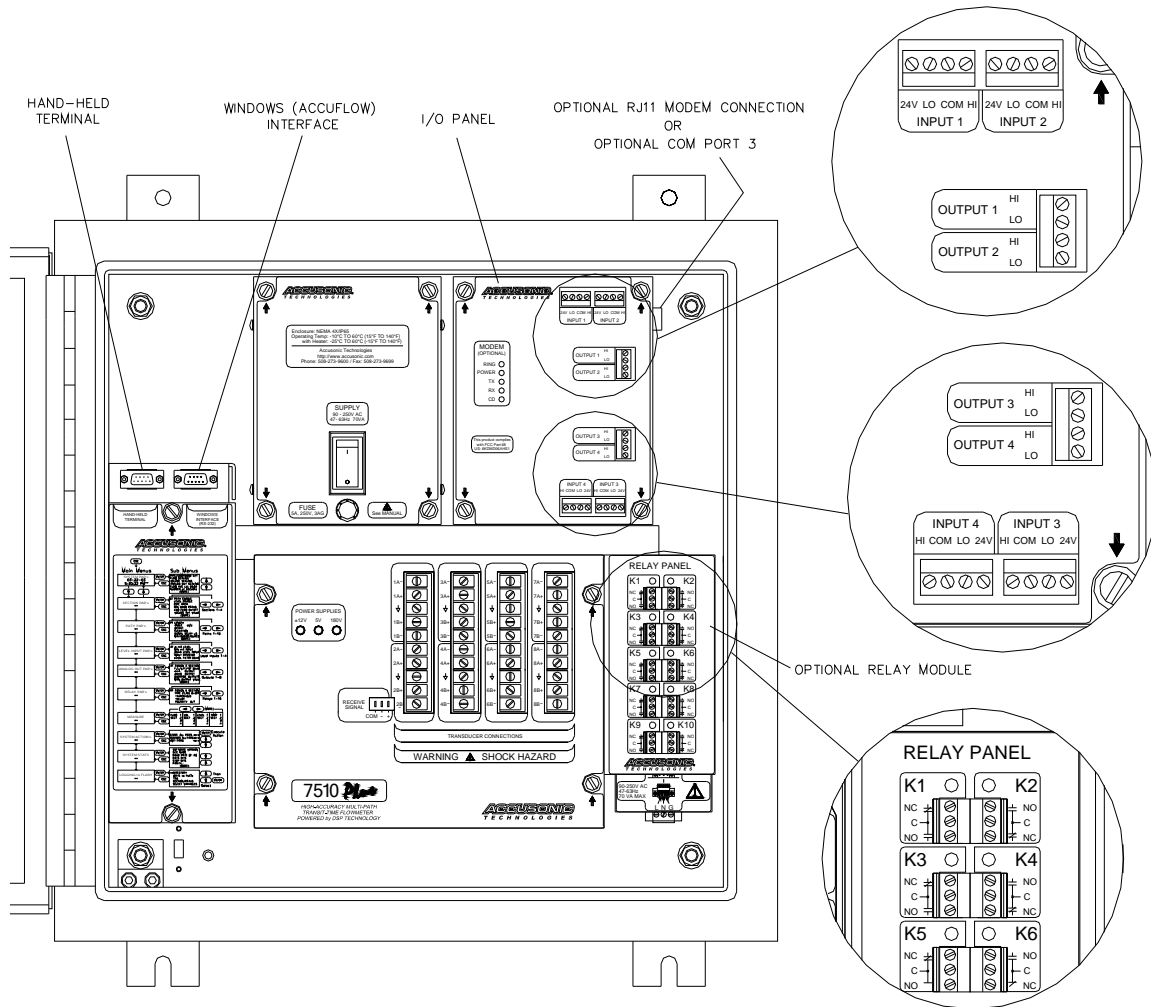

**Figure 4-6 Location of the Analog Output, Level Input, Relays, RS232 Connections and Optional Modem Connection**

### Connecting to the Relay Outputs

On most systems the terminal strip for the relays is located on the extreme right hand end of the connector panel shown in Figure 4-6. The labeling on the flowmeter and the Customer Specific drawings at the back of this manual will indicate the terminals to be used.

### Connecting the Hand-held Terminal

On initial power up during the commissioning of the flowmeter, it may be necessary to ensure that the default baud rate of 19200 has been selected. To do this, switch off the power, connect together pins 2 & 3 of the 9-pin D socket marked “Hand-held communication,” and switch the power back on.

To connect the Hand-held terminal, plug the 9 pin D plug on the lead from the terminal into the socket marked “Hand-held communication.” Connecting and disconnecting the terminal can be done at any time with the flowmeter powered or unpowered.

### **Connecting a PC**

A PC can be connected to the socket marked “*Hand-held communication*” and used instead of the hand-held terminal. The PC should be running under either a Terminal emulation or a Communications program.

Alternatively, a PC may be connected to the socket marked “*RS232*” for use with special Accusonic programs such as “AccuFlow 7510+ Flowmeter Interface”.

A “Null Modem” cable or standard serial cable with a “Null Modem adapter” is required to interconnect between this socket and a PC’s serial port. The cable or adapter can be purchased at a PC supply or electronics store.

### **Connecting a Modem**

For remote access to the flowmeter from an office, via a telephone and modem link, connect RJ11 modular cable to RJ11 jack supplied on the I/O Panel. See figure 4.6

The equipment required at the office consists of a suitable telephone connection, V.32 modem and a PC running the Accusonic program “AccuFlow 7510+ Flowmeter Interface”.

---

# Chapter 5

## Initial Setup, General Operations

This Chapter describes setup and operation of the flowmeter using the Hand-held Terminal. The alternative method using a PC with “AccuFlow” is described in Chapter 6.

*(Note: The instrument will not be damaged by entering incorrect parameters.)*

### Hand-held Terminal, Parameters and Variables

The hand-held terminal, which consists of a display and a keypad, is used to set up the flowmeter, start measurements, and observe the measured variables and status messages. Once the flowmeter starts taking measurements, it will continue to do so at a rate defined during setup. Flow measurements can be interrupted or halted from the terminal.

Set up the flowmeter by entering appropriate values for various parameters. Parameters define the geometry of each meter section and govern the operating modes of the flowmeter. All parameters are defined in Chapter 7.

Variables provide a view of measurements when the flowmeter is in normal “Measure” mode. At the end of this chapter typical display screens of the variables are shown. Chapter 7 contains definitions of the variables.

### Menus

Refer to figures 5-1 and 5-2

After power-up, the flowmeter always returns to the “Measurement” mode, with the display showing Flow. Commands and control parameters are entered into the flowmeter using menus shown on the display. To cause the menus to appear, press the **Esc** key. Some menus display the available options, (e.g., “Pipe” or “Open Channel” mode), and you choose between them; in most cases, you need to enter data. The next section describes how to access these options.

### Stepping through menus

Seven keys are used to navigate through the various menu options and to move through lists of parameters. The keys are the four cursor keys, plus **Enter**, **Esc** and **M** (or **Measure**). The shift key is not used. On the hand-held terminal, the cursor keys are:

↑,	or alternatively <b>U</b> on a PC	to move Up.
↓,	or alternatively <b>D</b>	to move Down.
←,	or alternatively <b>L</b>	to move Left.
→,	or alternatively <b>R</b>	to move Right.

The **Up**, **Down**, **Left**, **Right** keys enable you to select the required menu and to choose among the items within it.

- Pressing ↑, **U** displays the previous menu or item in the list
- Pressing ↓, **D** displays the next menu or item in the list
- Pressing ←, **L** displays the same parameter but for the previous path, level or analog output.
- Pressing →, **R** displays the same parameter but for the next path, level or analog output.

The cursor keys do not cause a wraparound from top to bottom, or from left to right.

If the **Up** key is held, the highest menu or the top parameter in the list is selected.

If the **Down** key is held, the lowest menu or the lowest parameter in the list is selected.

If the **Left** key is held, the display to the extreme left, (TENV), or the parameter for section 1 is selected.

If the **Right** key is held, the display to the extreme right (Level Input), or the parameter for section 4 is selected.

The **Enter** key invokes the currently active selection. For example,

- if you have stepped through to SECTION PARAMETERS and press Enter, you enter the Section parameter list, at the topmost parameter, Sn PATH ENABLE, where the characters “Sn” indicate the Section Number.
- If you type in a new value for a parameter and press enter, the new value is entered.
- If you have stepped through to MEASURE and press Enter, the system will enter “Measure” mode.

The **Esc** key (or **Z**) steps you out of Measure mode or out of a current list to the top of the menu. It may be pressed from anywhere in the list.

Pressing the **Measure** key (or **M**) when in any menu list, returns the flowmeter to the Measure mode. Any changed parameters will be stored in non-volatile memory (provided that the parameter *Parameter Store* in the System menu is set to 1). A message “STORING PARAMETERS” appears briefly on the terminal screen to confirm that the storing has been done.

If the parameter *Parameter Store* in the System menu is set to 0, a separate “STORE” command is required to save the parameters to non-volatile memory if this is desired.

If the flowmeter is left in any menu, it will automatically return to the Measure mode and store any changed parameters, after a delay of about 60 seconds.

## Other key operations

- **Reset** (or **#** or **S**) causes a system reset. Deletes all parameter changes unless they have been stored.
- In “Measure” mode, the **Left** and **Right** keys enable you to select alternative display screens.
- **Display** (or **T**) while viewing Variables stops the updating of the terminal display. Press again to restore updating. This is done to omit screen data from appearing on the hand-held RS232 output.
- **Pause** (or **P**) in “Measure” mode causes the flowmeter to “pause.” This enables the user to compare data such as travel times, difference times and velocities, which have been computed from the same measurement cycle.

The flowmeter automatically returns to the Measure mode after 60 seconds or if **P** is pressed again.

The Menus and Commands are:

SYSTEM PAR's:	One list of basic system parameters.
SECTION PAR's:	Up to four parallel lists, one for each flowmeter section.
PATH PAR's:	Up to ten parallel lists, one for each path.
LEVEL INPUT PAR's	Up to four parallel lists, one for each analog Level input.
ANALOG OUT PAR's	Up to eight parallel lists, two for each analog output.
RELAY PAR's	Up to 16 parallel lists, one for each Relay.

Then there are two command menus:

1. MEASURE: To put the flowmeter into the normal “Measure” mode.
2. SYSTEM ACTIONS:
  - STORE ALL PARS: To store parameters once they have been entered correctly.
  - RESTORE ALL PARS: To recall the stored parameters from non-volatile memory.
  - XMIT PARAMETERS: To transmit the complete parameter list to a data terminal.

SYSTEM STATS: Data on the software revision for information only.  
Facility to set the real-time clock and baud rate for the Hand-held terminal port..

LOGGING TO FLASH Facility to set the Variables to be logged and the interval between logs.

# 7510 PLUS GENERAL MENU

Version >= 901xxxxx

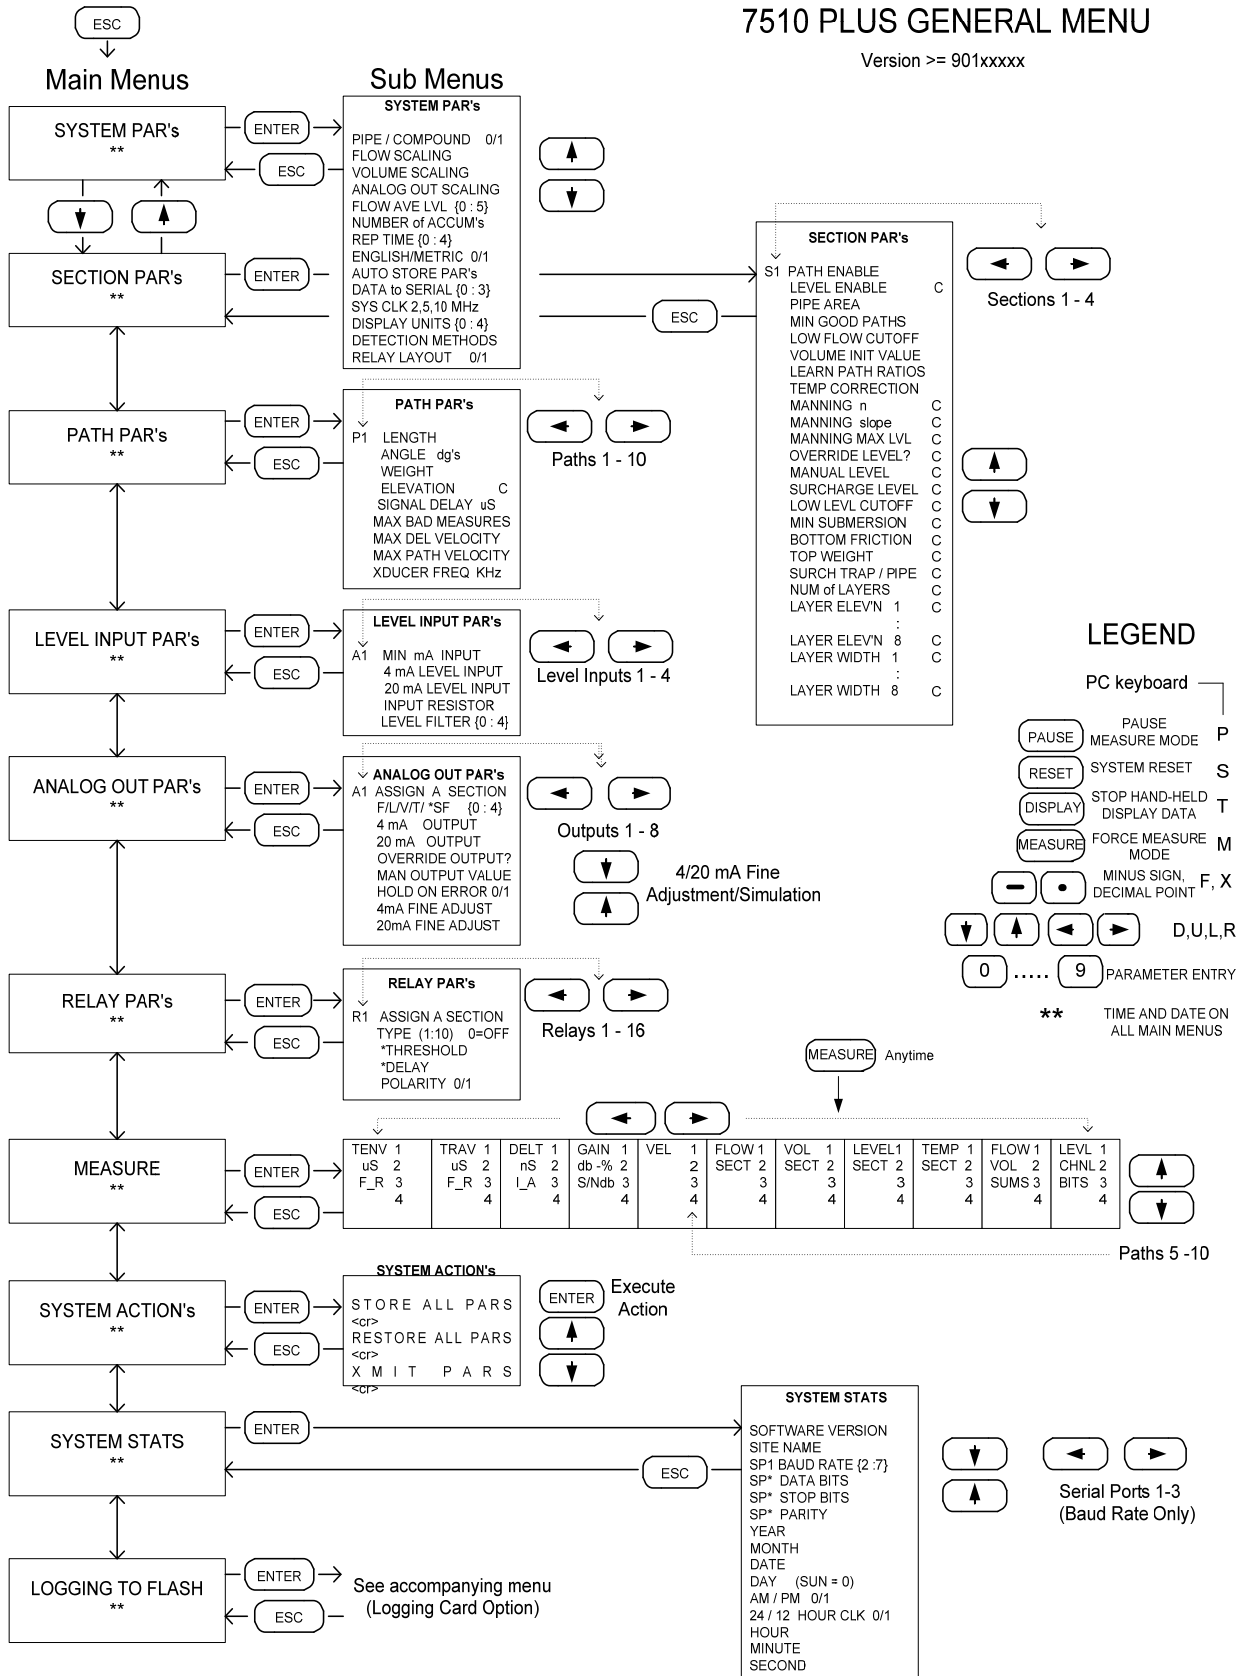


Figure 5-1



## Parameter Data Entry

All parameters are entered using the same method. If the current value of the displayed parameter is correct, then step on to the next (either down or to the right, or as desired).

The keys on the terminal used for data are:

Numbers 0 through 9, - sign (with F), decimal point (with x)

An example of the method of data entry follows, starting from the normal "Measure" mode:

Action	Terminal display shows	Comments
Press <b>Esc</b>	The Menu last used.	Measurements cease.
Press <b>↑, (U)</b> until you get	SECTION PAR's 09-16-96 14 : 28 : 56	Step up past other lists This is the Section menu heading. Date: Month - Date - Year. Time: Hrs : Mins : Secs.
Press <b>Enter</b>	SECTION PAR's S1 PATH ENABLE CUR = 000000000 ENT =	First parameter in Section 1 Current value, no path enabled Place to enter a new value.
Press <b>11</b>	SECTION PAR's S1 PATH ENABLE CUR = 000000000 ENT = 11	First parameter in Section 1 Current value, no path enabled The new value. Paths 1 & 2 enable
Press <b>Enter</b>	SECTION PAR's S1 PATH ENABLE CUR = 11 ENT = 11	First parameter in Section 1 Current value, paths 1 & 2 enabled The new value.
Press <b>↓, (D)</b> twice	SECTION PAR's S1 PIPE AREA CUR = 25.732 ENT =	Third parameter in Section 1 Current value, Place to enter a new value.
If you return to look at the Path Enable parameter of section 1, the display will be:		
	SECTION PAR's S1 PATH ENABLE CUR = 110000000 ENT =	First parameter in Section 1. Current value, paths 1 & 2 enabled. Place to enter a new value.
To return to the "Measure" mode:		
Press <b>Esc</b> then <b>Measure (M)</b>	FLOW 1 47.54 MN 1 SECT 2 LEVEL<CUTOFF 3 2 4	Flow in Section 1, in Manning mode Flow in Section 2, Level too low. Section 3 not enabled. Section 4 not enabled

## Typical Parameter List

(for a circular conduit, 10 ft. diameter)

Note: The parameters for configuring the Data Logger are not included in this listing.

### \*\* SYSTEM PARAMETERS \*\*

One list for the whole flowmeter.

PIPE / COMPOUND	0/1	1	
FLOW SCALING		1.0000	
VOLUME SCALING		1000	
ANALOG OUT SCALING		1.0000	Factory setting depending on output module.
FLOW AVE LVL {0 : 5}		3	5 minute averaging for flow.
NUMBER of ACCUM's		1	
REP TIME {0 : 4}		1	1 second
ENGLISH / METRIC	0/1	0	English units (feet)
AUTO STORE PAR's		1	
DATA to SERIAL {0 : 3}		0	
SYSCLK 2, 5, 10 MHz		10.000	Paths less than 50ft (15m)
DISPLAY UNITS {0 : 5}		5	No units displayed.
DETECTION METHODS		0	Automatic

### \*\* SECTION PARAMETERS \*\*

Separate list for each section.


#### \*\* SECTION 1 \*\*

S PATH ENABLE		1111000000	(Shows a four-path configuration.)
S LEVEL ENABLE	C	1100	Two level inputs are available for use.
S PIPE AREA		78.5	Used only under surcharged pipe mode conditions.
S MIN GOOD PATHS		1	Used only under surcharged pipe mode conditions.
S LOW FLOW CUTOFF		0.1000	
S VOLUME INIT VALUE		0	
S LEARN PATH RATIOS		0	
S TEMP CORRECTION		0	
S MANNING n	C	0.013	
S MANNING slope	C	0.010	
S MANNING MAX LVL	C	4.0000	Manning not used above this level.
S OVERRIDE LEVEL?	C	0	Level obtained from the analog inputs.
S MANUAL LEVEL	C	6.0000	
S SURCHARGE LEVEL	C	10.0000	
S LOW LEVL CUTOFF	C	0.4000	
S MIN SUBMERSION	C	0.3000	
S BOTTOM FRICT'N	C	0.8000	
S TOP WEIGHT	C	0.1	
S SURCH TRAP / PIPE	C	1	Switches to Pipe mode when surcharged
S NUM of LAYERS	C	8	
S LAYER ELEV'N 1	C	0.0000	Note: This set of layer parameters gives a good representation of a circular conduit or pipe of 10 ft. diameter. For a different diameter, multiply each <i>LAYER ELEV'N.</i> and <i>LAYER WIDTH</i> by diameter/10.
S LAYER ELEV'N 2	C	0.5000	
S LAYER ELEV'N 3	C	2.0000	
S LAYER ELEV'N 4	C	4.0000	
S LAYER ELEV'N 5	C	6.0000	
S LAYER ELEV'N 6	C	8.0000	
S LAYER ELEV'N 7	C	9.5000	
S LAYER ELEV'N 8	C	10.0000	
S LAYER WIDTH 1	C	1.1600	
S LAYER WIDTH 2	C	4.7200	
S LAYER WIDTH 3	C	8.2300	
S LAYER WIDTH 4	C	9.9300	
S LAYER WIDTH 5	C	9.9300	
S LAYER WIDTH 6	C	8.2300	
S LAYER WIDTH 7	C	4.7200	
S LAYER WIDTH 8	C	1.1600	

** PATH PARAMETERS **		Separate list for each Path.
** PATH 1 **		
P LENGTH	12.000	
P ANGLE	dg's 45.000	
P WEIGHT	0.1382	Used in surcharged pipe mode conditions
P ELEVATION	C 0.95	Elevation used in non-surcharged conditions
P SIGNAL DELAY	us 12.000	
P MAX BAD MEASURES	10	
P MAX VEL CHANGE	1.0000	
P MAX PATH VELOCITY	10.000	
P XDUCER FREQU	kHz 500.00	
** LEVEL INPUT PARAMETERS **		Separate list for each input. Not used in "Pipe" mode.
** LEVEL 1 **		
A MIN mA INPUT	4.100	
A 4mA LEVEL INPUT	0.0000	
A 20mA LEVEL INPUT	12.000	
A INPUT RESISTOR	100.00	
A LEVEL FILTER {0:4}	2	
** ANALOG OUTPUT PARAMETERS **		Separate list for each output.
** ANALOG OUT 1 **		
A ASSIGN A SECTION	1	
A F/L/V/T/*SF {0-4}	0	
A 4mA OUTPUT	0.0000	
A 20mA OUTPUT	1000.0	
A OVERRIDE OUTPUT	0	
A MAN OUTPUT VALUE	0	
A HOLD ON ERROR 0/1	0	
A 4/0 mA ERROR 0/1	0	
** RELAY PARAMETERS **		Separate list for each output.
** RELAY 1 **		
R ASSIGN A SECTION	2	
R TYPE (1:10) 0=OFF	1	Section Flow > Max 1
R * THRESHOLD	160	
R * DELAY	5	
R POLARITY 0/1	0	
** SYSTEM STATS **		
SOFTWARE VERSION	8371491	
SITE NAME	Special	A name enterable only via AccuFlow
BAUD RATE	6	19200 baud
DATA BITS	8	
STOP BITS	1	
PARITY	0	
YEAR	98	
MONTH	04	
DATE	20	
DAY (SUN=0)	1	
AM / PM 0/1	1	
24/12 HOUR CLOCK 0/1	0	
HOUR	14	
MINUTE	28	
SECOND	56	

## Display of Variables

All the display screens for the Variables have the following format.

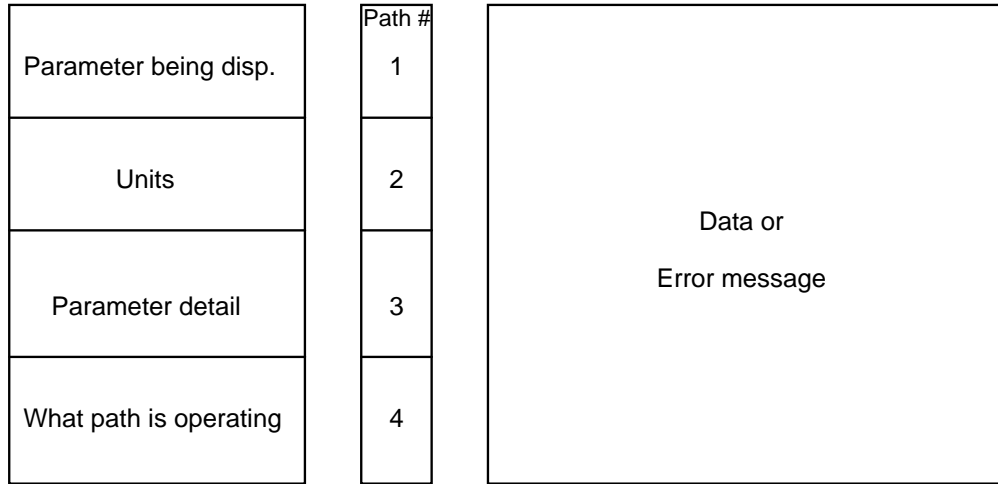

Variables are displayed only when the flowmeter is in “Measure” mode. Immediately after power up, the flowmeter will enter the “Measure” mode, and display whichever display had been selected when the flowmeter was last put into “Measure” mode..

When displaying variables concerning Path data (TENV, TRAV, DELT, GAIN, VEL), the Up and Down cursor keys enable the screens for the higher numbered paths (4 through 8) to be displayed.

Examples of typical screens from the most left (TENV) to most right (Level) are:

<p>TENV 1 1087      1089          us    2 1135      1138          F_R   3            2    4</p>	<p>Forward and Reverse Envelope times for path 1 in <math>\mu</math>s          Indication of units of display <math>\mu</math>s, Envelope times for path 2          Indicates that first value is Forward time, second is Reverse time          blanks indicate path 3 and path 4 are not enabled</p>
<p>TRAV 1 1079      1081          us    2 1128      1031          F_R   3            2    4</p>	<p>Forward and Reverse Signal travel time through water for path 1 in <math>\mu</math>s          Forward and Reverse Signal travel time through water for path 2 in <math>\mu</math>s          As for TENV          As for TENV</p>
<p>DELT 1 2107      2215          ns    2 3471      3385          I_A   3            2    4</p>	<p>Instantaneous and averaged Travel time difference for path 1, in ns.          Indication of units of display, nano secs. Travel time difference path 2,          Indicates first value is instantaneous, second value is averaged.          As for TENV</p>
<p>GAIN 1 10    97    38          dB-% 2 27    103   22          S/NdB 3            2    4</p>	<p>Path 1 Amplifier gain in dB, signal in % of max. signal / noise in dB          Path 2 Amplifier gain in dB, signal in % of max. signal / noise in dB          Indication of units of display. Blanks indicate Paths 3 &amp; 4 not enabled.          Changing number after P, indicates which paths are operating,</p>

VEL	1	8.7543	4765	E	Water velocity path 1, Velocity of sound path 1. Detection method.
	2	9.7564	4768	Z	Water velocity path 2, Velocity of sound path 2. Detection method.
		3			Path 3 not enabled
2		4			Path 4 not enabled
FLOW	1	25.583	MN	1	Flow in section 1, Manning formula in use, Level #1 value used
SECT	2	157.48	SP	F 4	Flow in section 2, Single Path Integration, Pipe Full, Level #4 used
		3			Section 3 not configured
2		4			Section 4 not configured
VOL	1	2367854.			Volume Section 1.
SECT	2	985.3731			Volume Section 2.
		3			Section 3 not configured
2		4			Section 4 not configured
LEVEL	1	3.8682	MN	1	Arbitrated Level value for section 1, using Level input # 1.
SECT	2	16.793	SP	F 4	Arbitrated Level value for section 2, using Level input # 4.
		3	0.0000	4094	Section 3 Level not configured
2		4	0.0000	4094	Section 4 Level not configured
TEMP	1	56.789	MN	1	Water temperature in Section 1
SECT	2	57.234	SP	F 4	Water temperature in Section 2
		3			
2		4			
FLOW		183.06			The sum of the Flows in Section 1 & 2
VOL		2368839.			The sum of the Volumes in Section 1 & 2
SUMS					Indicates that this display is for the sum of the section data.
2					
LEVEL	1	3.8682		750	Level input #1 value, Analog input = $750/4095*50 = 9.157$ mA
CHNL	2	0.0000		217	Level input #2 value, Analog input = $217/4095*50 = 2.65$ mA
BITS	3	10.005		4094	Level input #3 value, Analog input $\square 50$ mA
2		4		1437	Level input #4 value, Analog input = $1437/4095*20 = 17.54$ mA

**Note**

*The figures for Analog Input assume an input load of 100Ω  
In "Pipe" mode, the Level displays have no meaning*

## Serial Data Format on RS232 Hand-held Communication Port

When the System Parameter *Data to Serial* is set to 1, the data stream is output each measurement cycle.

Data are only output for sections, stages or paths which are configured.

A typical data string for a dual section flowmeter with Terminal Display Off (**Display** or **T** pressed).

*Note: If the terminal display is left on, extra characters are inserted in between logs. The extra characters are those that are changed on the screen, therefore, the format is not fixed.*

```
LDF125583#LDF2157480#LDO1183435#LD02746400#LDS14538#LDS20#LDS310005#LDS416793#LDT12#
LDT24#LDE153#LDE248#LDV110006#LDV2263#LDG116#LDG227#LDC14798#LDC4796#LDB194#LDB2
98#
```

where

LDF125583#	Log Data Flow Section 1	= 25.583	
LDF2157480#	Log Data Flow Section 2	= 157.480	
LDO1183435#	Log Data Volume Section 1	= 183435	
LDO02746400#	Log Data Volume Section 2	= 746400	
LDS14538#	Log Data Level #1	= 4.538	
LDS20#	Log Data Level #2	= 0	
LDS310005#	Log Data Level #3	= 10.005	
LDS416793#	Log Data Level #4	= 16.793	
LDT12#	Log Data Integration Type Section 1	= 2	See below
LDT24#	Log Data Integration Type Section 2	= 4	See below
LDE153#	Log Data Temperature Section 1	= 53	
LDE248#	Log Data Temperature Section 2	= 48	
LDV110006#	Log Data Velocity Path 1	= 10.006	
LDV2-263#	Log Data Velocity Path 2	= - 0.263	Reverse flow.
LDG116#	Log Data Gain Path 1	= 16dB	
LDG227#	Log Data Gain Path 2	= 27dB	
LDC14798#	Log Data Velocity SND Section 1	= 4798	
LDC24796#	Log Data Velocity SND Section 2	= 4796	
LDB194#	Log Data Gain Path 1	= 94%	
LDB298#	Log Data Gain Path 2	= 98%	

The types of Integration are:

- 0 = No integration, section failed
- 1 = "Pipe"
- 2 = Manning
- 3 = Single path
- 4 = Full
- 5 = Multi-path.

RS232 signals            19200 baud, 8 data bits, no parity, 1 stop bit, no handshaking protocol.  
 The baud rate may be changed by changing a parameter under SYSTEM STATS.

## Serial Data Formats on Optional RS232 Communication Port 3

When the System Parameter *Data to Serial* is set to 2, the following data stream (called “Argus”) is output every 30 measurement cycles.

T ±FFFFF SSSS TTTT UUUU EEEE +00000 00

Where ±FFFFF is the flow x 100, SSSS arbitrated level x 1000, TTTT is Level one x 1000, UUUU is Level two x 1000.

When the System Parameter *Data to Serial* is set to 3, the following data stream (called “Drax”) is output every measurement cycle.

±vvvv ±wwww ±xxxx ±yyyy aaaa bbbb cccc dddd

Where the first four fields are the water velocities x 1000, and the second four are the velocities of sound for paths 1 to 4. All the values are instantaneous, with no filtering.

## Display of Variables on the Optional LCD

Depending on the number of sections which have been configured, different display formats are provided.

If only one section is configured in “Compound” mode, the display format can be chosen to be either:

FLOW	25.583	l/s
VOL	2367854.	Cm

or:

FLOW	25.583	l/s
LEVEL	3.8682	m

The selection is made depending on the display screen chosen for the Hand-held terminal, when the measure mode is entered.

To select “Flow and Volume” to be displayed, from Measure mode, select any of the Hand-held terminal screens, then press **Esc** then **Measure**.

To select “Flow and Level” to be displayed, from Measure mode, select the “Level” screen on the Hand-held terminal, then press **Esc** then **Measure**.

If only one section is configured in “Pipe” mode, the display format is always of Flow and Volume.: The units of Flow and Level are selected by the parameter *DISPLAY UNITS* in the System menu.

If two sections are configured in “Compound” mode, the display format is:

FW	25.583	157.48	l/s
LV	3.8682	16.793	m

If two sections are configured in “Pipe” mode, the display format is:

FW	56.987	157.48	l/s
VL	67854.	985.37	Ml

If three or four sections are configured in either “Compound” or “Pipe” mode, the display shows the variable selected for display on the Hand-held terminal. (Flow, Volume, Level or Temperature).

The variable and units are shown to the left of the screen.

The values of the variables for sections 1 & 2 are on the top row, for sections 3 & 4 on the bottom row.

FW1	25.583	2	157.48
1/s 3	67.543	4	98.765

## Operation of Integral Data Logging

The integral Data Logger may be configured to store any of the flowmeter variables. It can be setup through the hand-held terminal, or the AccuFlow Windows® interface. The data may be retrieved only through use of AccuFlow.

Operation through AccuFlow is described in Chapter 6, while the hand-held terminal parameters for the Data Logger are described in Chapter 7. Refer to data logging menu figure 5-2.

The method of setting the Data Logger parameters using the Hand-held terminal differs from that for setting most other flowmeter parameters, in that all the settings (except the time interval) are choices of whether to select or not to select a particular option. To select an option, simply press the **1** key; to omit the option, press the **0** key.

To configure the logger, escape from Measure mode and go down through the various menus using the ↓ key to the last menu “Logging to Flash”. Press **Enter**.

Four menus will be presented:

DIRECTORY	Gives information on the length of the log and the time before the log file is full.
WRITE TO FILEs	Offers choices of which file to use (Scratch or main), other options and the “ <i>RECORD INTERVAL</i> ” or period between logs.
TAG SECTION / PATHS	Offers choices of which Sections and Paths are in use and for which data are required to be logged.
SELECT VARIABLES	Offers choices of the variables to be logged for the previously selected Sections and Paths.

To select a particular menu, use the ↑ or ↓ keys to move the cursor (>>) to the desired menu, and press **Enter**.

To select a particular item, use the ↑ or ↓ keys to move the cursor (>>) to the desired item, and press **1**.

To set the *RECORD INTERVAL*, set the time in seconds, minutes and hours by typing in the required figures for the units of time pointed to by the cursor.

**Notes:** The **Enter** key is not used for this routine.

The flowmeter will not automatically return to the Measure mode from the LOGGING TO FLASH menu.

To return to Measure and (if set) to log data, first exit to the main menu by pressing **ESC**, and then press **Measure** or the **M** key

---

# Chapter 6

## “AccuFlow” Windows Interface

This Chapter describes the alternative method of setting-up and operating the flowmeter using the Windows interface.

*(Note: The instrument will not be damaged by entering incorrect parameters.)*

### Application Overview

The Accusonic 7510+ Flowmeter Windows application provides a user friendly interface to the flowmeter. From the application, the user can enter and examine flowmeter parameters, control the flowmeter measurement cycle, graph real time or historical data, and conduct diagnostic tests.

A wizard interface is provided to make common tasks easier by providing step-by-step instructions. From the wizard the user can load in the last used configuration, open an existing configuration, look at previously logged data graphically, connect to a flowmeter and begin measurements, or setup flowmeter parameters through use of the setup wizard.

The main application window provides the user with the ability to setup system and flowmeter parameters, control the flowmeter measurement mode, display graphical data, manage data logging operations, and use a variety of flowmeter diagnostics.

### Wizard Interface

The wizard interface provides step-by-step instructions to the user to accomplish ordinary tasks. Each step will consist of a dialog window that will “ask” the user for information about what is required, or about setup parameter information. Every step has an available help button, and pressing F1 will bring up context sensitive help on the specific step. The main wizard interface provides buttons for the following tasks:

#### Receive Parameters from Flowmeter

When this button is selected, the application in the PC will connect with the flowmeter and request its parameters. After having successfully received the parameters, the user is given the option of saving them in a file.

#### Send Parameters to Flowmeter

When this button is selected, the application in the PC will send the parameters contained in the PC to the flowmeter. The parameters may have been from a file that was opened or a configuration that was created using the wizard. Any parameters the flowmeter had stored will be overwritten.

#### Setup Wizard

The setup wizard provides step-by-step instructions to setup all the parameters necessary to operate a flowmeter. The setup procedure is broken down into the following steps, each of which has its own dialog window:

#### Firmware Version Window

In this setup wizard window, the user inputs the firmware version of the flowmeter that is being interfaced. Inputting the correct firmware version will ensure proper parameter transfer.

### **Sections Window**

In this setup wizard window the user enters the number of sections that the flowmeter will be measuring. A section is any single pipe, conduit, channel, river, etc. where flow is to be measured. So if there are two pipes, there are two sections. In addition, the user will enter the type of section, open channel, pipe, or compound. An open channel is a section that is never full, a river or canal, for example. A pipe is a section that is always full, like a water main. A compound section can be full at some times, but not full at others. Sewers are usually compound sections.

### **Units of Measure**

In the measurement wizard window, the user selects the units in which flow and volume are to be measured and reported. Standard choices are provided for flow and volume, but the define buttons give the user the option of defining units that are not on the list. After selecting the define button, the user is asked for a unit name, and a scale factor. The unit name will be displayed on graphs and future menu choices, and is added to the list of standard units. The scale factor is a value by which the flow or volume measurements are to be multiplied in order to convert the measurements to the desired units. The flowmeter measures flow in cubic feet per second (CFS) and volume in cubic feet when English units are chosen, and measures flow in  $\text{m}^3/\text{s}$  and volume in  $\text{m}^3$  when metric units are chosen. The scale factors must be chosen to convert from these units. For example, To convert the flow measurement units to  $\text{m}^3/\text{hour}$ , the scale factor is 3600. This factor essentially converts seconds to hours.

In addition, the flow averaging period is entered. The flow averaging period is the amount of time that the flow measurements will be averaged over.

### **Path Enable Window**

In the path enable wizard window, the user will assign paths to a section by using the path checkboxes. At least one path must be enabled to move on. Then the low flow cutoff may be entered. If the absolute value of the computed flowrate is below the low flow cutoff, the flow is set to zero.

If the section always runs full (pipe mode), then the window will also ask for the section’s shape and size, as well as the minimum number of good paths and whether learn path ratios should be on. The minimum number of good paths is the number of good path measurements which must be present to calculate flow. The contribution to the flow calculation from any failed paths will be provided by the replacement routine. The default is 4.

Learn path ratios enables a “learning” run that records information that is used in the case of path failures. In the event of one or more paths failing, a routine is implemented which enables flow to be computed from the remaining good paths. The contributions towards the flow measurement from the failed paths is replaced by a figure generated from the remaining good paths, weighted by the historic flow contribution ratios for all the paths. A table of time-averaged historic flow components is recorded during commissioning, involving about 1000 readings. The record is made automatically by the flowmeter in what is termed a “learning” run. The “learning” routine is implemented by checking the Learn Path Ratios checkbox. The learning run may be stopped by unchecking the checkbox, or allowing the flowmeter to complete the 1000 readings.

If the section does not always run full (open channel or compound), bottom friction and top weighting coefficients are to be entered. The bottom weighting and top weighting coefficients are used to extrapolate the velocities from the lowest and highest paths to the section bottom and/or top (or water surface).

### **Section Shape**

For sections that do not always run full (open channel or compound), the section shape is requested. The section shape window gives two choices, round and other. Round is for circular pipes (they are assumed to be perfectly circular). Other is for sections that cannot be described so easily.

**Round**

After selecting round for the section shape, the wizard asks for the radius of the pipe. This should be the inner radius. When “Round” is selected, all layer data are automatically computed by the wizard.

**Other**

After selecting “other” for the section shape, the wizard asks for the number of layers, their elevations and widths. The layers describe the size and shape of the section. These should be available from the survey data taken at installation.

**Flow Calculation When Level is Surcharged**

For compound sections only, the flow calculation method when the level is surcharged is requested. In this wizard window, the user selects the integration method to be used when the section is surcharged (running full). For more information about integration methods, please see Chapter 3. The default for round pipes is pipe integration. For other shapes, the default is trapezoidal integration.

**Level Input Enable Window**

For sections that do not always run full (open channel or compound), the level input enable window is displayed. In this wizard window, the user enables the analog inputs for level (stage) measurements by selecting the appropriate checkbox for the section. For pipe and compound sections, the user is also asked for the level at which the section is surcharged (full). The user should also enter the level below which flow is defined as zero. There is also an option to enter a manual value for the level input, overriding the analog inputs. If override analog level input is checked, an entry box becomes visible for a manually entered value. The value entered will override all flowmeter calculated level values, and the flowrate will be calculated on the basis of the manually entered level. This option may be used for testing purposes.

**Level Input Setup**

For sections that do not always run full (open channel or compound), the level input setup is requested. In this window the user enters the level values for 4 and 20 mA. For these values the user should enter the elevation of the water surface at which the analog input is 4.0 or 20.0 mA. For example, if at 10.0 feet, the analog input is 20.0 mA, enter 10.0 for “Level at 20 mA”. This value may be in the range of -50 to 50. Also the level filtering period should be entered. This is the period, in measurement cycles, that the level inputs will be averaged over. For example, if the measurement update rate (repetition rate) is 2 seconds, and the level filtering period is 15 cycles, then the averaging period is approximately 30 seconds. The tabs at the top of the “notebook” window can be clicked to switch from one input to another.

**Manning Parameters**

For sections that do not always run full (open channel or compound), the Manning equation parameters are requested. In this wizard window, the user is asked if they wish to use the Manning formula, and if so, for the parameters necessary. For more information on the Manning formula, see Chapter 3.

**Path Setup**

This window prompts the user for path parameters. The path length, angle, and elevation should be available from the survey data. The transducer model number should also be available in the as built data. If a new transducer model number needs to be added, select the “add to list” button. After that, a transducer model number, frequency, and signal delay must be entered. Elevations are not required for sections that always run full, and are not displayed.

**Output Setup**

In the output setup window, the user can define what section a given 4- 20 mA analog output is assigned to, what type of data is output, the output range and the output under error conditions. An output can be assigned to any active section, and can reflect flow, level, average velocity, temperature, or total flow data. In the 4 mA boxes the user should enter the value of the variable chosen for the analog output for which an output of 4.0 mA is desired. For example, if flow has been chosen for output, and the units are m<sup>3</sup>/s, enter -1.5 if it desired to have a 4.0 mA

output at  $-1.5 \text{ m}^3/\text{s}$ . 4.0 mA is the lowest valid output. A similar procedure should be used for the 20 mA entry. It is acceptable for the 4 mA output to represent a variable value that is either greater than or less than that of the 20 mA output

Under conditions where the chosen variable is below the selected range, 4 mA will be output. Under conditions where the chosen variable is over the selected range, 20 mA will be output. If a fault occurs, the output will either be held at the last known good value, or be set to 4 mA, depending on the choice made in the “On Error” box.

There is also an option to enter a manual value for the analog output, overriding the calculated outputs. If override analog output is checked, an entry box becomes visible for a manually entered value. The value entered will override all flowmeter calculated values, and the output current will be calculated on the basis of the manually entered value. This option may be used for testing purposes.

### Relay Setup

In the relay setup window, the user can define what section a given relay is assigned to, what function the relay has, the threshold value, the polarity, and the delay before operation. Relays can be used as indicators that the section flow is over a threshold value, the section level is over a threshold, the sum of all the section flows is over a threshold, the section has failed, path substitution is active (pipe mode only), or as a section or sum of sections volume totalizer. For those functions that require it, the threshold value is entered in the appropriate units. The user can also define what polarity the relay is to be when operated. The delay before operation is in measurement cycles, so that if the measurement update rate (repetition rate) is 2 seconds, and the delay is 3 cycles, then the delay is approximately 6 seconds.

### Open Setup

This choice allows the user to open a previously saved configuration file. A standard open file dialog box is shown, from which the user can select the desired file. Once the file is loaded, it can be used for flowmeter measurements, or can be modified.

### Review Historical Data

The review historical data option allows the user to view graphs of previously logged data. When the button is selected, a flowmeter ID and data range window is displayed. In this window, the user selects the ID of the desired flowmeter. The start and stop date calendars will automatically update to show the full range of logged data for that flowmeter. The user can use the calendars to select a smaller range by clicking the arrows at the top of the calendars to change the month, and by clicking the desired date. The time is selected by using the list boxes below the calendars.

Once the ID and date/time range are selected, the user can choose which graph to be viewed. The *view data by variable* graph will display either flow or level for multiple sections. For example, in the view by variable graph, the user can graph flow for sections 1 through 4. Then they can select level for those sections. Flow and level cannot be graphed together on this view, however. The *view data by section* graph allows the user to look at flow, level and velocity for an individual section. Because there can be up to 10 velocity data curves in a section, the velocity graph is separate from the *flow/level* graph. If only one graph is selected, it will appear as a full page. If both flow/level and velocity are selected, they will share the screen. Please see “using graphs” for more information about their features.

### Connect / Measure

If Connect / Measure is chosen, the application will connect to the flowmeter, and upload its parameters. The uploaded parameters will be used in building the graph. After parameter loading, measurements will begin, and the graph will start to display data. Initially, there is a delay in acquiring the data, and graph options are disabled. They are re-enabled when the initial acquire period is complete. Please see “using graphs” for more information about their features.

## File Menu

The file menu provides access to basic file management operations.

### File / New

File / New starts the setup wizard in order to allow the user to create a new configuration file. The configuration initially contains only the default values.

### File / Open

Choosing File / Open opens an existing configuration file. When this menu choice is selected, the standard windows *open file* dialog box will appear with the current directory and \*.cfg configuration files selected as defaults. Making a selection in this dialog and selecting OK will load in the selected configuration file. This will overwrite any previously loaded configuration. Once the file is loaded, it can be used for flowmeter measurements, or can be modified.

### File / Save

This allows the user to save the currently loaded configuration file, while giving it a new name. An existing file name may be chosen, or a new name created. Choosing File / Save As opens the standard *save file* dialog box which is similar to the *open file* box described above.

### File / Print

The File Print item allows the user to print the contents of the configuration file. This can be useful for record keeping. The print uses the Windows default printer, unless it is changed using the Setup button.

### File / Exit

This item exits the flowmeter program.

## Configure Menu

The configure menu allows the user to make modifications to the currently loaded configuration. The configure menu has the following choices:

### Communications

The communications configure menu allows the user to make modifications to the communications setup. The flowmeter has particular communications formats, which are reflected in the defaults provided here. In most cases, the only two parameters that should require modification are the Comm. port number and the maximum consecutive communication errors.

#### Comm Port

The user chooses the communications port that is connected to the flowmeter.

#### Maximum Consecutive Communication Errors

This allows the user to enter the maximum consecutive number of communication errors that are to be tolerated without declaring a failure. The default is 3. A single communication error may take up to 10 seconds to confirm.

## **Dial Modem**

The dial modem selection allows the user to choose a modem and a phone number, and establish a modem connection. After dial modem is selected, the user must choose a modem to use from the provided list. If “None” is chosen, that serial comm. port will be used directly with no modem, otherwise, the selected modem will be used. If a modem is selected, the next dialog requests a phone number to dial. The user can select a number from the list, or add one by clicking on “Add phone number”. If the user wishes to configure the modem, click on “Set up modem”. This will display the standard Windows95 modem properties dialog. Beware that these settings apply to all programs, not just AccuFlow. Once the phone number is entered, the modem will attempt a connection. It will retry 3 times, waiting one minute in between attempts. The connection attempt can be canceled at any time.

## **Hang Up Modem**

The hang-up modem selection allows the user to break the existing modem connection and hang up the phone.

## **Get Flowmeter Version**

When get flowmeter version is chosen, the application will attempt to connect with the flowmeter, and will ask for its version number. It will be reported to the user and stored in the current configuration.

## **System**

The system configure menu allows the user to make modifications to the currently loaded configuration in the areas of section type, number of sections, measurement units, flowmeter RS-232 enabling, and other general parameters. For definitions of these parameters, please see the parameter definition section in Chapter 7.

## **Section**

The Section configure menu allows the user to make modifications to the currently loaded configuration in the section parameter area. For definitions of section parameters, please see the parameter definition section in Chapter 7. From the section menu, the path, level, and relay setup windows can be accessed.

## **Path**

The path setup window allows the user to make modifications to the currently loaded configuration in the path parameter area. For definitions of path parameters, please see the parameter definition section of this manual in Chapter 7.

## **Level Inputs**

The level inputs setup window allows the user to make modifications to the currently loaded configuration in the level analog input area. For definitions of level parameters, please see the parameter definition section of this manual in Chapter 7.

## **Analog Outputs**

The analog outputs configure menu allows the user to make modifications to the currently loaded configuration in the analog output area. For definitions of analog output parameters, please see the parameter definition section of this manual in Chapter 7.

## **Relay Setup**

The relay setup configure menu allows the user to make modifications to the currently loaded configuration in the relay area. For definitions of relay parameters, please see the parameter definition section of this manual in Chapter 7.

## **Operate Menu**

The operate menu provides the ability to connect to the flowmeter and send or receive parameters, to begin measurements, or to review historical data.

When *receive parameters* is selected, the application in the PC will connect with the flowmeter and request its parameters. After having successfully received the parameters, the user is given the option of saving them in a file.

When *send parameters* is selected, the application in the PC will send the parameters contained in the PC to the flowmeter. The parameters may have been from a file that was opened or a configuration that was created using the wizard. Any parameters the flowmeter had stored will be overwritten.

When *Connect / Measure* is chosen, the application will connect to the flowmeter, and upload its parameters. The uploaded parameters will be used in building the graph. After parameter loading, measurements will begin, and the graph will start to display data. Initially, there is a delay in acquiring the data, and graph options are disabled. They are re-enabled when the initial acquire period is complete. Please see using graphs for more information about their features.

When *Set Flowmeter Clock* is selected, a dialog will appear for the user to enter in the desired date and time to be sent to the flowmeter. It will default to the current time according to the PC clock. After making the desired entries, click on Set Meter Clock to send it to the flowmeter. If you wish to see the date and time according to the flowmeter, click on Get Flowmeter Clock.

*Show Differences* can be used to verify that the configuration sent to the flowmeter has been received and stored properly. When show differences is chosen, the application connects with the flowmeter and requests its parameters. When they are received, they are compared to the configuration currently loaded in the PC. The parameters in the PC are shown on the left as “Local Configuration”, while the parameters on the right are the “Flowmeter Configuration”. Only those parameters that are different are shown, so that if the configurations are identical, both lists will be blank. It is common for the section volume parameters to be different, as they are updated with every measurement. Clicking on the Re-Transmit Parameters button sends the PC configuration to the flowmeter. After it has been sent, it is read back and any differences are shown again.

The *Review Historical Data* option allows the user to view graphs of previously logged data. This function is the same as described in the wizard interface section.

## **Diagnostics Menu**

The diagnostics menu allows the user to test the flowmeter system, and to view detailed path variables that are not ordinarily used. The diagnostics menu has the following choices:

### **Comm Port Test**

If the Comm. port item is chosen, a window to test the Comm. port is opened. The comm. port test tests the function of the port on the PC. It does not test the flowmeter communications. Before testing the port, the user must put a wrap-around connector that connects the transmit and receive lines on the desired port. When the test port button is selected, the port will output patterns and read them back. It will compare the patterns to make sure that they are the same. If they are, it will display a good status in the memo box. If they do not match, it will display the expected pattern, and the actual pattern received. If there is no response in one second, it will display a “no response” message.

The port menu item in the Comm. port test window can be used to configure and open the port. The Configure menu choice allows the user to set the desired port, the baud rate, number of data bits, parity, stop bits and flow control. These are set up initially to work with the flowmeter, and usually should not require modification. The *Open menu* choice opens the desired port for communications. This must be done or a “no response” error will occur.

### **Path Variables**

The path variables window allows the user to look at all the data coming from the flowmeter in tabular form. It is displayed as a multiple tab notebook. Each tab contains the variables for a given section. In addition, there is a

settings tab that allows the user to choose only those variables and paths required. The user may choose to have the table continuously updated, or to pause the updates.

Before beginning measurements, the user is asked if the data are required to be logged. If so, the data logging menu is displayed. The data logging menu allows the user to enable and setup data logging to the PC. Checking enabled will allow data to be saved to the PC. The name of the data to be saved can have a maximum of 8 characters. This name is actually the sub-directory name where the data files will be stored. The data can be scheduled for every reading (about one every three seconds), or a set interval. The data recorded at the set interval, i.e. 15 minutes, will be the current value of the data, not an average. Once the setup is complete, clicking OK, will cause the measurements to begin.

This window is also used to display data log data. All of the variables below remain the same, but the PC is not connected to the flowmeter. The pause and resume buttons are replaced by record number and choose a new log controls.

The variables displayed are section, path and level variables, and are as follow:

**Section**

Section variables are flow, average level, section volume, average velocity, temperature, integration method, and section status. The status indicates if the section is full, has failed, has invoked path substitution because a path has failed, or is on a “learning” run.

**Path**

Path variables are velocity, gain (dB or %), signal-to-noise ratio, travel time, time difference, envelope time, path status (out of the water, failed, velocity error), and path detection method.

**Level**

Level variables are level and level status (good, greater than maximum layer height, below minimum level).

## Scope Mode

Scope mode allows the user to look at the received transducer waveforms in a window that looks much like an oscilloscope. Scope mode will put the flowmeter into pipe mode, so that any selected paths will be active without regard to the water level, and will freeze the 4-20 mA analog outputs at their current values. The window displays the forward waveform in the top graph, and the reverse in the bottom graph. One path at a time may be displayed. The path to be traced may be set by using the Path Number spin control. There are a number of controls available. They are described below.

## Single Sweep

When this button is clicked, the “oscilloscope” contacts the flowmeter and obtains the waveform to be displayed. Because of the volume of data, this process usually takes 3 to 4 seconds. Only one trace is taken in single sweep mode.

## Continuous

When this button is clicked, the “oscilloscope” continuously contacts the flowmeter and obtains waveforms.

## Pause

Clicking on the pause button stops the “oscilloscope” from acquiring data after the latest waveform is taken. It is most commonly used to stop the continuous mode.

## Mouse Control

When the mouse is moved into a graph that has a waveform displayed, a sidebar appears. It will follow the mouse until the mouse is clicked or the mouse exits the graph area. When the sidebar is visible, it’s coordinates are displayed on the panel above the graph in engineering units (time and volts). Each graph can have its sidebar moved and set independently.

## Zoom Level

Zoom level allows the user to control the length of the time period to be displayed. A value of 1 displays the smallest time period (usually 50  $\mu$ S), or the maximum “zoom”. A value of 8 displays the longest period (usually 400  $\mu$ S). After the zoom level is selected, a new waveform must be obtained by clicking either single sweep or continuous.

## Display Variables

If display variables is checked, velocity, gain, time difference, and travel time will be obtained in addition to the waveform.

## Waveform/Envelope

This control is used to select what kind of waveform is displayed. Waveform displays the actual received signal. Envelope displays the envelope of the received waveform as computed by the flowmeter.

## Build History

Normally, an old waveform is erased every time a new waveform is obtained and displayed. Build history allows the waveforms to display on top of each other. This can show any differences from measurement to measurement.

## Restore Paths

Clicking restore paths will set the path enables and the pipe/open channel mode back to the state they were in prior to entering scope mode. The analog outputs will also become active.

## Open File

A previously saved file can be opened and displayed. The variables are not active.

## Save File

The currently displayed waveform is saved as a \*.dat file.

### **Erase**

Clicking the erase button clears both graphs.

### **Print**

Print prints a copy of the scope mode window.

### **Flowmeter Reset**

If flowmeter reset is selected, the application will attempt to connect to the flowmeter and send its reset command. A reset is the software equivalent of flipping the on/off switch.

## **DataLogging Menu**

The DataLogging menu allows the user to set up and retrieve data logs stored in the flowmeter. The DataLogging menu has the following choices:

### **Data Log Setup**

Choosing DataLogging/Data Log Setup from the main menu allows the user to set up the parameters for data logging at the flowmeter. This capability is optional, and requires the flowmeter to have the data logging memory card.

First choose the kind of log file you desire, main or temporary. The main file provides 192k of capacity, while the temporary provides only 16k. Typically, the temporary memory is used only for short term debugging. In addition, a measurement status can be logged with every measurement by checking “Log Status”. The parameters in use may also be recorded by checking “Log Parameters”. Normally, the log will overwrite memory when the logging memory is completely full, always keeping the most recent data. To prevent any overwriting, check “Stop logging when memory is full”. Next, choose a logging interval in hours, minutes and seconds. The maximum interval is 24 hours.

Finally, choose the sections, paths and variables you wish to log. When complete, click on “Send Setup to Meter”, and the parameters will be sent to the meter, and logging will begin. This action will start a new logging file, so any previous data will be overwritten. You can also view the flowmeter setup by clicking “Get Meter Setup”, the meter must be in measure mode for successful setup transfer.

As changes are made to the setup, the amount of memory capacity in terms of logging hours is displayed. For example, if you log section 1 flow at 1 hour intervals, the memory capacity is 98,280 hours (about 11 years). The message will say you have chosen 2 parameters because time is always logged.

## Retrieve Logged Data


Choosing DataLogging/Retrieve Logged Data from the main menu allows the user to retrieve data that has been logged at the flowmeter. This capability is optional, and requires the flowmeter to have the data logging memory card.

First, choose how much data to retrieve, the “most recent”, or “all data”. If you choose most recent, you must click on the “Retrieve Directory” button. This will provide you with the number of “blocks” available, and the number of hours of data stored in a block. Choose the number of blocks you wish to retrieve. For example, if 8 blocks are available, each with 1 week of data, and you wish to retrieve 2 weeks of data, select 2 blocks.

Next, choose a data name. This name has a maximum of 8 characters, and cannot have spaces or special characters. Now click on “Retrieve Data”. Each data block takes about 45 seconds to retrieve. If the data is corrupted, this time can be longer. If you check for confirmations, you will be given the option of not retrieving a particular block.

Once the data is retrieved, it is stored in the data\_log directory in a sub-directory with the name you provided. Flow, level and velocity are stored in section sub-directories, and can be viewed in “Review Historical Data.” Section volume and temperature are also stored in the section sub-directories. The sum of flows and sum of volumes are stored in the “S” file, path data is stored in “P” files, and level data is stored in the “L” file. The file names will contain the date and the above code. For example, if the data log began on May 25, 1997, the data for path 1 (VSound, gains, times) will be stored in a file named “05297PO”. All files are comma delimited text that can be imported into spreadsheets.

Logged Data Directory Structure

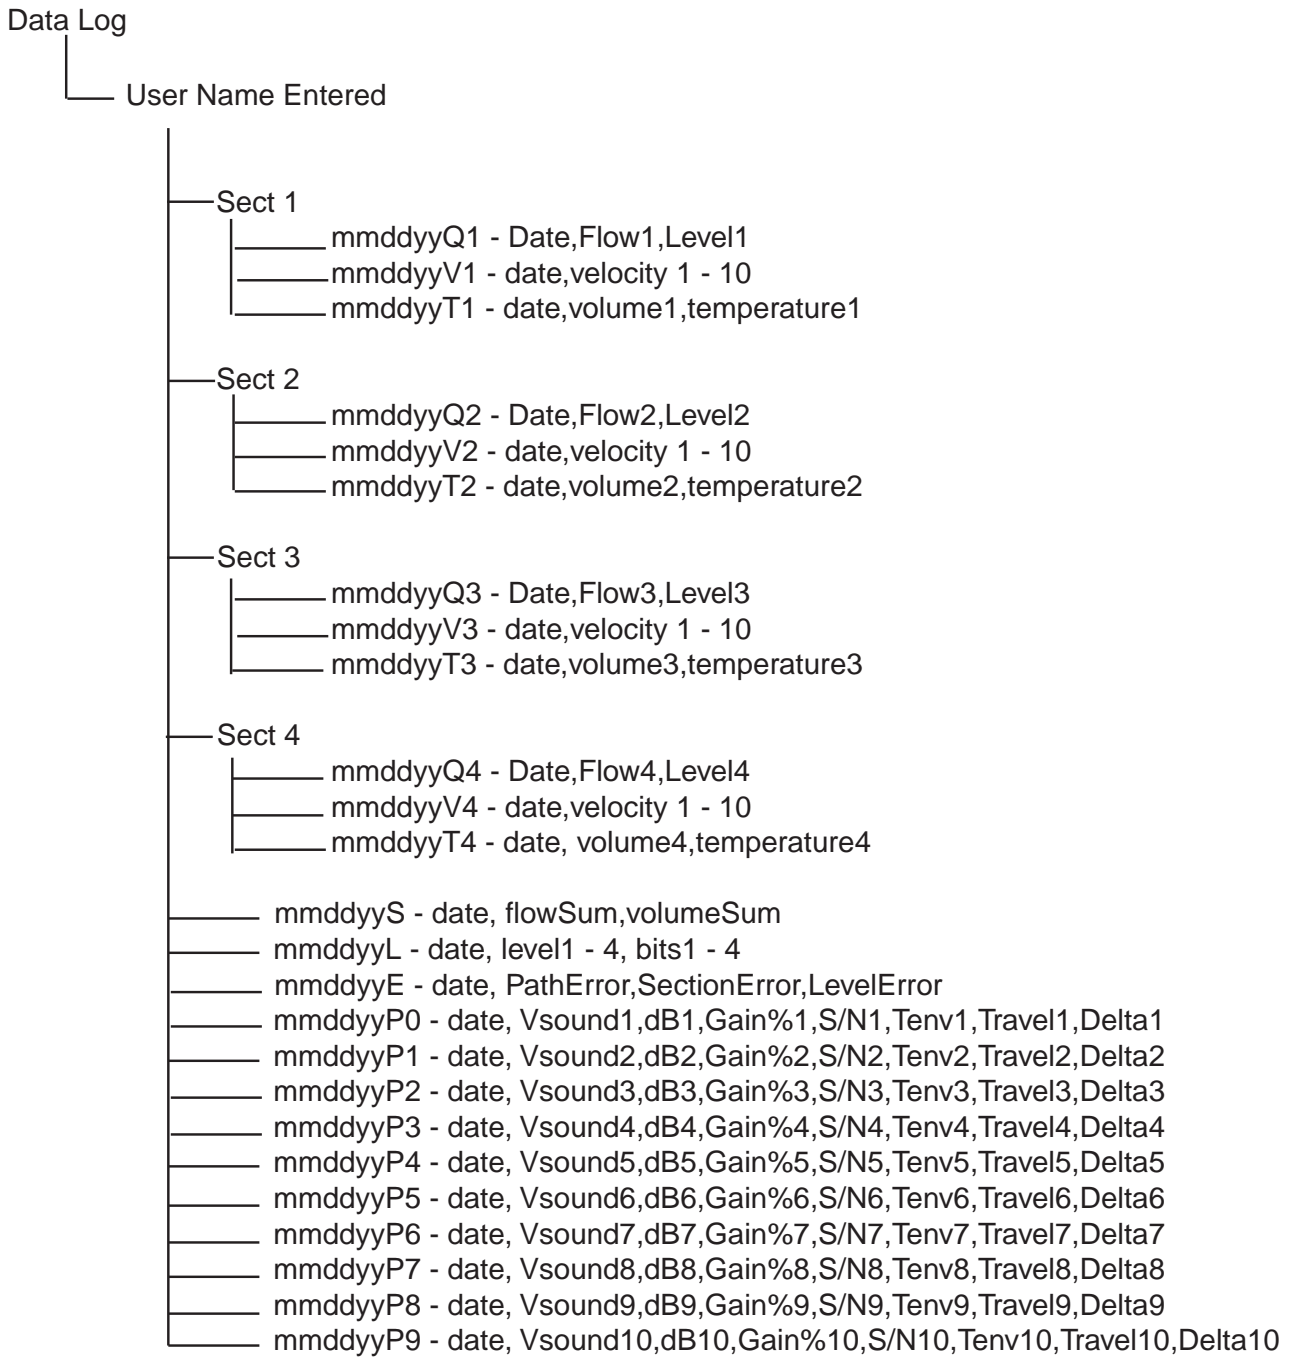

Shown above is the sub-directory tree structure that is created to store the data downloaded from the datalog board. The number and types of files may differ slightly from site to site depending on the current system configuration. The top of the tree (Data\_Log) is found in the sub-directory where the AccuFlow software has been installed. The first branch below Data\_Log (labeled ID above) will be the name entered as part of the download process. The file naming convention used is based on the start date of the specific data that is downloaded. For example if the datalog operation began on April 1, 1999 the mmddyy portion of the names shown above will be replaced with “040199”. Note that the name is based on when the data collection started and not when it is downloaded. The last one or two characters in each filename (shown above in bold) indicate the type of data stored in each file.

The data type designators indicate the following:

- **Qn** indicates flowrate and level data for section n where n indicates the section number 1 through 4.
- **Vn** indicates the velocity data for section n. the velocity data file will store the velocity data for all paths in the system and not just the section. For example a 4- section system with 2 paths in each section (total of 8 paths) will store the velocity data for all 8 paths in each section meter sub-directory.
- **Tn** indicates the volume and temperature data for section n
- **S** indicates the system flowrate and volume that is simply the sum of the section flowrate and volume data.
- **L** indicates the level measurement data for each of the active level measurement inputs. This data consists of two parts, the first part contains the level data for each of the active level inputs scaled in engineering units (feet, meters, ...). The second part contains the raw binary value as read from the A/D for each of the active level inputs.
- **E** contains the path error, section error and level error values. These values are the decimal equivalents of system

**Pn** contains the path data for path n. This data consists of:

the velocity of sound determined by the velocity measurement travel times

the gain required to obtain a useable signal level

the percentage of the full scale A/D resolution that the received signal achieved

the signal to noise ratio measured

average of the forward and reverse travel times measured when the path is operating in the envelope detect mode

average of the forward and reverse travel times measured when the path is operating in the zero crossing detect mode

difference between the forward and reverse travel time measurements, calculated as  $T_{rev} - T_{fwd}$

### Display Retrieved Log

Choosing DataLogging/Display Retrieved Log from the main menu allows the user to display data log data that has been retrieved from the flowmeter. The data will be displayed in a tabular format, one measurement, or record, at a time.

Initially, a dialog to choose the data log ID and desired date/time appears. Once you have chosen an ID, the data log is scanned to determine its range. You can then choose a record to begin with, by entering a date and time. The default is the first record.

After choosing OK, the data is displayed in a table. To change to different records, use the record number spinner at the bottom of the screen.

## Using Graphs

On the *view by variable* graph, the user can select which variable by selecting either the flow or the level button, and then select the section number(s) by using the buttons numbered 1 through 4. Multiple sections may be selected. The numbers below the section number buttons reflect the value of flow or level at the sidebar. The sidebar is the yellow vertical line that can be used as a marker for data points. It can be moved left or right by clicking and dragging the circular “knob” at the top of the sidebar. Notice that the numeric data changes as the sidebar is moved.

On the *view by section* graph, the user can select the section by clicking the radio buttons in the bottom right corner. Flow, level and velocity 1 through 10 are selected with the buttons on the bottom of the window. Sidebar operation is the same as in the *view by variable* graph, except that both graph panes are updated. If just velocities are selected, that graph will be expanded to the full window. Likewise, if only flow and/or level are selected their graph will be expanded. Otherwise, the window is split into two graph panes.

On the *settings* notebook tab, the user can select scaling options. They are normally automatically scaled based on the input value for historical data, or the maximum expected input for real-time data.

Set up the flowmeter by entering appropriate values for various parameters. Parameters define the geometry of each meter section and govern the operating modes of the flowmeter. All parameters are defined in Chapter 7.

Variables provide a view of measurements when the flowmeter is in normal “Measure” mode. Chapter 7 contains definitions of the variables.

# Chapter 7

## User Defined Parameters

### System Parameters

These parameters define the overall configuration of the flowmeter.

*PIPE / COMPOUND 0 / 1* Set to 0 (zero). to select "Pipe" mode. for all sections.  
set to 1. to select "Open Channel/Compound" mode

### *FLOW SCALING*

The flowmeter calculates flow in either English or Metric units defined by the parameter below. If English is chosen, flow will be in ft<sup>3</sup>/s; if Metric in m<sup>3</sup>/s. To express flow in alternative units, the value for the Flow may be multiplied by the *FLOW SCALING* parameter.

This scaled flow is output to the display, the analog outputs and RS232 ports,

For English units,	Flow in ft <sup>3</sup> /s:	set to 1.0
	Flow in Millions of gallons/day: (MGD)	set to 0.646
For Metric units,	Flow in m <sup>3</sup> /s	set to 1.0
	Flow in Mega litres/day (MLD)	set to 86.4
	Flow in l/s	set to 1000
	Flow in m <sup>3</sup> / hour	set to 3600

### *VOLUME SCALING*

Sets the scaling of the totalized flow.

For English units,	Flow in ft <sup>3</sup> /s:	Volume in 1000 ft <sup>3</sup>	set to 1000
	Flow in ft <sup>3</sup> /s:	Acre feet	set to 43560
	Flow in MGD:	Million gals	set to 86400
For Metric units,	Flow in m <sup>3</sup> /s	1000m <sup>3</sup>	set to 1000
	Flow in MLD	Mega litres	set to 86400
	Flow in l/s	m <sup>3</sup>	set to 1000
	Flow in m <sup>3</sup> / hour	1000m <sup>3</sup>	set to 3600000

### *ANALOG OUT SCALING*

A factory set parameter. Set to 1.0 for non-isolated, or 0.5 for isolated outputs and 0.25 for the 7510+.

### *FLOW AVE LVL {0 : 5}*

The time over which the Flow data are averaged.

Applies to the data displayed, logged and output on the analog output.

Set to 0, No time-averaging of the flow data

set to 1, the flow data are averaged over a period of 1 minute.

set to 2, the flow data are averaged over a period of 2 minutes.

set to 3, the flow data are averaged over a period of 5 minutes.

set to 4, the flow data are averaged over a period of 10 minutes.

set to 5, the flow data are averaged over a period of 15 minutes.

## User Defined Parameters

---

<i>NUMBER OF ACCUM's</i>	<p>Number of accumulations of signal waveform for each velocity measurement. Range 1 to 16. This facility can be useful for increasing the signal: noise ratio. In high velocity applications, (&gt;10 ft/s, 3m/s)) this parameter should be set to 1, otherwise signal cancellation can occur.</p> <p>If the acoustic signal quality is very good, a low value may be used, (1 to 4). Under adverse noise conditions, set to 8 or more.</p> <p>The advantage of using a low value is that the measurement cycle is shorter, and a better “snap-shot” of the flow in the conduit is taken.</p>
<i>REP TIME {0 : 4}</i>	<p>Sets the time interval between measurements.</p> <p>set to 0, the flowmeter meter will run at its maximum rate.</p> <p>set to 1, the flowmeter will take readings at 1 second intervals.</p> <p>set to 2, the flowmeter will take readings at 2 second intervals.</p> <p>set to 3, the flowmeter will take readings at 5 second intervals.</p> <p>set to 4, the flowmeter will take readings at 10 second intervals.</p> <p><b>Note.</b> If the flowmeter is unable to complete the reading in the time selected, (because the path lengths are long or too many paths are selected) then the flowmeter will take the readings as quickly as possible without attempting to synchronize to any real time.</p>
<i>ENGLISH / METRIC 0/1</i>	<p>Selects the units of the Parameters and Variables of the flowmeter.</p> <p>For English units, (feet) set to 0. For metric units, (meters) set to 1.</p>
<i>AUTO STORE PAR's</i>	<p>Set to 1 normally, so that changed parameters are stored in non-volatile memory whenever the system is returned to the Measure mode.</p> <p>If set to 0, changed parameters are used by the system but not stored. The changed parameters will be lost and the old ones asserted if the <b>Esc</b> then the <b>Reset</b> (or #) key is pressed, or if there is a temporary loss of power.</p>
<i>DATA to SERIAL {0 : 3}</i>	<p>To select the outputting of data to RS232 serial ports.</p> <p>set to 0, for no serial data outputs.</p> <p>set to 1, for data output to the “Hand-held terminal” port, see page 5-10.</p> <p>set to 2, for data output to the optional Com 3 RS232 port in “Argus” format</p> <p>set to 3, for data output to the optional Com 3 RS232 port in “Drax” format</p>
<i>SYSCLK 2, 5, 10 MHz</i>	<p>Sets the sampling rate of the digitizer.</p> <p>For 1MHz transducers or path lengths less than 50 ft (15m): set to 10.0</p> <p>For path lengths up to 100ft, (30m) and 500 kHz transducers set to 5.00.</p> <p>For path lengths up to 300ft, (90m) and 200 kHz transducers set to 2.00.</p> <p><b>Note.</b> For the 10MHz setting, link JP50 on the DSP card must be towards the center of the card. For other settings, the link must be away from center.</p>
<i>DISPLAY UNITS 0 : 4</i>	<p>Selects the characters to indicate the units of the variables displayed on the optional Liquid Crystal Display.</p> <p>Set to 0 to display flow in “l/s”, level in “m”, Volume in Cm, Temp in °C.</p> <p>set to 1 to display flow in “MLD”, level in “m”, Volume in ML, Temp in °C.</p> <p>set to 2 to display flow in “CMS”, level in “m”, Volume in Cm, Temp in °C.</p> <p>set to 3 to display flow in “CFS”, level in “ft”, Volume in CF, Temp in °F.</p> <p>set to 4 to display flow in “MGD”, level in “ft”, Volume in MG, Temp in °F.</p> <p>set to 5 to omit the units in the display.</p>
<i>DETECTION METHODS</i>	<p>Set to 0, “AUTOMATIC” to enable the flowmeter to use the optimum signal detection method for the conditions. The normal setting.</p>

Set to 1, "FIRST NEG" to force the flowmeter to use only detection of the "first negative" edge of the received signal. (Use only if the water known to be clean and without aeration)

Set to 2, "ENVELOPE" to force the flowmeter to use only detection of the "envelope" of the received signal. (For use if water is always aerated)

## Section Parameters

These parameters describe each conduit and the method of flow computation. Separate lists are required for each section. For all unused sections, the parameters *Path Enable* and *Volume Init Value* must be set to zero. All other parameters for unused sections can be ignored; their values are not used by the system.

All lengths and elevations are limited to five figures.

Parameters with the letters C after their names are used only in Open Channel or Compound mode.

<i>PATH ENABLE</i>		<p>For each section, a 10 bit binary number has to be set in order to define which paths are to be allocated to the section. e.g.          For path 3 to be used, the number is set to 0010000000.          For paths 1,2,3,4 to be used, set to 1111000000.          When entering a value, the zeros after the last selected path need not be entered.          If no paths are enabled, the section is not enabled.</p>
<i>LEVEL ENABLE</i>	C	<p>This parameter is ignored if the system is in "Pipe" mode.          For each section, a 4 bit binary number has to be set in order to define which of the analog level inputs apply to the section.          A maximum of two inputs can be allocated to any section. e.g.          For analog level input #1 only to be used, the number is set to 1000.          For analog level inputs #1 &amp; #2 to be used, the number is set to 1100.          For analog level inputs #3 &amp; #4 to be used, the number is set to 0011.          A particular level input can be allocated to one or more sections.</p>
<i>PIPE AREA</i>		<p>"Pipe" mode only. The cross-section area of the conduit in ft<sup>2</sup> or m<sup>2</sup>.          This parameter is ignored in "Open Channel" or "Compound" mode.</p>
<i>MIN GOOD PATHS</i>		<p>"Pipe" mode only. The minimum number of good paths which must be present to calculate flow. The contribution to the Flow from any failed paths can be provided by the Path Substitution routine, providing that the "Learn path Ratios" routine has been correctly implemented. See page 3-5.          If the "Learn" routine can not be implemented, because at the time of commissioning there is insufficient flow, this parameter must be set equal to the number of paths installed.          Range 1 to number of paths installed. If set to number of paths installed, the flow will cease to be computed and the section fail, if any path fails.</p>

User Defined Parameters

---

<i>LOW FLOW CUTOFF</i>		Defines the range of flows which the flowmeter will declare to be zero. If set to 0.00, the flowmeter will be bi-directional, with no minimum flow. If set to a +ve value, all negative flows and positive flows up to the set value will be declared to be zero. If set to a -ve value, all positive flows and negative flows down to the set value will be declared to be zero. Any flow which is declared to be zero will be output on the displays and analog outputs as zero, and treated as zero flow for the computation of Volume and the computation of Sum of Section Flows.
<i>VOLUME INIT VALUE</i>		The current value of the Totalized Flow or Volume. The volume may be reset to any value as required, Range 0 to 999 999 For unused sections, this parameter should be set to zero, otherwise it will contribute to the <i>Sum of Volumes</i> .
<i>LEARN PATH RATIOS</i>		“Pipe” mode only. If set to 1, the “Learning” routine will be invoked, and a new path ratio table will be created automatically. (See page 3-5 Pipe Mode). The parameter will reset to 0, and the table frozen after 1000 readings. <b>Warning: all paths must be good &amp; flow non zero if this routine is invoked.</b>
<i>TEMP CORRECTION</i>		A constant in °F or °C which is added to the computed temperature to correct for minor variations in the water quality. Range -30 to +30. Normally set to 0.
<i>MANNING n</i>	C	The Manning coefficient of roughness. Usually between 0.01 & 0.03.
<i>MANNING slope</i>	C	The slope of the energy line in the conduit: a dimensionless number: Usually between 0.0 to 0.010
<i>MANNING MAX LVL</i>	C	The maximum value of Level for which the Manning Formula is valid. Range: -5000 to +5000
<i>OVERRIDE LEVEL?</i>	C	Selects whether the level is to be derived from the 4-20 mA analog level input or from a manually entered fixed value. To select the analog input: set to 0 To select the manually entered Level value: <i>LEVEL MANUAL</i> : set to 1.
<i>MANUAL LEVEL</i>	C	A fixed Level value, representing the elevation of the water surface above the site datum. Range: -5000 to +5000
<i>SURCHARGE LEVEL</i>	C	The value of Level at and above which the section is surcharged. For an open channel site, this must be set above the highest possible Level. For a closed conduit, it is set equal to the elevation of the top of the conduit or soffit. Range: -5000 to +5000
<i>LOW LEVL CUTOFF</i>	C	Elevation of the water surface, above the site datum, below which the flowmeter will regard the flow as zero. Range -5000 to +5000

<i>MIN SUBMERSION</i>	C	The minimum submersion is the minimum distance which the water surface must be above a path for the path to be energized and used by the system to compute flow. Range: 0.0 to 5.0. Usually set to a value at least equal to the surface wave amplitude, or if the surface is smooth, set in accordance with the following: for 1 MHz transducers, $0.05\sqrt{\text{Path Length in ft}}$ , or $0.03\sqrt{\text{Path Length in m}}$ . for 500 kHz transducers, $0.07\sqrt{\text{Path Length in ft}}$ , or $0.04\sqrt{\text{Path Length in m}}$ . for 200 kHz transducers, $0.11\sqrt{\text{Path Length in ft}}$ , or $0.06\sqrt{\text{Path Length in m}}$ .
<i>BOTTOM FRICT'N</i>	C	The ratio between the assumed velocity at the conduit bottom and that at the elevation of the first good path above the bottom. Also used to compute the assumed velocity at the top of the conduit under surcharged conditions. Range: 0.0 to 2.0 Usually set to: 0.8 for multi-path open channels. A lower value, (0.5 min.), if the bottom path is very near the bed. A value of 1.2 to 1.8 may be appropriate for single path installations. See p 3-4
<i>TOP WEIGHT</i>	C	The weighting coefficient used to correct the extrapolated surface velocity Usually set to 0.1. In narrow conduits set to 0.
<i>SURCH TRAP / PIPE</i>	C	Selects the integration method to be used when the conduit is surcharged. Set to 0 if surcharged trapezoidal mode is to be used. Set to 1 if "Pipe" mode is to be used.
<i>NUM of LAYERS</i>	C	Number of layers used for defining the conduit cross-section area Any number between 2 and 8 layers may be defined.
<i>LAYER ELEV'N 1</i>	C	The elevation of the conduit bottom or invert relative to the site datum. Range -5000 to +5000
<i>LAYER ELEV'N 2</i>	C	The elevation of the next layer above the bottom relative to the site datum.
<i>LAYER ELEV'N 3</i>	C	The elevation of the next layer, if required. Note that if the conduit is closed, the elevation of the highest layer must be equal to or greater than that of the soffit or top of the conduit. If the conduit is an open channel, the elevation of the highest layer must be greater than that of the highest possible Level.
<i>LAYER WIDTH 1</i>	C	The effective width of the conduit at the bottom or invert of the conduit. Range 0.0 to 300
<i>LAYER WIDTH 2</i>	C	The width of the next layer above the bottom.
<i>LAYER WIDTH 3</i>	C	The width of the next layer, if required.

**Notes**

1. The layer elevations must be in strict height order.
2. Two layers cannot be given the same elevation.
3. Data entered in layers having numbers higher than the parameter *NUM of LAYERS* will be ignored
4. For a Round Pipe, the layer configuration given on pages 5-4 or 7-14 is recommended
5. If, during operation of the flowmeter, the water level should exceed the elevation of the highest layer, without the conduit being surcharged, a warning *LVL > MX LY HT* will be displayed.

**Path Parameters**

The paths are numbered in sequence, 1 through 8, any of which can be allocated to any section.



For Model 7616, 7617, 7618, 7634, 7656, 7658, set to 500kHz.  
 For Model 7612, set to 200kHz

## Level Input Parameters

Either one or two can be allocated to a section. The allocation is defined in the Section menu.

Level parameters are ignored by the system when in “Pipe” mode.

Scaling for each individual analog level input is defined by the following parameters.

<i>MIN mA INPUT</i>	The value of the input in mA below which it is declared to be in a fault state. The value may be in the range 0.0 to 19.0 mA.
<i>4mA LEVEL INPUT</i>	Elevation of the water surface above the site datum, at which the Level input is 4.0 mA. The value may be in the range –5000 to +5000
<i>20mA LEVEL INPUT</i>	Elevation of the water surface, above the site datum, at which the Level input is 20.0 mA. The value may be in the range –5000 to +5000
<i>LEVEL RESISTOR</i>	The value of the input resistance of the 4-20 mA Level input. The value may be in the range 250Ω to 50Ω. Standard value is 100Ω. This parameter is set at the factory to calibrate the input. The value should not require changing.
<i>LEVEL FILTER 0-4</i>	The approximate time in units of 15 measurement cycles, over which the Level data are averaged. e.g.: if set to 0 no averaging if set to 4 (max) averaged over 60 measurement cycles. Applies to the data displayed, used in the computation of flow, logged and output on the analog output.

## Analog Output Parameters

Any number up to four analog outputs can be allocated to a section. The allocation to the section, the variable to be output and the scaling for each individual analog output are defined by the following parameters.

<i>ASSIGN A SECTION</i>	Defines which section the output responds to. For “sum of section” flow, set to 0. For Section 1, set to 1, etc.
<i>F / L / V / T / *SF {0-4}</i>	Selects the variable to be represented by the analog output. Set to 0 to output flow for the section. Set to 1 to output the arbitrated value of the level for the section. Set to 2 to output the average velocity for the section. Set to 3 to output Temperature, in °F for <i>English</i> or °C for <i>metric</i> units. Set to 4 to output the Sum of the Section Flows. <b>Note.</b> The units of velocity are either ft/s or m/s depending on the parameter <i>English/metric</i> . Velocity output is not affected by the <i>Flow Scaling</i> . The velocity is equal to the flow divided by the wetted cross section area.
<i>4mA OUTPUT</i>	The value of the variable, in the units specified, for which an output of 4.00 mA is required.

## User Defined Parameters

---

<i>20mA OUTPUT</i>	The value of the variable, in the units specified, for which an output of 20.00 mA is required.
<i>OVERRIDE OUTPUT?</i>	Selects whether the output is to be derived from the variable or from a manually entered fixed value. Normally only used during system commissioning. To select the chosen Variable, (Flow, Level, Temperature etc.) set to 0 To select the manually entered <i>MAN OUTPUT VALUE</i> : set to 1.
<i>MAN OUTPUT VALUE</i>	The manual figure, in the scaled units used by the flowmeter.
<i>HOLD ON ERROR 0 / 1</i>	Set to 0 to cause the output to go to 4mA in the event of failure. Set to 1 to cause the output to hold the last good value in the event of failure.
<i>4 mA FINE ADJUST</i>	The binary value sent to the analog-to-digital converter that represents 4.00 mA. This typically is used to adjust the “zero” or 4 mA output. Nominal value 10,922.
<i>20 mA FINE ADJUST</i>	The binary value sent to the analog-to-digital converter that represents 20.00 mA. This typically is used to adjust the “span” or 20 mA output. Nominal value 54,672.

## Relay Parameters

There are 16 separate lists, one for each relay. These describe the function, section allocation and behavior of each individual relay, if supplied.

*ASSIGN A SECTION* Defines which section the relay responds to.  
For “sum of section” functions, set to 0.

*TYPE (1 : 10) 0 = OFF* Defines the function of the relay. When a selection has been made, a code giving an indication of the function appears on the screen.

Value	Display Code	Function
Set to 0	**OFF**	if the relay is not used.
Set to 1	<i>SEC Q MX 1</i>	for the relay to operate when the section flow exceeds the threshold value in this relay’s list.
Set to 2	<i>SEC L MX 1</i>	for the relay to operate when the section level exceeds the threshold value in this relay’s list.
Set to 3	<i>PATH SUB</i>	for the relay to operate when Path Substitution is in operation in the section. (Pipe mode only).
Set to 4	<i>SECT FAIL</i>	for the relay to operate when the section fails.
Set to 5	<i>SECT VOL</i>	for the relay to transmit section totalizer pulses.
<b>Note</b>		Only one relay may be allocated to each section for this function.
Set to 6	<i>SUM Q MX 1</i>	for the relay to operate when the sum of section flows exceeds the threshold value in this list.
Set to 7	<i>SUM VOL</i>	For the relay to transmit totalizer pulses for the sum of the sections.

*THRESHOLD* The value of the variable (flow or level), above which the relay will eventually operate. Range -99999 to +999999

*DELAY* The number of consecutive measurement cycles for which the variable exceeds or falls below the threshold, before the relay operates.  
When used for Section Fail or Path Substitution alarms, the relay operation is delayed by a number of measurement cycles, after the onset of the alarm state.  
If an alarm state ceases, the relay returns to its normal state immediately.  
Range 1 to 999 measurement cycles.

*POLARITY 0 / 1* Defines whether the relay is energized or de-energized when it operates as a result of the event  
Set to 0 for the relay to be normally de-energized.  
Set to 1 for the relay to be normally energized.  
**Note.** All relays are de-energized when the electronic unit is without power.

### Examples:

To configure a relay to close when the flow in section #1 is negative, set:

*TYPE = 1, ASSIGN A SECTION = 1, THRESHOLD = 0, DELAY = 5, POLARITY = 0*

To configure a relay to indicate if section #3 fails, or if the power is off, set:

*TYPE = 6, ASSIGN A SECTION = 3, THRESHOLD = 0, DELAY = 0, POLARITY = 1*

## System Stats

This list contains general information on the system, as well as facilities for altering the baud rate for the *Hand-held Communication* port and for setting the clock date and time.

The method of changing the values of those which are not fixed is the same as for the other parameters.

<i>SOFTWARE VERSION</i>		A serial number defining the version of the software (for information only)
<i>SITE NAME</i>		An alpha / numeric name which can be entered only by using AccuFlow Maximum number of characters: 9. Spaces are permitted.
<i>SPI BAUD RATE (2-6)</i>		User selectable baud rate of channels 1 through 3 (SP1-3). See notes below for special instructions.
	Set to	2 for 1200 baud
		3 " 2400
		4 " 4800
		5 " 9600
		6 " 19200 Normal value
<i>SP*DATA BITS</i>	*	Character length. Fixed value of 8.
<i>SP*STOP BITS</i>	*	Fixed value of 1.
<i>SP*PARITY</i>	*	Fixed value. No parity.
<i>YEAR</i>		Calendar year For the year 2000 set to 00.
<i>MONTH</i>		Calendar month.
<i>DATE</i>		Calendar date.
<i>DAY (SUN = 0)</i>		Day of the week.
<i>AM / PM 0 / 1</i>		Defines period of day if 12 hour clock is used.
<i>24 / 12 HOUR CLK 0 / 1</i>		Defines whether 24 or 12 hour clock is used.
<i>HOUR</i>		Time.
<i>MINUTE</i>		Time.
<i>SECOND</i>		Time.

## Baud Rate change

The baud rate of the communication to the hand-held terminal port can be selected.

To reduce the risk of changing the baud rate and then finding that re-entry to the flowmeter menu is impossible, the newly selected baud rate will not be implemented until the system has been reset.

To select a new baud rate, enter the code number of the desired rate in the menu, then press **Esc** and **Measure (M)** to return the system to the Measure mode. Then, to reset the system and implement the new baud rate:

either, turn the power off and back on,

or, exit the measure mode by pressing **Esc**, then press the **Reset (#)** key.

To return the system to the default baud rate of 19200, switch off the power, connect together pins 2 & 3 of the 9-pin D socket marked "Hand-held communication," and switch the power back on.

## Logging to Flash

The various menus for setting up the logging of data to flash memory are:

<i>DIRECTORY</i>	Provides a directory of the current log files. There are two, the “Main, (capacity 192k values) and the “Scratch”, (capacity 16k values)
<i>LOG LEN</i>	Indicates the number of storage locations used so far in the current log.
<i>CUR MDH</i>	Indicates the time in months, days, hours, for which the current log has been recording.
<i>TOT MDH</i>	Indicates the total log time in months, days, hours, remaining before the memory is full. The value for this is automatically calculated by the computer, and can be used as a guide to the maximum duration of a log, for a particular chosen set of variables and logging frequency.

**\*\*NOTE:** *CUR MDH and TOT MDH will not be displayed if programmed logging time exceeds 1 year.*

<i>WRITE TO FILE</i>	Selects a log file, its characteristics, and its frequency.
<i>SCRATCH / MAIN</i>	Choose which file to log into. Enter 0, to select “Scratch”, 1 to select “Main”
<i>PARAMETERS</i>	Enable logging of parameters (not currently implemented)
<i>NEW / APPEND</i>	Enter 0, to Open new file, Enter 1, to append new data to existing file.
<i>CIRCULATE / STOP</i>	Enter 0, to circulate to beginning on file full. Enter 1, to stop when file full.
<i>STATUS</i>	Enter 1, to log the status of flowmeter with each log. Enter 0, to omit status.
<i>SET LOG INTERVAL</i>	Enter logging frequency in seconds, hours, and minutes. (24 hours maximum)

**\*\*NOTE:** *Appending will not occur if any other logging parameter is changed.*

<i>TAG SECTION / PATHS</i>	Select sections and paths for which the selected variables will be logged.
<i>SECTION 1- 4</i>	Enter a 0 to select “No logging for that section”, a 1 to select “Logging”
<i>PATHS 1-10</i>	Enter a 0 to select “No logging for that path”, a 1 to select “Logging”

<i>TAG VARIABLES</i>	Select the variables to be logged. Entering a 0 selects “off”, a 1 selects “on”
<i>FLOW</i>	Section flow
<i>LEVEL</i>	Section level (averaged)
<i>VOL</i>	Section volume
<i>TEMP</i>	Section temperature
<i>SUM of FLOWS</i>	Sum of section flows
<i>SUM of VOLS</i>	Sum of section volumes
<i>VELOCITY</i>	Path velocity
<i>VSND</i>	Path calculated velocity of sound
<i>GAIN dB</i>	Path gain in dB
<i>GAINS %</i>	Path gain in percent
<i>S / N dB</i>	Path signal to noise ratio
<i>TENV F-R</i>	Path forward and reverse envelope times
<i>TRAV F-R</i>	Path forward and reverse travel times
<i>DELTA T</i>	Path delta time
<i>LEVEL</i>	Input level
<i>BITS</i>	Input level in bits

## Variables

All variables except average velocity are available to be displayed on the screen of the hand-held terminal, as live data with the flowmeter operating in the “Measure” mode. A separate screen has to be selected for each type of variable. The variables are:

<i>TENV</i>	The travel times of the overall signal envelopes (used for diagnostic purposes).
<i>TRAV</i>	The signal travel times in micro seconds ( $\mu$ s), Forward and Reverse. The values are the total times less the Signal Delays and represent the travel times of the signals through the water.
<i>DELT</i>	The time difference, in nano seconds (ns), between the forward and reverse signal travel times. A negative figure indicates reverse flow. The first figure is the latest instantaneous value; the second is an average taken over 8 readings.
<i>GAIN</i>	The value of the Receiver gain, nominally in dB units. Maximum value 40 Equal to: $20 \times \log_{10}$ [Ratio of signal voltage at A/D converter: Transducer output] 0dB indicates a signal level of 1 Volt peak to peak at the transducer terminals. The second figure is the amplitude of the latest instantaneous signal, after amplification, expressed as a % of full signal at the detector. Normally this value will be between 95 and 105. The third figure is the Signal to Noise ratio expressed in dB. Less than 12dB indicates a serious noise problem, and that the data for that path will be rejected.
<i>VEL</i>	If the path is not enabled or is out of the water, the display for that velocity is blank. The first figure is the value of the individual water velocity in feet/second or meters/second, averaged over 8 readings. A negative figure indicates reverse flow. The second figure is the computed velocity of sound for that path, (used for diagnostic purposes). The letter E or Z indicates the signal detection method, either “Envelope” or “First Negative”. The letter H indicates that the velocity reading has been “Held” The latest acoustic signal is unacceptable, and the previous value for water velocity is being used for the computation of flow. PATH FAILED indicates that consecutive acoustic signals for that path have been rejected for a period greater than the parameter <i>Max Bad Measures</i> . The path has failed. VEL > MAX indicates path failure due to computed velocity greater than <i>Max Path Velocity</i>
<i>FLOW SECT</i>	The time-averaged value of the water flow, scaled in the required units. If the parameter <i>Flow Scaling</i> is set to 1, the units will be cubic ft/s or cubic meters/s. The averaging is carried out using an Infinite Impulse Response (IIR) digital filter, whose time is set by the System parameter <i>FLOW AVE 0 - 4 MINS</i> .  The letters and number following the value indicate the method of flow determination selected by the flowmeter, whether the conduit is Full (surcharged), and which of the possible level inputs (Manual, #1 or #2) has been selected. Typical examples of these codes are:  In Pipe Mode: PI indicates that the system is configured for “Pipe” mode. PI L indicates that the Learn Path Ratio routine is in progress. PI S indicates that the Path Substitution routine is in use. (i.e. one or more paths have failed).

## In Compound Mode:

MN 1	indicates Manning mode, non surcharged, level #1 used.
SP 1	indicates Single Path Trapezoidal Integration, non surcharged, level #1.
MP 1	indicates Multi Path Trapezoidal Integration, non-surcharged, level #1.
MP F 2	indicates Multi Path Trapezoidal Integration, surcharged (Full), level #2.
PI S 4	indicates Pipe Integration, surcharged. Path Substitution, level #4.
PI F 0	indicates Pipe Integration, surcharged. Manual Level selected.

Under low flow or fault conditions, a message is substituted for the section flow value.

LVL > MX LY HT	indicates that the Level exceeds the elevation of the uppermost layer.
LEVEL <> Limits	indicates failure due to the Level input being below <i>Min mA Input</i> or above 21 mA.
LEVEL < CUTOFF	indicates that the flow is zero, due to valid but low Level.
NO GOOD PATHS	indicates failure of all paths, and Level too high for Manning to be valid.
SECTION FAIL	indicates that there are too few good paths to compute flow in “Pipe” mode. i.e. Number of good paths is less than <i>Min Good Paths</i> .

*VOL SECT* The totalized flow for each section, scaled according to the *Volume Scaling* parameter. These values can be individually set or reset from the Section menus. The maximum displayed value is 999,999 after which the display goes to zero and restarts.

*LEVEL SECT* The arbitrated time-averaged value of the Level in each section, which is used for the calculation of flow. The averaging is carried out using an Infinite Impulse Response (IIR) digital filter, whose time is set by the parameter *LEVEL FILTER*. The messages following are the same as are displayed on the “Flow” screen.

*TEMP SECT* The water temperature in each section, computed from the average velocity of sound for each good working path in that section. It is computed using the relationship for distilled water, corrected if necessary by a user defined offset; the section parameter *TEMP CORRECTION*

*FLOW VOL SUMS* The sum of all the section flows. If a section has failed, its contribution is deemed to be zero. The sum of all the section volumes. If a section has failed, the value for its Volume accumulated up to the time of failure will be used for calculating the sum of all section volumes.

*LEVEL CHNL BITS* The time-averaged value of each individual Level input, in terms of the elevation of the water surface above the site datum. The second 4-digit number after the Level value is the instantaneous value of analog input. It is scaled so that an input of 0.00 volts is displayed as 0, and 5.00 volts as 4094.

If the input resistor fitted is the nominal 100Ω, the 4 digit number will be scaled so that: 0 mA is displayed as 0, 4 mA as 328, 20 mA as 1638 and 50 mA as 4095.

## Special Configurations

Occasionally, it may be necessary to configure the meter in a “non-standard” mode to meet a particular requirement. This section contains special configurations.

### Using Layer Boundary Parameters to Simulate a Round Pipe

When a “compound flowmeter” is set up in a pipe, the shape of the pipe has to be described using the Layer Boundary parameters. If the pipe is round, a large number of possible ways of describing its shape in terms of trapezoidal layers can be devised.

The table below gives one possibility, which has the merits of giving very close approximations to the wetted area, with only 11 numbers to be calculated. The maximum errors occur when the stage is below 0.1 x Pipe Diameter. This is below the lowest layer and likely to be below the lowest path, and so of no relevance. At a stage of 0.05 x Pipe Diameter, the error is 4.5% of actual area. For stages between 0.1 and 0.2 x Pipe Diameter, the errors are less than 0.2%. Above 0.2 x Pipe Diameter, the errors are small.

<u>Layer Boundary Elevation</u>	<u>Layer Boundary Width</u>
Zero x Diameter	0.116 x Diameter
0.05 x Diameter	0.472 x Diameter
0.20 x Diameter	0.823 x Diameter
0.40 x Diameter	0.993 x Diameter
0.60 x Diameter	0.993 x Diameter
0.80 x Diameter	0.823 x Diameter
0.95 x Diameter	0.472 x Diameter
1.00 x Diameter	0.116 x Diameter

All Path Elevations in terms of measured distance above the channel bottom.

### Separating Forward and Reverse Flows, (for pump / generating plant)

For some full pipe systems, it may be desired to compute separate totalizer counts (from relay closures) and volumes for forward and reverse flows.

To achieve this, two sections should be configured, using the same paths, but with slightly different section parameters. In this example, Section #1 is for forward flow, and section #2 for reverse.

<u>Parameter</u>	<u>Section #1</u>	<u>Section #2</u>	<u>Comment</u>
<i>Path Enable</i>	1111000000	1111000000	both the same
<i>Pipe Area</i>	Actual value	- Actual value	Section #2 will read negative.
<i>Low Flow Cutoff</i>	0.0001 or more	- 0.0001 or less	See description on page 7-4

With this configuration, Section #1 will give a positive value for all forward flows, and zero for reverse flows. Section #2 will give a positive value for all reverse flows, and zero for forward flows.

For Compound or open channel situations, contact Accusonic.

### Relay to indicate that a Section is Good

For flowmeters which are used for automatic plant control, it is often desirable to have a relay to indicate “Section Good”, rather than “Section Failed”. The difference being that “Section Good” should be energized only when the section is “good”, be de-energized immediately it is “bad”, and allow for a delay between the section recovering and the relay becoming energized. The “Section Failed” concept does not provide this logic.

To provide this: Enable a dummy path in the section, (e.g. Path #10), to which nothing is connected.

Set Section parameter *Min Good Paths* to the minimum number required for flow calculation.

Set “dummy” path *Length* to 1.0, *Weight* to 0, Other parameters to 1 or ignore.

Set Relay parameter for desired Section, *Type* to 3 (Path Sub), *Delay* as required, *Polarity* to 0.

# **Appendix A:**

## **Multipath Flowmeter Systems Theory and Operating Principle**

---

# Appendix B:

## Transducer Maintenance

Ultrasonic transducers require little maintenance. They need attention only when the signal shows signs of deterioration. The following safeguards apply:

- The connector-ends of transducers - those which lie outside of the conduit - should be protected from the weather and from vermin so as to retain electrical integrity.
- Devices not in service should be protected from the weather and extreme humidity (95% max) and stored at a temperature between -20°C and 60°C.

### Signal deterioration

After a period of time, the signal level of the transducer signal may deteriorate. This is usually due to the growth of algae or buildup of mineral deposits on the face of the transducer. The rate at which foreign matter builds up on a transducer face varies, depending on the ambient water conditions. Under normal water conditions, Accusonic recommends that transducer signals be checked for deterioration monthly at first, and then annually. Under severe conditions, more frequent testing may be appropriate. The simplest method is to monitor the AGC values for each path. See path variables *Forward gain* (7-39) and *Reverse gain* (page 7-40) in Chapter 7.

In many cases, signal deterioration may be caused by loose, wet, frayed, or worn transducer cables or connections. When signal deterioration is observed or suspected, be sure to check the wiring before assuming that foreign matter has built up on the transducer face or that there is trouble with the transducer itself. Consult the procedures given in *Transducer and Cabling Checkout* in Chapter 4 on 4-5. to check out the transducer wiring and external junctions.

If signal strength drops below acceptable levels, the appropriate action to be taken depends on the type of the transducer.

For internal mount transducers (Models 7630 and 7634) - most of which are installed with dual active elements - try switching elements to see if the problem clears up. If not, the only option is to run the flowmeter with a path shut down (which degrades accuracy), switch on path substitution (which also degrades accuracy), or to dewater the pipe and clean, inspect, and possibly replace the unit.

#### *Note*

*When switching to a backup element in a dual-element transducer, it is necessary to change the path parameters Path length and Path angle accordingly, unless the elements on both ends of the path are changed.*

## Transducer Maintenance

---

For fixed-window transducers (Models 7605 and 7625) the active elements of can be replaced from outside the conduit, but cleaning of the acoustic window requires dewatering the conduit.

If the transducers are subjected to high temperatures ( $> 140^{\circ}$ ), which can occur if the pipe is dewatered and exposed to strong sunshine, the coupling grease between the transducer element and the window can deteriorate. If this occurs, or whenever the transducer element is removed for inspection or replaced, a 1/32" (1mm) layer of grease should be applied to the flat face of the transducer element. Appropriate grease obtainable from Accusonic.

For removable transducers (Models 7600, 7601, 7635, 7620), remove the unit according to the procedures recommended by Accusonic, and then clean, inspect, and possibly replace the unit.

### ***Danger***

*Removing a transducer from a pressurized pipe MUST be done in strict accordance with Accusonic procedures. Failure to do so may result in serious injury to personnel or in damage to the transducer or other equipment nearby.*

### ***Note***

*Transducers are position-dependent. When replacing a transducer, always verify that the replacement unit is of the same type as the unit removed. In particular, pay attention to the angle, position, and length designators (i.e., 45°,60°,65°; inner vs. outer; Short or Long) that are part of the model and serial number designators marked on the body of the unit.*

## 7601 Series Transducers

The transducers are installed in special feedthroughs which allow for removal of the transducer without dewatering the pipe or disturbing the alignment of the unit. A special tool must be used. The following is a step-by-step procedure for removal, cleaning, and reinsertion of the transducer.

### **DANGER**

THE TRANSDUCER IS PROBABLY UNDER CONSIDERABLE PRESSURE FROM THE LIQUID IN THE PIPE. ANY ATTEMPT TO REMOVE A TRANSDUCER IN ANY OTHER MANNER THAN OUTLINED BELOW MAY CAUSE SERIOUS INJURY TO PERSONS IN THE GENERAL AREA.

### **Caution**

*The 7601 transducers are equipped with a gauge for confirming that the locking pin is fully engaged. Measurements with the gauge and an independent test is required to confirm that the locking pin is seated. If the gauge is missing, do not proceed. Never loosen the locking pin unless the transducer removal tool supplied by Accusonic is installed in complete accordance with the procedure given below.*

### **Caution**

*Always work from the side of the transducer feedthrough, so that if an error or a component failure results in the transducer blowing out of its seat, you are not in the exit trajectory. Keep the trajectory area clear of other personnel.*

### **Warning**

*Read through the entire procedure below to be certain you understand it completely. IF YOU DO NOT UNDERSTAND ANY PORTION OF THIS PROCEDURE, STOP FURTHER WORK, DO NOT CONTINUE!*

### **Notes**

*Transducers are position-specific. Always reinstall a transducer in the same feedthrough position from which it was removed. When replacing one transducer with a new one, double check that the part number of the new unit exactly matches the number of the old one.*

*Hydrostatic pressure is pushing radially outward on the transducer at all time, including during removal and replacement of the transducer. During normal operations, the transducer is held in place against this pressure by the union nut shown in Figure 10-1 on page 14.*

*When the nut is removed, then the locking pin prevents transducer movement. It is extremely important that locking pin engagement be confirmed (using the supplied gauge) before attempting to remove the union nut.*

*The locking rings which are installed in numbered pairs - the serial numbers are stamped on the opposite mating faces. Parts from one locking ring must not be interchanged with other units. If a ring is disassembled, it must be reassembled using a matched pair.*

## Tools Required

- ◆ 7601 series clearance gauge (attached to transducer fitting on the conduit)
- ◆ Model 7642 series transducer jacking mechanism (order from Accusonic)
- ◆ Medium (8 inch) crescent wrench (or 1/2 inch (13mm) open-end wrench)
- ◆ 3/8 inch hex (Allen) wrench

1. Verify the following safety conditions are met as shown in Figure 10-1 on page 14.

***Locking pin is fully engaged*** - Check that the clearance between the shoulder of the pin and the face of the locking ring is less than the specified limit. Check this by trying to slide the u-shaped end of the clearance gauge under the pin as shown. It must not fit.

***Locking Ring is tightly installed*** - Check that lock washers (spacers) are installed between both sets of mating faces of the two halves of the locking ring. Verify that the hardware is tight and that the lock washers are compressed flat.

***Union nut rotates freely*** - Check that the union nut turns freely and exhibits no resistance to turning caused by back pressure on the nut from the transducer behind it after it has been loosened one-half turn.

If any one of these conditions is not met, there may be a safety hazard. Leave the union nut in place, **STOP WORK** on the transducer **IMMEDIATELY** and contact Accusonic for advice.

2. Locate the jacking screw in the jacking mechanism, shown in Figure 10-2 on page 15. Make certain that the valve on the jacking mechanism is fully open.
3. Spin the bearing lever so that the threaded tip of the jacking screw is retracted inside the tool valve. The jacking screw should extend beyond the bearing lever about two inches (50mm) as shown in the inset of Figure 10-2 on page 15. It may be necessary to rock the valve slightly to allow the jacking screw clearance. Set the jacking mechanism on a clean surface (free of mud or debris), in easy reach for the following steps.
4. Slowly loosen the union nut.

### ***Caution***

*There should be no resistance caused by back pressure from the transducer acting upon it after it has been loosened one-half turn. If there is, or if you observe any movement of the transducer itself, **STOP WORK**. Immediately clear the area around the transducer of personnel and contact Accusonic for advice.*

5. Gently remove the union nut from the feedthrough assembly as shown in Figure 10-3 on page 16. At all times, be alert for any transducer movement.

**Caution**

*If, at any time before the jacking tool finally is in place, you observe that the transducer moves even slightly, **STOP ALL WORK**. Immediately clear the area around the transducer of personnel and contact Accusonic for advice.*

6. Gently pull the E-O connector out of the body of the transducer as shown in Figure 10-3 on page 16. Be alert for transducer movement.
7. Slowly screw the threaded collar of the jacking mechanism valve over the mating thread of the transducer feedthrough. Screw the tool on until in bottoms.

**Note**

*For the first three full turns, be sure to support the far end of the jacking tool so that it does not exert undue torque on the transducer and feedthrough assembly. Be alert for transducer movement.*

8. Slowly rotate the bearing lever to advance the tip of the jacking screw into contact with the end of the transducer. This must be done by feel, since the two components meet inside the tool valve. Stop when contact is made.
9. While holding the bearing lever stationary, use a wrench to gently and slowly turn the jacking screw so that it advances into the end of the transducer and begins to engage the inside thread of the transducer.
10. Alternate between turning the bearing lever and then holding it stationary and advancing just the jacking screw to continue threading the jacking screw into the transducer. Do not force it. Continue until the screw bottoms.

**Note**

*As you screw the tool into place, it is necessary to alternately advance and back off on the bearing handle because two threads of different pitches are being taken up at the same time.*

11. After the jacking screw bottoms in the transducer, back the screw off slightly so that it will be easier to separate the two later.
12. Turn the bearing lever so that the jacking screw presses the transducer unit assembly inward *slightly*, thereby releasing tension on the locking pin.

**Note**

*The locking pin should rotate easily when it is freed. If necessary, work the bearing lever forward and backward (moving the transducer slightly in and out of the feedthrough) until the pin is free.*

13. Slowly loosen the transducer locking pin.
14. Rotate the bearing lever to withdraw the transducer 3/4 of an inch (20mm).
15. Tighten the locking pin firmly against the shaft of the transducer and then back it off one quarter of a turn. This prevents water leakage from around the locking pin.
16. Continue to extract the transducer just until the second O-ring on the transducer body

becomes visible - about 3/4 (20mm) inch of the transducer is visible. The transducer face is now clear of the ball valve. (See Figure 10-4 on page 17)

17. Close the jacking tool valve.
18. Continue turning the bearing lever until the transducer is entirely clear of the valve. Unscrew and remove the transducer from the jacking screw.
19. Inspect the transducer face for growth or buildup. Remove any buildup with a hard nylon scrubber (Dobie) and a mild detergent (Joy).

**Note**

*Handle the transducer with care. Do not cut or nick the O-rings or try to remove them from the transducer.*

**Caution**

*Once a transducer face has been cleaned, do not contaminate it with grease, oil or hand or finger prints, as such film will degrade performance of the unit.*

20. Screw the transducer back onto the jacking tool.

**Notes**

*Transducers are position-specific. Always reinstall a transducer in the same location from which it was removed.*

*When replacing one transducer with a new one, double check that the part number of the new unit exactly matches the number of the old one. Make certain that an inner path transducer is replaced with an inner unit and that an outer path transducer is replaced with an outer unit.*

21. Just prior to assembly, *lightly* lubricate the O-rings with an appropriate O-ring grease, Parker O-Lube or equivalent.

**Warning**

***Do not use a silicone-based grease.***

22. Turning the bearing lever, advance the face of the transducer until it just reaches the valve opening.
23. Use a 1/2 inch (13mm) open face wrench on the hex end of the jacking screw to rotate the jacking screw until the alignment slot on the transducer is in alignment with the locking pin on the conduit.

**Note**

*Hold the wrench in place during the following steps to help keep the transducer in alignment until it engages the alignment pin located on the inside end of the feedthrough.*

24. Continue to turn the bearing lever, advancing the transducer into the valve housing until the middle O-ring on the transducer just slips inside the valve housing.
25. Slowly open the valve all the way.
26. Continue to ease the transducer into the mount until either it meets increased resistance or until the shoulder of the jacking screw comes flush with the bearing lever. Do not advance the jacking screw shoulder past the surface of the bearing lever.

**Notes**

*It may be necessary to rock the valve handle back and forth slightly to allow the transducer to slip through the valve.*

*If the transducer stops prior to the fully inserted position, it is probably out of alignment. Rock the jacking screw back and forth slightly using the 1/2 inch (13mm) wrench until the unit aligns with the alignment pin and is free to advance further.*

**Caution**

*Use only enough pressure during insertion to overcome the back pressure from fluid in the pipe. If you try to force the transducer into place when it is misaligned, you will damage the unit, possibly jamming it in the fitting.*

27. When the transducer is home, screw in the locking pin until it bottoms. Then back off the pin one quarter turn to allow the transducer to center itself in the mount.
28. Refer again to Figure 10-1 on page 14 and verify that the following safety conditions are met:

**Locking pin is fully engaged** - Check that the clearance between the shoulder of the pin and the face of the locking ring is less than the specified limit. Check this by trying to slide the u-shaped end of the clearance gauge under the pin as shown. It must not fit.

**Locking Ring is tightly installed** - Check that lock washers (spacers) are installed between both sets of mating faces of the two halves of the locking ring. Verify that the hardware is tight and that the lock washers are compressed flat.

If any of these conditions is not met, there may be a safety hazard. Leave the tool in place. Try removing and reinserting the transducer, and rechecking the safety conditions.

If that doesn't solve the problem, STOP WORK IMMEDIATELY and contact Accusonic for advice.

29. Remove the jacking mechanism assembly from the transducer's feedthrough assembly.

30. Reconnect the E-O connector and screw in the union nut.

***Caution***

Before leaving the transducer, be certain that the locking pin is fully engaged and that the union nut and the E-O connector are installed as shown in Figure 10-1 on page 14.

This completes removal and assembly of the 7601 Series transducer.

## 7600 Series Transducers

The transducers are contained in a special mount which allows for removal of the transducer without dewatering the pipe or disturbing the alignment of the unit. A special tool must be used.

The following is a step-by-step procedure for removal, cleaning, and reinsertion of the transducer.

### **DANGER**

THE TRANSDUCER IS PROBABLY UNDER CONSIDERABLE PRESSURE FROM THE LIQUID IN THE PIPE. ANY ATTEMPT TO REMOVE A TRANSDUCER IN ANY OTHER MANNER THAN OUTLINED BELOW MAY CAUSE SERIOUS INJURY TO PERSONS IN THE GENERAL AREA.

### **Caution**

*The 7600 transducers are equipped with a padlock locking rod to prevent tampering with the transducer when the proper tool is not in place. Never unlock the padlock unless the transducer removal tool supplied by Accusonic has been installed as described in the following procedures. Never leave an unlocked transducer unattended for even a short period of time.*

### **Caution**

*Always work from the side of the transducer feedthrough, so that if an error or a component failure results in the transducer blowing out of its seat, you are not in the exit trajectory. While working on the transducer, keep the trajectory area clear of other personnel.*

### **Warning**

*Read through the entire procedure below to be certain you understand it completely. IF YOU DO NOT UNDERSTAND ANY PORTION OF THIS PROCEDURE, STOP FURTHER WORK, DO NOT CONTINUE!*

### **Note**

*Transducers are position-specific. Always reinstall a transducer in the same location from which it was removed. When replacing one transducer with a new one, double check that the part number of the new unit exactly matches the number of the old one.*

## Tools Required

- ◆ 7661-L or 7661-S series transducer jacking mechanism (order from Accusonic)
- ◆ Medium (8 inch) crescent wrench  
(or a 1/2 inch (13mm) open-end wrench and a 1 inch (25mm) open-end wrench)
- ◆ Key to the transducer padlock (all padlocks shipped by Accusonic use the same key)
- ◆ 1/8 inch (3mm) hex (Allen) wrench

1. Verify the following three safety conditions are met as shown in Figure 10-6 on page 19:

**Locking Rod is padlocked** - Check that the padlock on the locking rod is locked. The locking rod should not be in contact with the transducer, and it should be free to slide back and forth.

**Clamp bar is secure** - Check that the two bolts (1/2 inch (13mm) heads) holding the clamp bar are tight.

**Clamp bar jack screw is fully engaged** - Check that the jack screw on the clamp bar presses tightly against the shoulder of the transducer.

If any of these conditions is not met, STOP WORK on the transducer immediately and contact Accusonic for advice.

**Caution**

*If, at any time before the jacking tool is finally in place, you observe that the transducer moves even slightly, STOP ALL WORK. Immediately clear the area around the transducer of personnel and contact Accusonic for advice.*

**Warning**

*Do not loosen any set screws on the transducer mount. They are locked in place during setup and alignment of the unit, and must not be disturbed.*

2. Locate the jacking tool and retract the jacking screw so that the hex end of the screw extends 1 inch (25mm) from the tool. Set the tool on a clean surface (free of mud or debris), in easy reach for the following steps.
3. Remove the conduit clamp and gently pull the E-O connector out of the body of the transducer cable connector as shown in Figure 10-5 on page 18.
4. Slowly loosen the clamp screw. Fluid pressure should press the transducer tightly against the screw as it turns, pushing the transducer up and out of its seat slightly. Continue loosening the screw until the transducer moves out of its seat about 1/8 inch (3mm) and the shoulder of the transducer back contacts the locking rod.

**Note**

*If the transducer fails to move as the screw is loosened, it may be jammed, or there may be low pressure in the conduit. Try alternately tightening and loosening the clamp screw or manually pulling on the transducer to release it. If it does not move, contact Accusonic for advice.*

**Warning**

*Never allow more than 1/16 (1.5mm) inch clearance between the contact point of the clamp screw and the transducer. If the transducer is caught and suddenly breaks free when there is too much clearance, the resulting impact could damage the equipment or cause a safety hazard.*

5. Loosen the clamp screw another full turn, retracting it completely from the transducer.

6. Unscrew the two bolts (1/2 inch (13mm) heads) holding the clamp bar and remove it.

**Caution**

*Always work from the side of the transducer mount, so that if an error or a component failure results in the transducer blowing out of its seat, you are not in the exit path. While working on the transducer, keep the downrange trajectory area clear of other personnel.*

7. Bolt the jacking tool to the transducer mount using the clamp bar mounting holes as shown in Figure 10-7 on page 20. Tighten all four bolts.
8. Rotate the jacking screw to advance the tip of the screw into the recess on the transducer.
9. Use a wrench to tighten the jacking screw until the transducer no longer presses on the locking rod. When pressure on the locking rod is released, the rod should slide freely from side to side.

**Note**

*Do not tighten the jacking screw past the point where the locking rod is freed.*

10. Unlock and remove the padlock and remove the locking rod.
11. Retract the jacking screw slightly (fluid pressure should press the transducer tightly against the jacking screw), and push it out of its seat as the screw is backed off.

**Note**

*If the transducer fails to move as the jacking screw is loosened, it may be jammed or there may be low pressure in the conduit. Try alternately tightening and loosening the jacking screw and pulling on the transducer to release it. If it does not move, contact Accusonic for advice.*

**Warning**

*Never allow more than 1/16 (1.5mm) inch clearance between the contact point of the jack and the transducer. If the transducer is caught and then suddenly breaks free when there is too much clearance, the resulting impact could damage the equipment and cause a safety hazard.*

12. Continue to retract the transducer until 7 5/8 (195mm) inch of the round transducer body (not counting the square back) is exposed.

**Warning**

*Retracting the transducer too far may allow fluid to leak from the mount.*

13. Close the valve on the transducer mount.
14. Completely back off the jacking screw.
15. Grasp the transducer by the square shank and the cable connector and rotate it back and forth slightly to pull it completely out of the mount.

**Note**

*The transducer mount has a movable collar and yoke that serve to align the transducer in the conduit. These were set, locked and sealed during installation. If the collar or yoke are loose now, the transducer will need to be realigned; contact Accusonic for advice.*

16. Inspect the transducer face for growth or buildup. Remove any buildup with a hard nylon scrubber (Dobie) and mild detergent (Joy).

**Note**

*Handle the transducer with care. Do not cut or nick the O-rings or try to remove them from the transducer. Do not bend the connector. Protect sealing surfaces from abuse.*

**Caution**

*Once the transducer face has been cleaned, do not contaminate it with grease, oil or hand or finger prints, as such film will degrade the performance of the unit.*

17. Just prior to assembly, *lightly* lubricate the O-rings with an appropriate O-ring grease, Parker O-Lube or equivalent.

**Warning**

***Do not use silicone-based grease.***

18. Gently slide the transducer approximately 1/2 inch (13mm) into the mount - just until it remains in place.

**Notes**

*Transducers are position-specific. Always reinstall a transducer in the same location from which it was removed.*

*When replacing one transducer with a new one, double check that the part number of the new unit exactly matches the number of the old one. Make certain that an inner path transducer is replaced with an inner unit and that an outer path transducer is replaced with an outer unit.*

**Caution**

*Be sure that the connector shaft that extends from the transducer back is positioned so that it will engage with the saddle located on the mount as the transducer is pressed into place.*

19. Tighten the jacking screw until the pointed tip engages the recess on the transducer.
20. Use a 1/2 (13mm) inch open face wrench on the hex end of the jacking screw to tighten the jacking screw and press the transducer into the mount. Stop when only 7 5/8 inches (195mm) of the round transducer body (excluding the square back) is visible above the shoulder of the mount.
21. Slowly open the valve all the way.

22. Continue to tighten the screw and press the transducer into the mount until either it meets increased resistance or until the shoulder of the jacking screw comes flush with the bearing level. Do not advance the jacking screw shoulder past the surface of the face of the jacking tool.

**Notes**

*It may be necessary to rock the valve handle back and forth slightly to allow the transducer to slip through the valve.*

*Be sure that the connector shaft of the transducer properly seats in the alignment yoke. If necessary, rotate the transducer into alignment by pulling on the body of the cable connector.*

23. When the transducer is home, reinstall the locking rod and lock the padlock. Make certain that the locking rod cannot be removed from the mount.
24. Slowly loosen the jacking screw until the shoulder of the transducer presses tightly against the locking rod.

**Caution**


*Until the transducer is snug against the locking rod, never allow more than 1/16 inch (1.5mm) clearance between the contact point of the jack and the transducer. If the transducer is caught and suddenly breaks free when there is too much clearance, the resulting impact could damage the equipment or cause a safety hazard.*

25. Loosen four bolts (1/2 inch (13mm) heads) and remove the jacking tool from the transducer mount.
26. Install the clamp bar using the same bolts; tighten both bolts.
27. Finger-tighten the clamp screw until it is snug against the recess on the transducer.
28. Tighten the clamp bar jack screw with a 1 inch (25mm) wrench until the transducer bottoms in the mount. Do not over tighten.
29. Connect the E-O connector and screw on the conduit clamp.

**Caution**


*Before leaving the transducer, be certain that the locking rod is fully engaged and padlocked and that the E-O connector is installed as shown in Figure 10-6 on page 19 .*

This completes removal and assembly of the 7600 Series transducer.

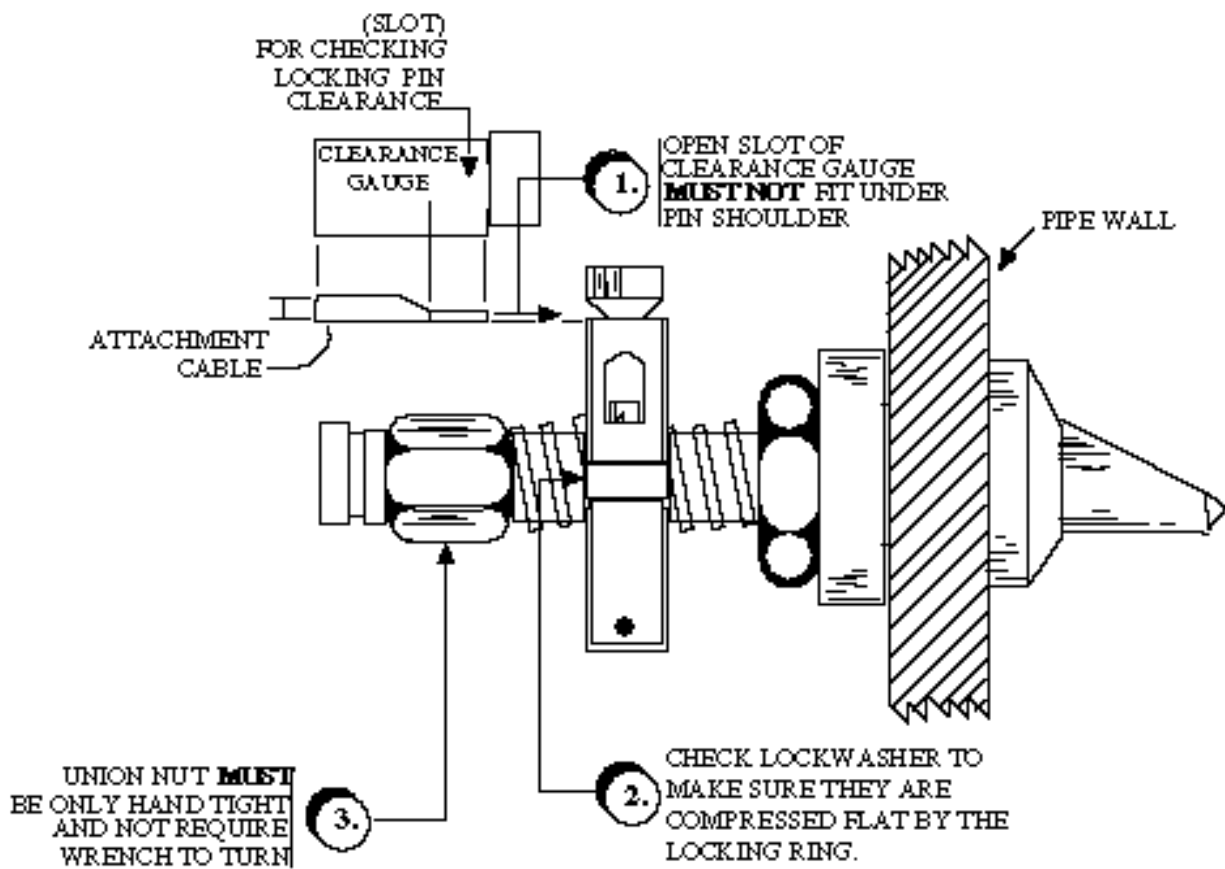


- PERFORM **ALL THREE STEPS BEFORE** REMOVING TRANSDUCER
- PERFORM **ALL THREE STEPS AFTER** REPLACING TRANSDUCER
- IF ALL 3 CRITERIA SHOWN ARE NOT MET, STOP ALL WORK, CLEAR AREA OF PERSONNEL, AND CONTACT ACCUSONIC FOR ADVICE.


Figure 10-1 Use of Transducer Installation Gauge

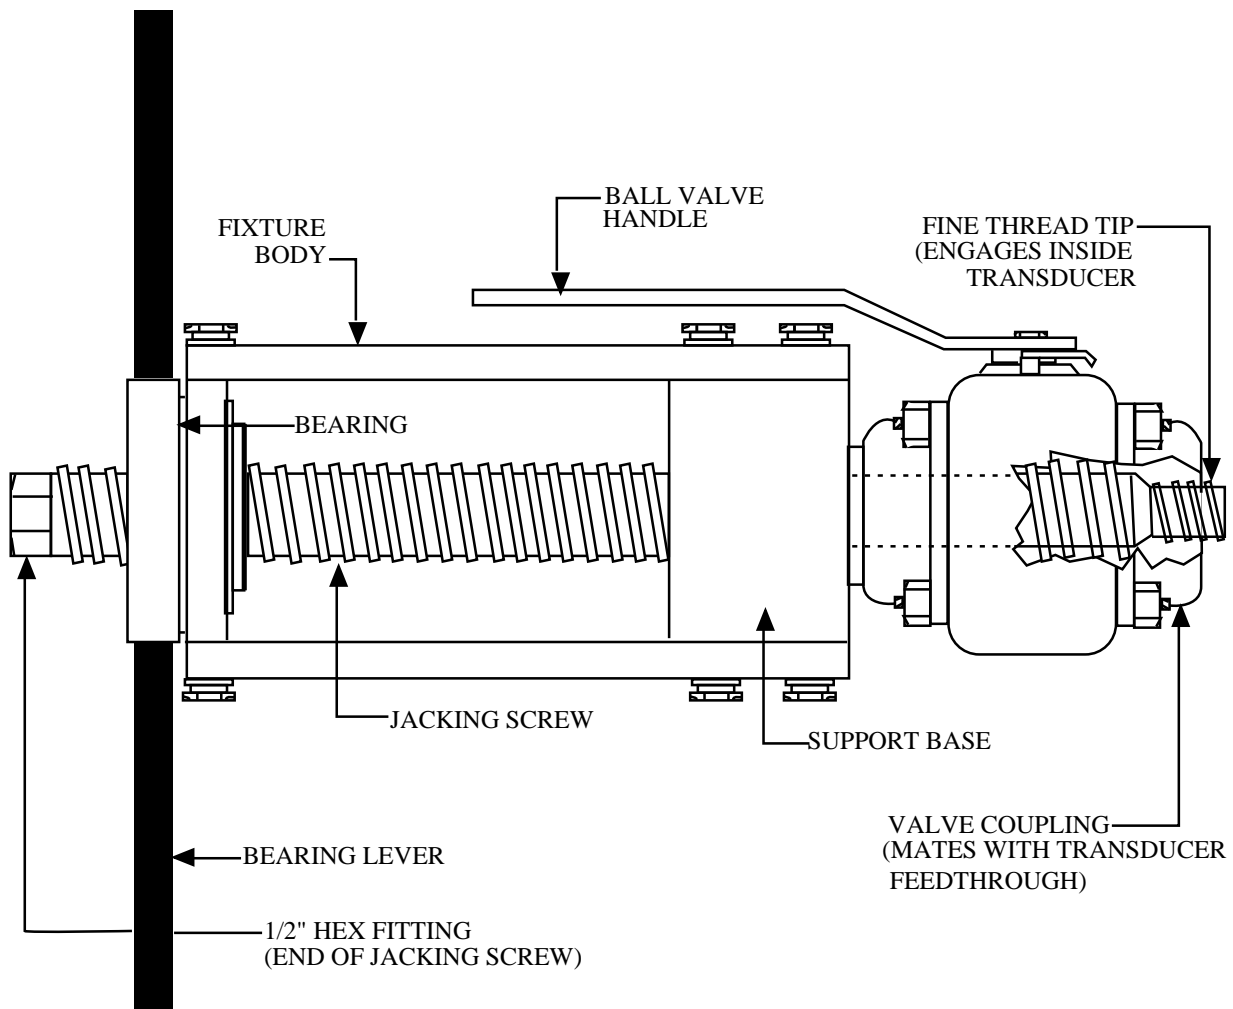


**Figure 10-2 7601 Transducer Extraction Tool (uninstalled)**

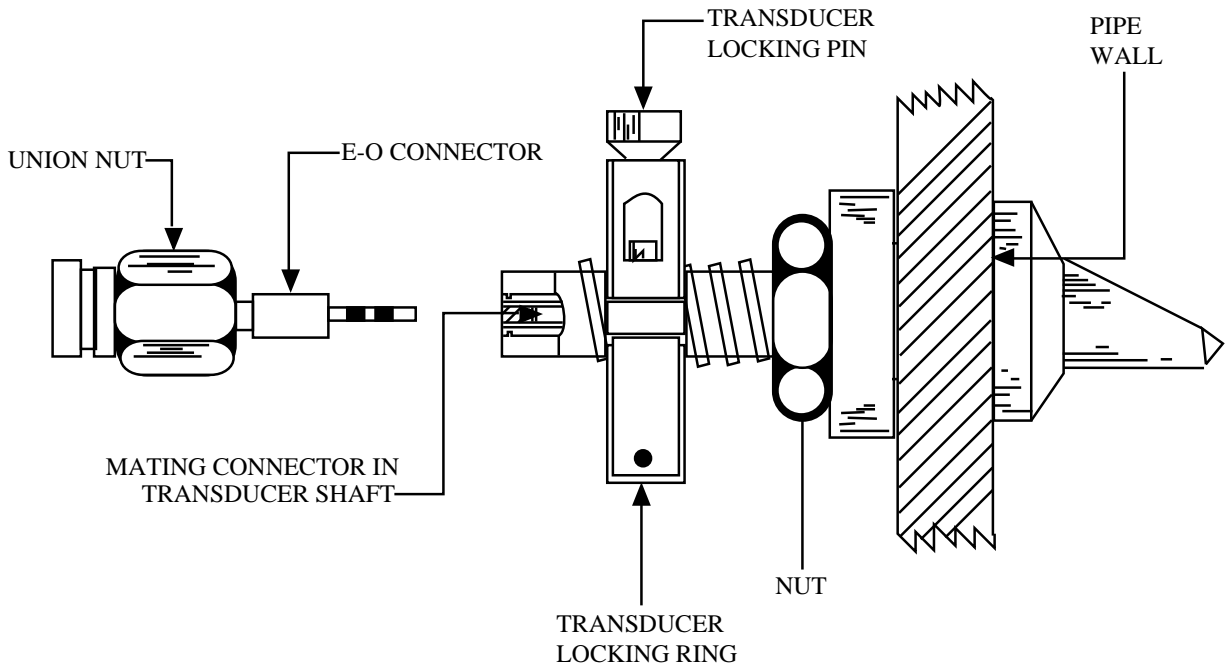

**Figure 10-3 Connection to 7601 Transducer**

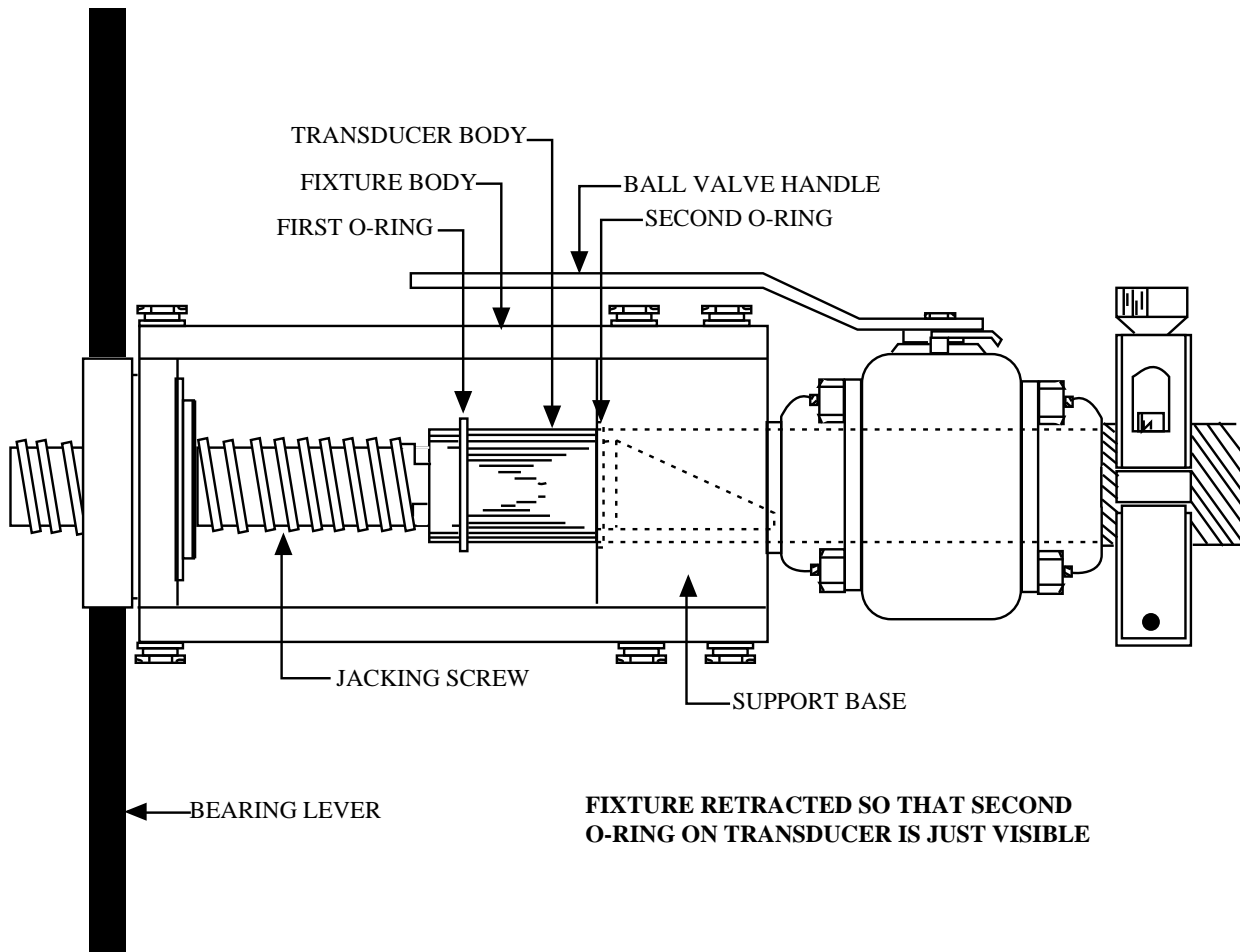

**Figure 10-4 Extracting 7601 Transducer using Withdrawal Tool**

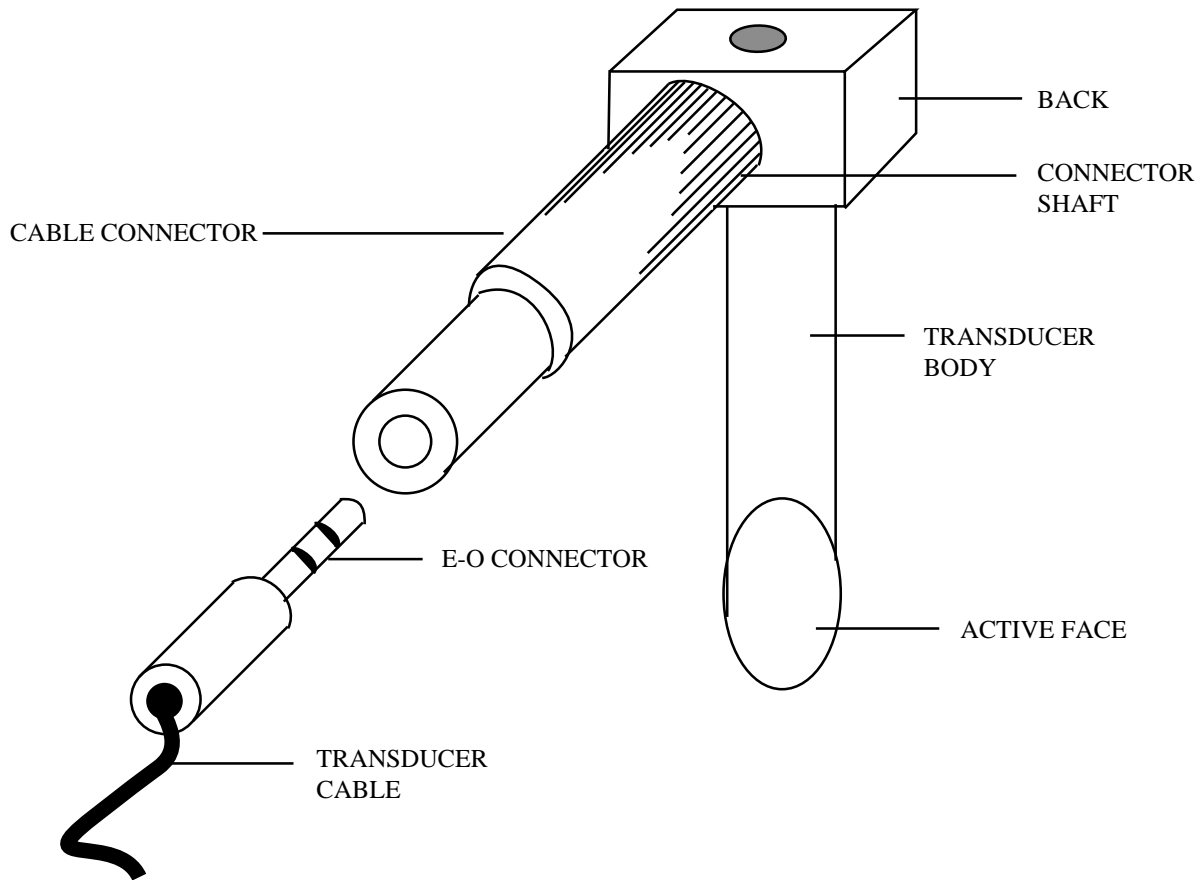

**Figure 10-5 Connection to 7600 Transducer**


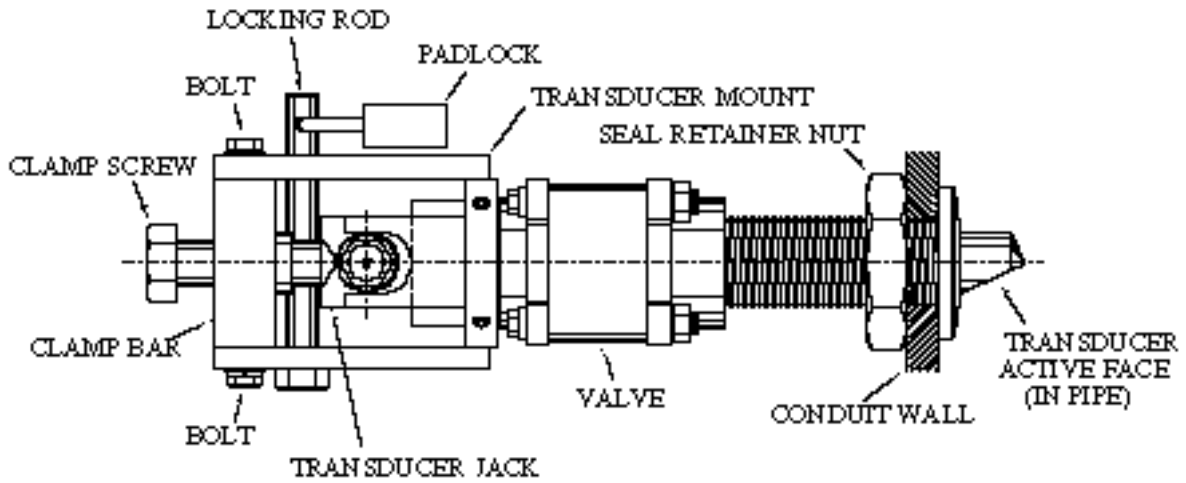


Figure 10-6 7600 Transducer/Valve Assembly

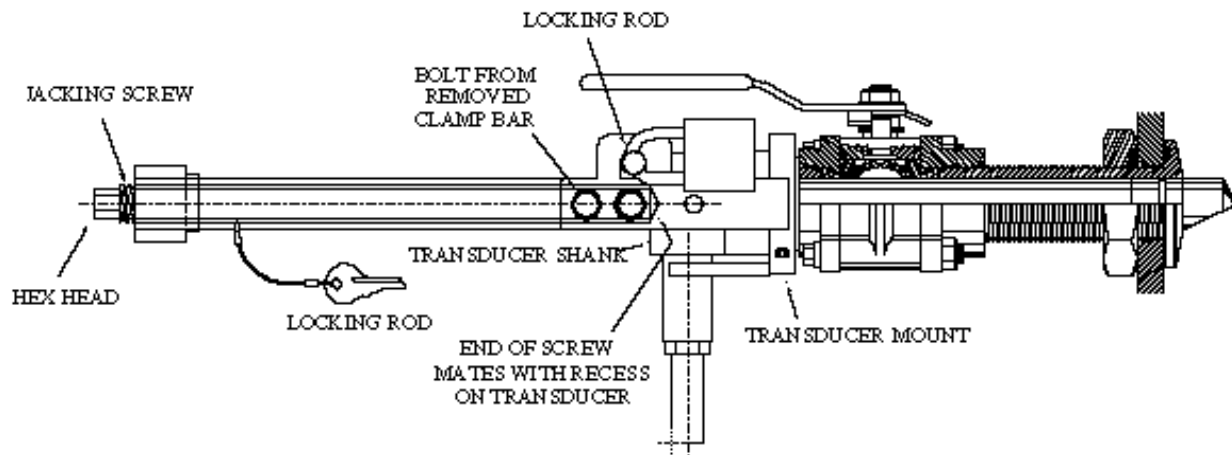

**Figure 10-7 7600 Transducer Assembly with Extraction Tool Installed**

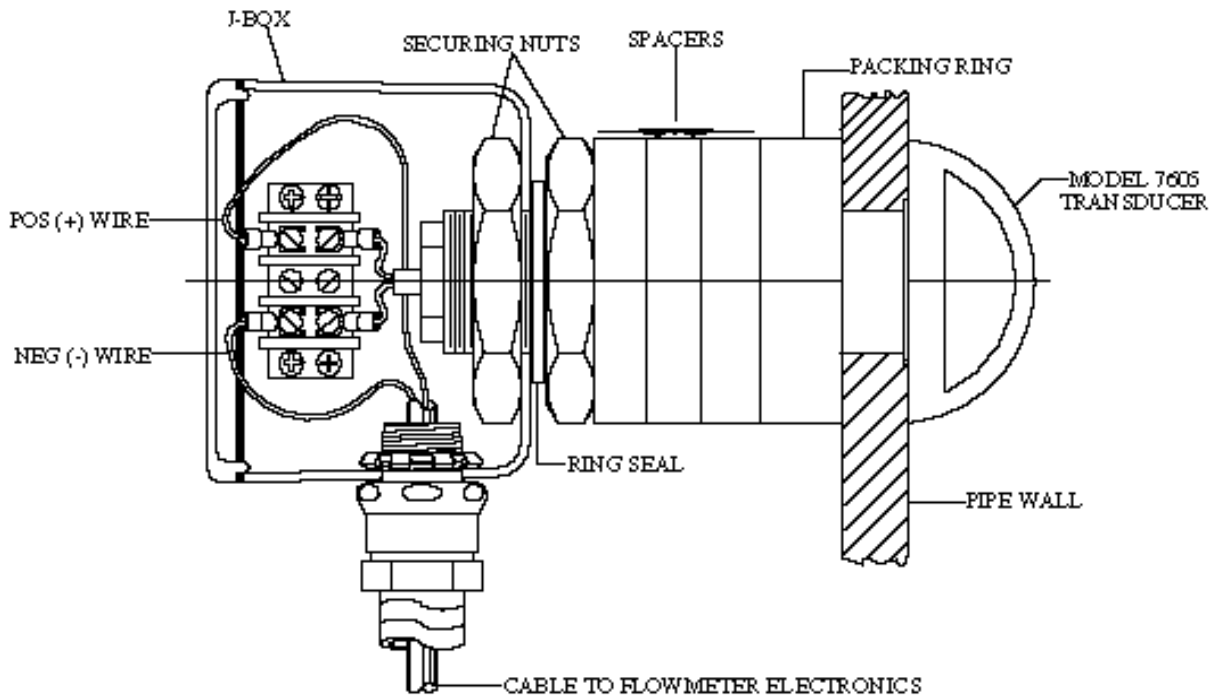


Figure 10-8 Model 7605 Stainless Steel Transducer


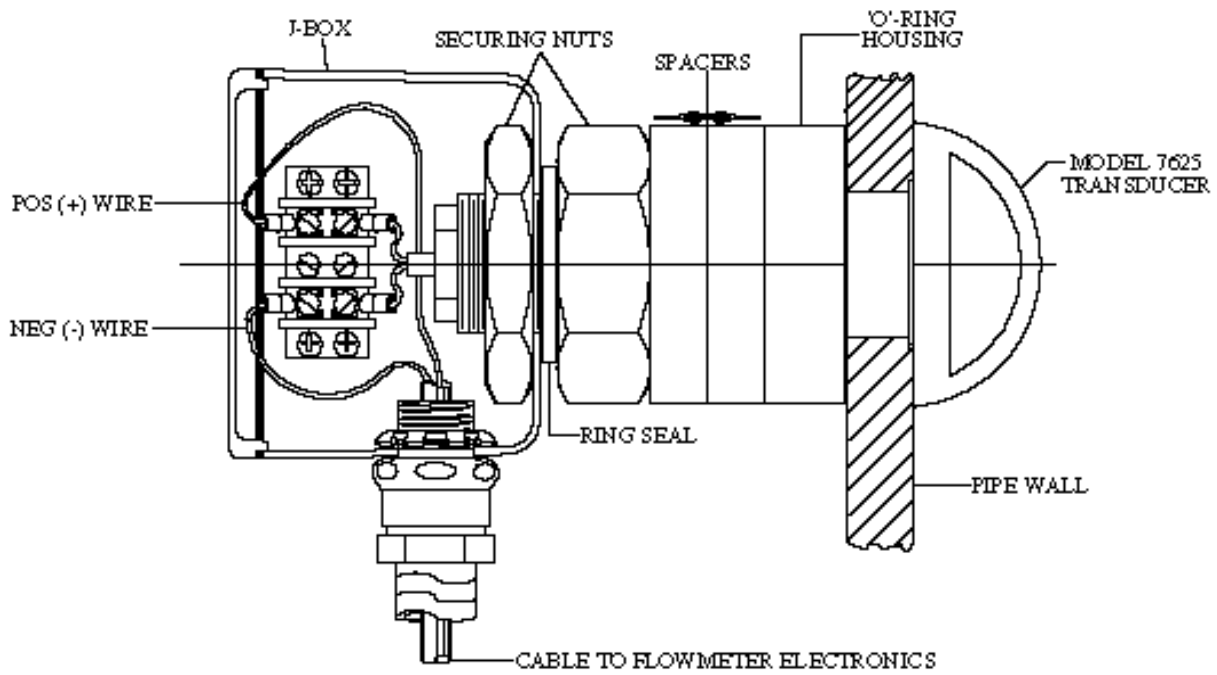


Figure 10-9 Model 7625 PVC Transducer

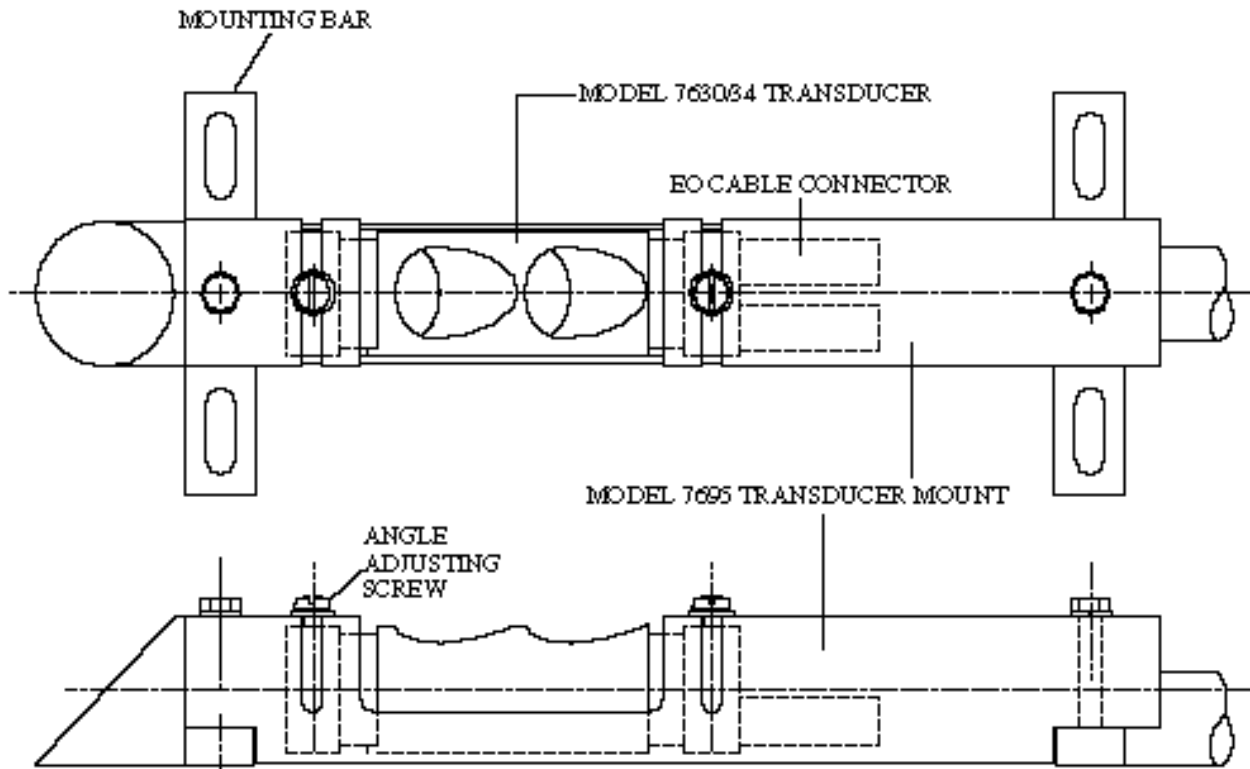

**Figure 10-10 Model 7630/34 Internal Mount Transducer**

---

## INDEX

- ~A~**
- AccuFlow Interface ..... 2-8a, 4-9, Ch-6
- Analog Output
- Connections ..... 4-8
  - Electrical Specification..... 2-2
  - General Specification ..... 2-5
  - Parameters ..... 5-6, 7-7
- ~B~**
- Baud Rate, Hand-held term & RS 232 ..... 2-6
- To change ..... 7-10
- ~C~**
- Cables (transducer) ..... 2-2, 4-4
- Crossed Paths..... 3-1, 3-4
- Clock Setting ..... 7-10
- Compound Mode ..... 3-1 to 3-5
- ~D~**
- Data Logging ..... 2-2, 2-8, 5-10, 6-10, 7-11
- Data Output
- Analog 4-20 mA ..... 2-2, 2-4
  - on Hand-held terminal ..... 5-6
  - LCD ..... 5-11
  - Serial on hand-held terminal port ..... 5-10
  - Special formats on Com 3 port ..... 5-11
- DELT ..... 5-8, 7-12
- Display
- on Hand-held terminal ..... 2-5, 5-8
  - on LCD ..... 5-11
- ~E~**
- Electrical Specifications ..... 2-1
- EMC Conformity ..... 2-2
- Error Messages ..... 7-12, 7-13
- ~F~**
- Fault Messages ..... 7-12, 7-13
- Flow
- Computation ..... 3-1 to 3-6
  - Compound choices ..... 3-2
  - Manning..... 3-2
  - Non surcharged single path ..... 3-2
  - Non surcharged multi path ..... 3-3
  - Surcharged..... 3-4
  - Pipe..... 3-5
- ~G~**
- Gain ..... 5-6, 7-12
- ~H~**
- Hand-held Terminal
- Connections ..... 2-6, 4-8
  - Displays ..... 5-6
  - Specification ..... 2-2
- Heater
- Specification ..... 2-1
  - Connection ..... 4-2
- ~K~**
- Key Functions on Terminal ..... 5-1, 5-2
- ~L~**
- Layer parameters (round pipe) ..... 7-14
- Level Input
- Arbitration ..... 2-5
  - Connection ..... 4-5, 4-6
  - Electrical specification ..... 2-2, 2-5
  - Fault conditions ..... 2-5
  - Parameters ..... 5-5, 7-7
- Logging to Flash..... 2-2, 2-7, 5-10, 6-10, 7-11
- ~M~**
- Menus ..... 5-1
- Manning..... 3-2
- Modem for AccuFlow remote access ..... 2-8, 4-9
- Multi-path integration..... 3-1 to 3-5
- ~P~**
- Parameters
- Descriptions..... 7-1 to 7-14
  - Entry ..... 5-5
  - List Typical..... 5-6
  - Transmit to PC..... 5-2
- Paths
- Allocation to sections ..... 1-2, 3-1, 7-3
  - Connections ..... 4-5
  - Crossed ..... 3-1, 3-4
  - Elevation order ..... 3-1, 7-6
  - Length range..... 2-2, 7-6
  - Parameter..... 5-5, 7-6
  - Substitution (pipe only) ..... 3-5
  - Variables..... 7-12
- PC
- In place of terminal..... 2-7, 4-9
  - With AccuFlow ..... 2-8, 4-9, Ch 6
- Power
- Connection ..... 4-2
  - Specification ..... 2-1
  - Outlet ..... 4-2
- Pump / Turbine systems ..... 7-14

**~R~**

Relays

- Connection.....4-8, Cust. Spec. Drawings
- Electrical specification ..... 2-2
- Functions & Logic ..... 2-6
- Section “Good”..... 7-14
- Parameters ..... 5-5, 7-9
- Remote Access via Modem ..... 2-8, 4-9
- Retrieve Logged Data ..... 6-11
- RS232 Serial Data Outputs ..... 5-10
- Round pipe (Layer parameters) ..... 7-14

**~S~**

- Section “Good” relay ..... 7-14
- Section Parameters..... 5-5, 7-3
- Serial data outputs ..... 5-8
- Status Indication ..... 7-12, 7-13
- System Parameters ..... 5-6, 7-1
- Statistics..... 5-6, 7-10

**~T~**

Temperature of Water

- calculation..... 3-6
- correction factor..... 7-4
- display ..... 7-13

TENV ..... 5-8, 7-12

TRAV ..... 5-8, 7-12

Transducers

- Cables ..... 2-2, 4-4
- Connections ..... 4-5
- Specification ..... 2-1

**~V~**


Variables, Definitions ..... 7-12

Volume


- Calculations ..... 3-5
- Display..... 5-7, 5-9
- Relay pulses logic ..... 3-5
- Resetting initial value ..... 7-3

# Appendix B – Index Testing Charts


## B.1 Turbine Efficiency vs. Turbine Power

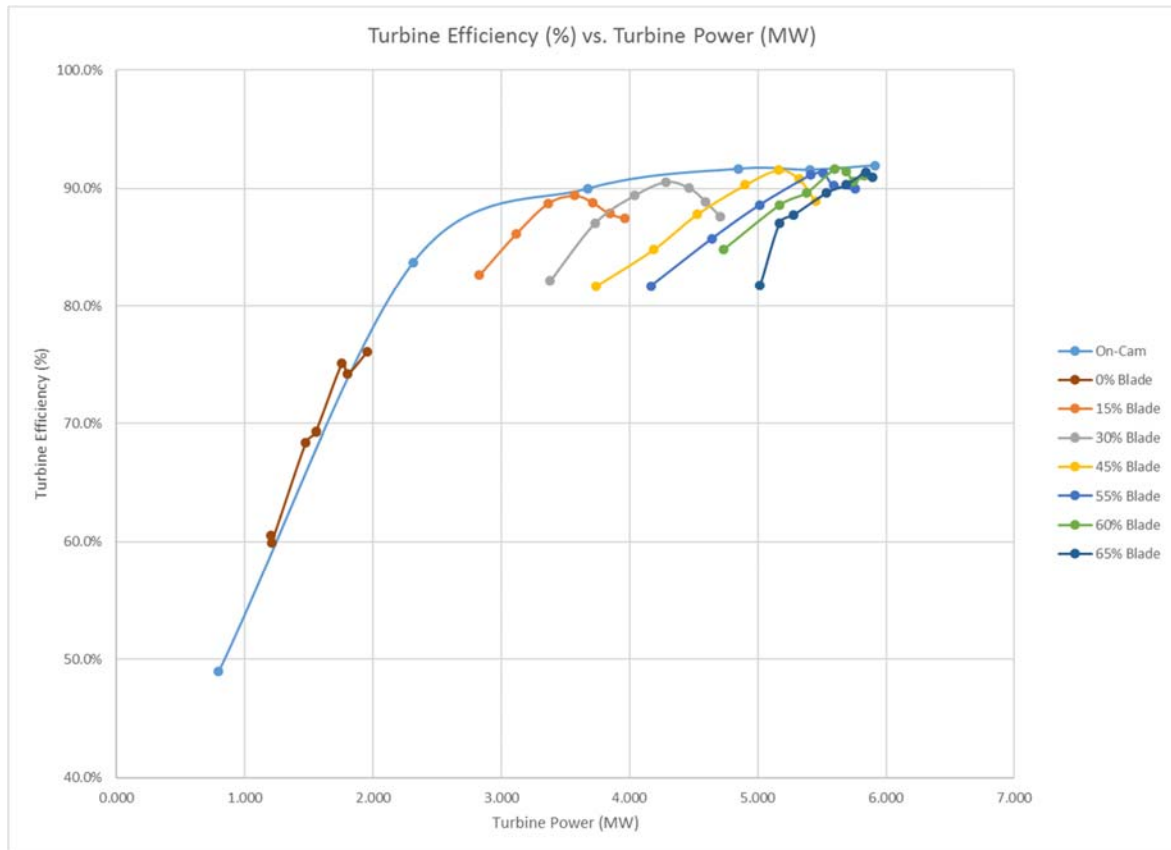

## B.2 Turbine Power vs. Flow

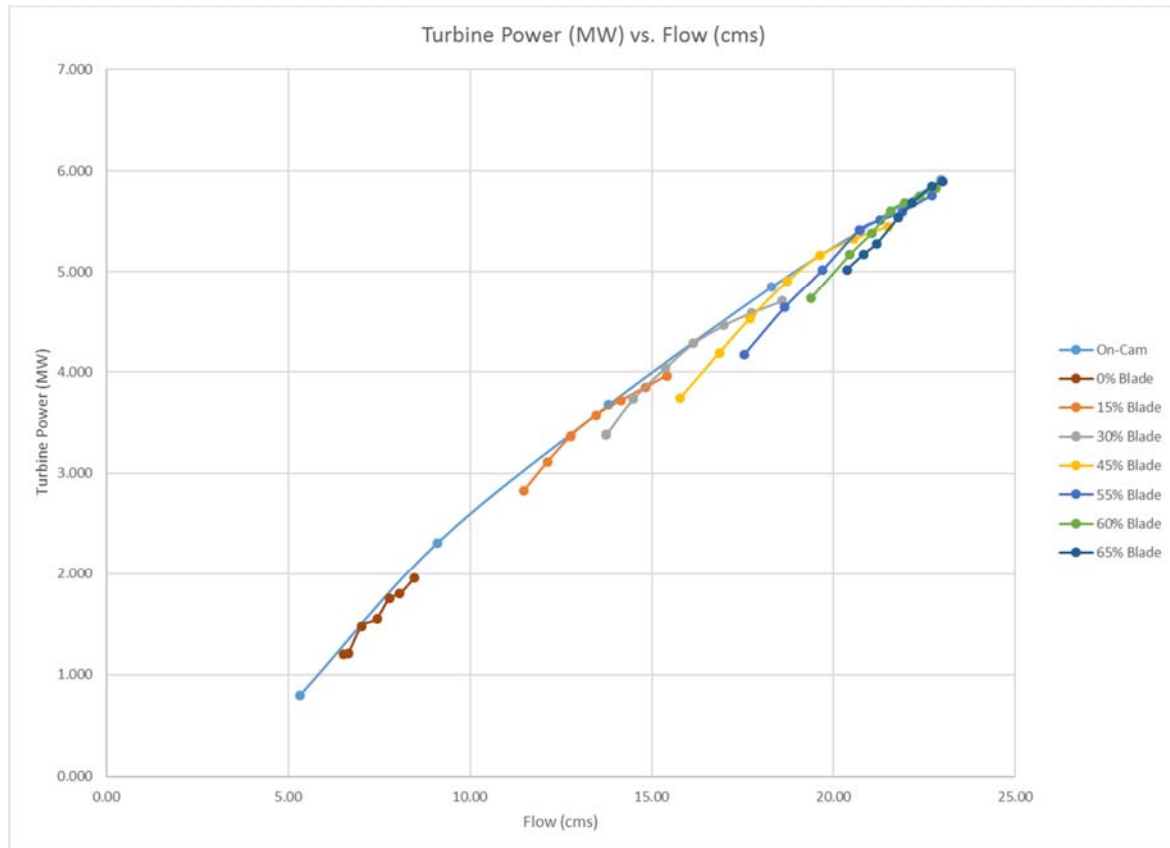

**B.3 Turbine Power vs. Wicket Gate Opening**

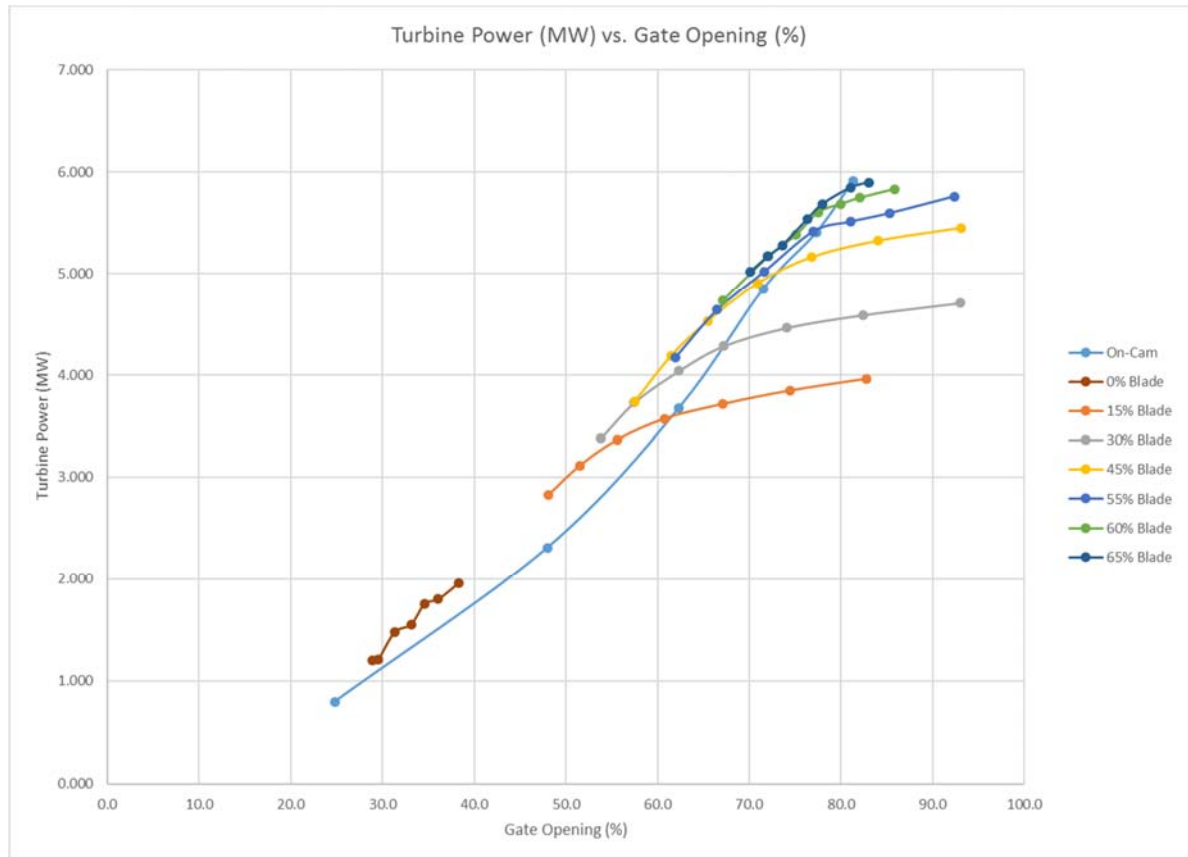

## B.4 Unit Flow vs. Wicket Gate Opening

